

Conents

1 Diagnostic Message Descriptions	1-1
1.1 Overview of the diagnostic message descriptions	1-1
Diagnostic Message Types	1-1
Construction of a diagnostic message	1-1
2 Safety Instructions for Electrical Drives	2-1
2.1 Introduction	2-1
2.2 Hazards by improper use	2-2
2.3 General	2-3
2.4 Protection against contact with electrical parts and not grounded enclosures	2-4
2.5 Protection by protective low voltage (PELV) against electrical shock	2-6
2.6 Protection against dangerous movements.....	2-6
2.7 Protection against magnetic and electromagnetic fields during operations and mounting	2-8
2.8 Protection against contact with hot parts	2-8
2.9 Protection during handling and installation	2-9
2.10 Battery safety	2-10
3 Description of diagnostic letters F... and E...	3-1
3.1 Error diagnostic messages F...	3-1
3.2 F208 UL The motor type has changed.	3-2
F209 PL Load parameter default values	3-2
F218 Amplifier overtemp. shutdown.....	3-2
F219 Motor overtemp. shutdown	3-3
F221 Motor temp. surveillance defective	3-3
F226 Undervoltage in power section.....	3-3
F228 Excessive deviation.....	3-4
F229 Encoder 1 failure: quadrant error	3-4
F233 External power supply error	3-4
F234 Emergency-Stop	3-5
F236 Excessive position feedback difference	3-5
F237 Excessive position command difference.....	3-6
F242 Encoder 2 failure: signal too small	3-6
F245 Encoder 2 failure: quadrant error	3-7
F248 Low battery voltage	3-8
F253 Incr. encoder emulator: pulse frequency too high.....	3-8
F254 Incr. encoder emulator: hardware fault	3-9
F255 External power supply DAE 02 error	3-9
F267 Erroneous internal hardware synchronization.....	3-9
F268 Brake fault.....	3-9
F276 Absolute encoder out of allowed window	3-10
F277 Current measurement trim wrong	3-10
F316 Softstart fault power supply unit.....	3-10
F318 Heatsink overtemp. fault power supply unit	3-11

F320 Bleeder overload	3-11
F360 Overcurrent power supply unit	3-11
F369 +24V/+15V/+5V fault power supply unit	3-11
F380 Short to ground power supply unit	3-12
F381 Mains failure	3-12
F382 Mains phase loss fault	3-12
F383 Line voltage fault	3-12
F384 Connection error at power supply unit	3-12
F385 Line frequency fault	3-13
F394 Checksum error power supply unit	3-13
F434 Emergency-Stop	3-13
F629 Positive travel limit exceeded	3-13
F630 Negative travel limit exceeded	3-14
F634 Emergency-Stop	3-14
F643 Positive travel limit switch detected	3-14
F644 Negative travel limit switch detected	3-15
F822 Encoder 1 failure: signal too small	3-15
F827 Drive interlock while drive activated	3-16
F860 Overcurrent: short in power stage	3-16
F861 Overcurrent: short to ground	3-17
F869 +/-15Volt DC error	3-17
F870 +24Volt DC error	3-17
F871 +10Volt DC error	3-18
F878 Velocity loop error	3-18
F879 Velocity limit S-0-0091 exceeded	3-18
3.3 Warning Diagnostic Messages	3-19
E201 No mains connected	3-19
E202 Not ready for power on	3-19
E219 Warning Drive temp. surveillance defective	3-19
E221 Warning Motor temp. surveillance defective	3-20
E225 Motor overload	3-20
E226 Undervoltage in power section	3-20
E231 No jogging direction selected	3-21
E247 Interpolation velocity = 0	3-21
E248 Interpolation acceleration = 0	3-21
E249 Positioning velocity S-0-0259 > S-0-0091	3-22
E250 Drive overtemp. prewarning	3-22
E251 Motor overtemp. prewarning	3-22
E253 Target position out of travel range	3-23
E254 Not homed	3-23
E255 Feedrate-override S-0-0108 = 0	3-24
E257 Continuous current limit active	3-24
E258 Selected process block is not programmed	3-25
E259 Command velocity limit active	3-25
E261 Continuous current limit prewarning	3-25
E263 Velocity command value > limit S-0-0091	3-25
E264 Target position out of num. range	3-26

E324 Option module error power supply unit	3-26
E325 Recovery overload power supply unit	3-26
E326 Bus power overload	3-26
E350 Heat sink overtemp. warning power supply unit	3-26
E352 Bleeder overload warning power supply unit	3-27
E353 Diagnostic message power supply erroneous	3-27
E387 Control voltage supply fault power supply unit	3-27
E825 Overvoltage in power stage	3-27
E826 Undervoltage in power section	3-28
E829 Positive position limit exceeded	3-28
E830 Negative position limit exceeded	3-28
E831 Position limit reached during jog	3-29
E834 Emergency-Stop	3-29
E843 Positive limit switch activated	3-29
E844 Negative limit switch activated	3-29

4 Description of Diagnostic Letters C..., D... and A... 4-1

4.1 Command Diagnostic Messages C... and D	4-1
C100 Communication phase 3 transition check	4-1
C116 DAE not plugged	4-1
C200 Communication phase 4 transition check	4-1
C201 Invalid parameter(s) (->S-0-0022)	4-1
C202 Parameter limit error (->S-0-0022)	4-2
C203 Parameter calculation error (->S-0-0022)	4-2
C204 Motor type P-0-4014 incorrect	4-2
C210 Feedback 2 required (->S-0-0022)	4-2
C211 Invalid feedback data (->S-0-0022)	4-3
C212 Invalid amplifier data (->S-0-0022)	4-3
C213 Position data scaling error	4-3
C214 Velocity data scaling error	4-4
C215 Acceleration data scaling error	4-4
C216 Torque/force data scaling error	4-4
C217 Feedback1 data reading error	4-5
C218 Feedback 2 data reading error	4-5
C220 Feedback 1 initializing error	4-5
C221 Feedback 2 initializing error	4-6
C223 Input value for max. range too high	4-6
C225 Coprocessor not ready for initialization	4-7
C226 Coprocessor acknowledge failed	4-7
C227 Modulo range error	4-7
C228 Controller type S-0-0140 wrong	4-7
C231 Emulator not loadable	4-7
C232 Encoder 1 interface not present	4-8
C233 Encoder 2 interface not present	4-8
C234 Encoder combination not possible	4-8
C235 Load-side motor encoder with inductance motor only	4-8
C236 Feedback 1 required (P-0-0074)	4-9

C300 Set absolute measuring	4-9
C302 Absolute measuring system not installed	4-9
C400 Command: switch to parameter mode	4-9
C401 Drive active, switching not allowed	4-9
C500 Reset class 1 diagnostic, error reset	4-10
C501 Error delete only in parameter mode	4-10
C600 Drive controlled homing procedure command.....	4-10
C601 Homing only possible with drive enable.....	4-10
C602 Distance home switch - reference mark erroneous.....	4-10
C604 Homing of absolute encoder not possible	4-10
C700 Basic load	4-11
C702 Default parameters not available.....	4-11
C703 Default parameters invalid	4-11
C704 Parameters not copyable.....	4-11
C705 Locked with password	4-11
C800 Default parameter load	4-12
C801 Parameter default value erroneous (-> S-0-0021).....	4-12
C802 Locked with password	4-12
D300 Command adjust commutation.....	4-12
D301 Drive not ready for commutation command	4-13
D400 Positive stop drive procedure command	4-13
D401 ZKL1-Error at command start.....	4-13
D500 Command 'get mark position'	4-13
D501 Incremental encoder required.....	4-13
D600 Cancel reference point procedure command	4-14
D700 Parking axis command	4-14
4.2 Status Diagnostic Messages.....	4-15
A002 Communication phase 2	4-15
A003 Communication phase 3	4-15
A010 Drive HALT	4-15
A011 Drive interlock open	4-16
A012 Control and power sections ready for operation	4-16
A013 Ready for power on.....	4-16
A100 Drive in TORQUE control	4-16
A101 Drive in VELOCITY control	4-16
A102 Position mode with encoder 1.....	4-16
A103 Position mode with encoder 2.....	4-16
A104 Position mode lagless, encoder 1.....	4-16
A105 Position control lagless, feedback 2	4-17
A106 Drive controlled interpolation, encoder 1	4-17
A107 Drive controlled interpolation, encoder 2	4-17
A108 Drive controlled interpolation, lagless, encoder 1	4-17
A109 Drive controlled interpolation, lagless, encoder 2	4-17
A146 Relative drive controlled interpolation, encoder 1	4-18
A147 Relative drive controlled interpolation, encoder 2	4-18
A148 Relative drive contr. interpolation, enc. 1, lagless.....	4-18
A149 Relative drive contr. interpolation, enc. 2, lagless.....	4-19

A206 Process block mode, encoder 1	4-19
A207 Process block mode lagless, encoder 1	4-19
A208 JOG mode positive	4-20
A210 Process block mode, encoder 2	4-20
A211 Process block mode lagless, encoder 2	4-20
A218 JOG mode negative	4-20
A800 Unknown operation mode	4-20
4.3 Diagnostic messages for basic initialization and after fatal System errors	4-21
Diagnostic Message Display: -0	4-21
Diagnostic Message Display: -1	4-21
Diagnostic Message Display: -2	4-21
Diagnostic Message Display: -3	4-21
Diagnostic Message Display: -5	4-21
Diagnostic Message Display: -6	4-22
Diagnostic Message Display: -7	4-22
Diagnostic Message Display: Watchdog ●●	4-22
4.4 Operation Status	4-23
bb	4-23
Ab	4-23
AF	4-23
AS	4-23
AH	4-23
Jb	4-23
JF	4-23
P2	4-23
P3	4-23
PL	4-23
UL	4-23

5 Exchanging Drive Components 5-1

5.1 Identifying the Drive Components	5-1
Power Supply Module	5-1
Drive Controllers	5-1
Motors	5-2
Electrical connections	5-3
5.2 Replacing Drive Components	5-4
Power Supply Module	5-4
Drive Controllers	5-5
Motors	5-6
Electrical Connections	5-7
Plug-in Modules	5-8
Software Module	5-9
5.3 Fault Report	5-11

6 Index 6-1

Customer Service Locations