

Contents

1 Diagnostic Message Descriptions	1-1
1.1 Overview of the diagnostic message descriptions	1-1
Diagnostic Message Types	1-1
Construction of a diagnostic message	1-1
2 Description of diagnostic letters F... and E...	2-1
2.1 Error diagnostic messages F...	2-1
F207 Switching to uninitialized operation mode	2-2
F208 UL The motor type has changed.....	2-2
F209 PL Load parameter default values	2-3
F218 Amplifier overtemp. shutdown.....	2-3
F219 Motor overtemp. shutdown	2-3
F221 Error Motor temp. surveillance defective	2-4
F226 Undervoltage in power section.....	2-4
F228 Excessive deviation.....	2-5
F229 Motor encoder failure: quadrant error	2-5
F233 External power supply error	2-5
F236 Excessive position feedback difference	2-6
F237 Excessive position command difference.....	2-7
F242 External encoder failure: signal too small	2-7
F245 External encoder failure: quadrant error	2-8
F248 Low battery voltage	2-8
F249 Master drive encoder failure: signal too small.....	2-9
F252 Master drive encoder failure: quadrant error.....	2-9
F253 Incr. encoder emulator: pulse frequency too high.....	2-9
F254 Incr. encoder emulator: hardware fault	2-10
F255 External power supply DAE 02 error	2-10
F267 Erroneous internal hardware synchronization.....	2-10
F268 Brake fault.....	2-10
F270 Error power supply home switch	2-11
F271 Error power supply travel limit switch.....	2-11
F272 Error power supply probe input.....	2-12
F273 Error power supply E-Stop	2-12
F276 Absolute encoder out of allowed window	2-12
F280 Short circuit to earth	2-13
F316 Softstart fault power supply unit.....	2-13
F318 Heatsink overtemp. fault power supply unit	2-13
F320 Bleeder overload	2-13
F360 Overcurrent power supply unit	2-14

F369 +24V/+15V/+5V fault power supply unit.....	2-14
F380 Short to ground power supply unit	2-14
F381 Mains failure.....	2-14
F382 Mains phase loss fault	2-15
F383 Line voltage fault.....	2-15
F384 Connection error at power supply unit	2-15
F385 Line frequency fault.....	2-15
F394 Checksum error power supply unit	2-15
F401 Double MST error shutdown	2-15
F402 Double MDT error shutdown.....	2-16
F403 Invalid communication phase shutdown	2-16
F404 Error during phase progression	2-16
F405 Error during phase regression	2-16
F406 Phase switching without ready signal	2-17
F434 Emergency-Stop	2-17
F629 Positive travel limit exceeded.....	2-17
F630 Negative travel limit exceeded	2-18
F634 Emergency-Stop	2-18
F643 Positive travel limit switch detected.....	2-18
F644 Negative travel limit switch detected	2-19
F822 Motor encoder failure: signal too small	2-19
F827 Drive interlock while drive activated	2-20
F860 Overcurrent: short in power stage.....	2-21
F861 Overcurrent: short to ground.....	2-21
F869 +/-15Volt DC error.....	2-21
F870 +24Volt DC error	2-21
F871 +10Volt DC error	2-22
F878 Velocity loop error	2-22
F879 Velocity limit S-0-0091 exceeded.....	2-22
2.2 Warning diagnostic messages.....	2-23
E219 Warning Drive temp. surveillance defective	2-23
E221 Warning Motor temp. surveillance defective.....	2-23
E225 Motor overload	2-23
E226 Undervoltage in power section.....	2-24
E247 Interpolation velocity = 0	2-24
E248 Interpolation acceleration = 0.....	2-24
E249 Positioning velocity S-0-0259 > S-0-0091.....	2-24
E250 Drive overtemp. prewarning.....	2-25
E251 Motor overtemp. prewarning.....	2-25
E253 Target position out of travel zone.....	2-26
E255 Feedrate-override S-0-0108 = 0	2-26
E257 Continuous current limit active.....	2-26
E259 Command velocity limit active	2-27
E261 Continuous current limit prewarning	2-27
E263 Velocity command value > limit S-0-0091.....	2-27
E324 Option module error power supply unit.....	2-28
E325 Recovery overload power supply unit	2-28

E326 Bus power overload	2-28
E350 Heat sink overtemp. warning power supply unit	2-28
E352 Bleeder overload warning power supply unit	2-28
E353 Diagnostic message power supply erroneous	2-29
E387 Control voltage supply fault power supply unit	2-29
E410 Slave not scanned or adress 0	2-29
E825 Overvoltage in power stage	2-29
E826 Undervoltage in power section	2-30
E829 Positive position limit exceeded	2-30
E830 Negative position limit exceeded	2-30
E834 Emergency-Stop	2-31
E843 Positive limit switch activated	2-31
E844 Negative limit switch activated	2-31

3 Description of Diagnostic Letters C..., D... and A... 3-1

3.1 Command Diagnostic Messages	3-1
C100 Communication phase 3 transition check	3-2
C101 Invalid communication parameter (S-0-0021)	3-2
C104 Config. IDN for MDT not configurable	3-2
C105 Configured length > max. length for MDT	3-2
C106 Config. IDN for AT not configurable	3-2
C107 Configured length > max. length for AT	3-3
C108 Time slot parameter > Sercos cycle time	3-3
C109 Position of data record in MDT (S-0-0009) even	3-3
C110 Length of MDT (S-0-0010) odd	3-3
C111 ID9 + Record length - 1 > length MDT (S-0-0010)	3-4
C112 TNcyc (S-0-0001) or TScyc (S-0-0002) error	3-4
C113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error	3-4
C114 T4 > TScyc (S-0-0002) - T4min (S-0-0005)	3-4
C115 T2 too small	3-5
C200 Communication phase 4 transition check	3-5
C201 Invalid parameter(s) (->S-0-0022)	3-5
C202 Parameter limit error (->S-0-0022)	3-5
C203 Parameter calculation error (->S-0-0022)	3-5
C204 Motor type P-0-4014 incorrect	3-6
C210 External feedback required (->S-0-0022)	3-6
C211 Invalid feedback data (->S-0-0022)	3-6
C212 Invalid amplifier data (->S-0-0022)	3-7
C213 Position data scaling error	3-7
C214 Velocity data scaling error	3-7
C215 Acceleration data scaling error	3-8
C216 Torque/force data scaling error	3-8
C217 Motor feedback data reading error	3-9
C218 External feedback data reading error	3-9
C220 Motor feedback initializing error	3-9
C221 Ext. feedback initializing error	3-10
C223 Input value for max. range too high	3-10

C225 Coprocessor not ready for initialization.....	3-10
C226 Coprocessor acknowledge failed.....	3-11
C227 Modulo range error	3-11
C228 Controller type S-0-0140 wrong.....	3-11
C231 Emulator not loadable.....	3-11
C232 Motor encoder interface not present.....	3-12
C233 External encoder interface not present.....	3-12
C234 Encoder combination not possible.....	3-12
C235 Load-side motor encoder with inductance motor only	3-12
C236 Motor feedback required (P-0-0074)	3-12
C300 Set absolute measuring	3-13
C302 Absolute measuring system not installed	3-13
C400 Command: switch to parameter mode	3-13
C401 Drive active, switching not allowed	3-13
C402 Only allowed without master	3-13
C500 Reset class 1 diagnostic, error reset	3-14
C501 Error delet only in parameter mode	3-14
C600 Drive controlled homing procedure command.....	3-14
C601 Homing only possible with drive enable.....	3-14
C602 Distance home switch - reference mark erroneous.....	3-14
C604 Homing of absolute encoder not possible	3-15
C700 Basic load	3-15
C701 Basic load not possible if drive is enabled	3-15
C702 Default parameters not available.....	3-15
C703 Default parameters invalid	3-15
C704 Parameters not copyable.....	3-16
C705 Locked with password	3-16
C800 Default parameter load	3-16
C801 Parameter default value erroneous (-> S-0-0021).....	3-16
C802 Locked with password	3-16
D300 Command adjust commutation.....	3-16
D301 Drive not ready for commutation command	3-17
D500 Command 'get mark position'	3-17
D501 Incremental encoder required.....	3-17
D600 Cancel reference point procedure command	3-17
D700 Parking axis command	3-18
D800 Command measuring wheel operation mode.....	3-18
D801 Measuring wheel operation not possible	3-18
D802 Operation mode cancelled.....	3-18
3.2 Status diagnostic messages	3-19
A000 Communication phase 0	3-19
A001 Communication phase 1	3-19
A002 Communication phase 2	3-19
A003 Communication phase 3	3-20
A010 Drive HALT	3-20
A011 Drive interlock open	3-20
A012 Control and power sections ready for operation	3-20

A013 Ready for power on.....	3-20
A100 Drive in TORQUE control	3-20
A101 Drive in VELOCITY control	3-21
A102 Position mode with encoder 1.....	3-21
A103 Position mode with encoder 2.....	3-21
A104 Position mode lagless, encoder 1.....	3-21
A105 Position control lagless, feedback 2	3-21
A106 Drive controlled interpolation, encoder 1	3-21
A107 Drive controlled interpolation, encoder 2	3-22
A108 Drive controlled interpolation, lagless, encoder 1	3-22
A109 Drive controlled interpolation, lagless, encoder 2	3-22
A110 Velocity Synchronization, virtuell Lead drive	3-22
A112 Phase synchronization, encoder 1, virtual master drive	3-22
A113 Phase synchronization, encoder 2, virtual master drive	3-23
A116 Phase synchr. lagless, encoder 1, virtual master drive	3-23
A117 Phase synchr. lagless, encoder 2, virtual master drive	3-23
A120 Pattern control, encoder 1, virtual master drive	3-23
A121 Pattern control, encoder 2, virtual master drive	3-24
A124 Pattern control lagless, enc. 1, virtual master drive	3-24
A125 Pattern control lagless, enc. 2, virtual master drive	3-24
A128 Cam shaft, encoder 1, virtual master drive	3-24
A129 Cam shaft, encoder 2, virtual master drive	3-25
A132 Cam shaft, lagless, encoder 1, virt. master drive	3-25
A133 Cam shaft, lagless, encoder 2, virt. master drive	3-25
A146 Relative drive controlled interpolation, encoder 1	3-25
A147 Relative drive controlled interpolation, encoder 2	3-26
A148 Relative drive contr. interpolation, enc. 1, lagless.....	3-26
A149 Relative drive contr. interpolation, enc. 2, lagless.....	3-26
A800 Unknown operation mode.....	3-27
3.3 Diagnostic messages for basic initialization and after fatal System errors	3-28
Diagnostic Message Display: -0	3-28
Diagnostic Message Display: -1	3-28
Diagnostic Message Display: -2	3-28
Diagnostic Message Display: -3	3-28
Diagnostic Message Display: -5	3-28
Diagnostic Message Display: -6	3-29
Diagnostic Message Display: Watchdog ●●	3-29
3.4 Operation Status	3-30
bb	3-30
Ab.....	3-30
AF.....	3-30
AS.....	3-30
AH	3-30
P0.....	3-30
P1.....	3-31
P2.....	3-31
P3.....	3-31