

Contents

1 Diagnostic Message Description	1-1
1.1 Overview of the Diagnostic Message Descriptions	1-1
Diagnostic Message Types	1-1
Construction of a diagnostic message	1-1
2 Error Diagnostic Messages	2-1
UL Motor Type not Reported	2-1
PL Load Parameter Default Value	2-1
F207 Switching to an Uninitialized Operating Mode	2-2
F218 Heatsink Overtemperature Shutdown	2-2
F219 Motor Overtemperature Shutdown	2-2
F220 Bleeder Overtemperature Shutdown	2-3
F226 Undervoltage Error	2-3
F228 Excessive Deviation	2-4
F229 Motor Encoder Error: Quadrant Error	2-4
F248 Low Battery Voltage	2-5
F262 External Short at Status Outputs	2-5
F276 Absolute Encoder Error	2-6
F629 Positive Travel Limit Value is Exceeded	2-6
F630 Negative Travel Limit Value is Exceeded	2-7
F643 Positive Travel Limit Switch Detected	2-7
F644 Negative Travel Limit Switch Detected	2-8
F822 Motor Encoder Failure: Signal too Small	2-8
F860 Overcurrent: Short in Powerstage	2-9
F870 +24 V Error	2-9
F873 Power Supply Driver Stage Fault	2-10
F878 Velocity Loop Error	2-10
F879 Velocity Limit Value Exceeded (S-0-0092)	2-11
F895 4 kHz Signal Error	2-11
3 Warning Diagnostic Messages	3-1
E209 Parameter storage activ	3-1
E248 Interpolation acceleration equals 0	3-1
E249 Positioning vel. (S-0-0259) greater S-0-0091	3-1
E250 Heatsink Overtemperature Warning	3-2
E251 Motor Overtemperature Warning	3-2
E252 Bleeder Overtemperature Warning	3-3
E253 Target Position Out of Range	3-3
E254 Not Homed	3-4

E255 Feedrate-Override(S-0-0108) = 0	3-4
E256 Torque Limit = 0	3-4
E257 Continuous Current Limiting Active	3-5
E258 Selected Process Block is not Programmed	3-5
E259 Command Velocity Limit Active	3-5
E260 Current limitation active!	3-6
E264 Target Position Out of Range	3-6
E825 Overvoltage Error	3-6
E829 Positive Position Limit Value Exceeded	3-7
E830 Negative Position Limit Value Exceeded	3-7
E831 Jog Position Limit Value Exceeded	3-8
E843 Positive Travel Zone Limit Switch Activated	3-8
E844 Negative Travel Zone Limit Switch Activated	3-8

4 Command Diagnostic Messages

4-1

C100 Communication Phase 3 Transition Check	4-1
C101 Invalid Communication Parameters (S-0-0021)	4-1
C102 Limit Error Communication Parameter (S-0-0021)	4-1
C200 Communication Phase 4 Transition Check	4-2
C201 Invalid Parameter Block (-> S-0-0022)	4-2
C202 Limit Error Parameter (-> S-0-0022)	4-2
C203 Parameter Calculation Error (-> S-0-0022)	4-2
C207 Load Error LCA	4-2
C208 Invalid SSI Parameter (-> S-0-0022)	4-3
C211 Invalid Feedback Data (-> S-0-0022)	4-3
C212 Invalid Amplifier Data (-> S-0-0022)	4-3
C213 Position Data Scaling Error	4-4
C214 Velocity Data Scaling Error	4-4
C215 Acceleration Data Scaling Error	4-5
C216 Torque/Force Data Scaling Error	4-5
C217 Motor Feedback Data Reading Error	4-6
C220 Motor Feedback Initializing Error	4-6
C227 Modulo Range Error	4-6
C300 Command: Set Emulation - Absolute Value	4-7
C300 Set Absolute Measuring	4-7
C301 Setting Absolute Measuring not Allowed, Drive Enabled	4-7
C302 Absolute Measuring System not Installed	4-7
C400 Command: Switch To Parameter Mode	4-8
C401 Drive Active, Switch Not Allowed	4-8
C500 Reset Class 1 Diagnostic	4-8
C600 Drive Controlled Homing Procedure Command	4-8
C601 Homing Not Possible If Drive Is Not Enable	4-8
C602 Distance Homing Switch Reference Mark Erroneous	4-9
C603 Homing Not Permitted in this Operating Mode	4-9
C604 Homing of Absolute Encoder Not Possible	4-9
C605, Homing velocity too great	4-9
C700 Basic Load	4-10

C800 Load Basic Parameters	4-10
D900 D9 Command Automatic Loop Control	4-10
D901 Sart Only With RF	4-11
D902 Motor Feedback Not Valid	4-11
D903 Inertia Detection Failed	4-11
D904 Gain Adjustment Failed	4-12
D905 Wrong Position Range	4-12
D906 Position Range Exceeded	4-13

5 State diagnostic message 5-1

A002 Communication Phase 2	5-1
A003 Communication Phase 3	5-1
A010 Drive Halt	5-1
A012 Control and Power Sections Ready for Operation	5-1
A013 Ready for Power ON	5-1
A100 Drive in Torque Mode	5-1
A101 Drive in Velocity Mode	5-2
A111 Velocity Synchronisation, Real Lead Drive	5-2
A118 Phase Synchr., Lagless, Encoder 1, Real Lead Drive	5-2
A203 Position Mode	5-2
A204 Position Mode / Lagless Positioning	5-2
A206 Position Mode / POSITION Encoder 1	5-2
A207 Position Mode/POSITION Lagless Positioning Encoder 1	5-3
AF Control Drive Enable	5-3
JF Jogging in the Positive Direction	5-3
JB Jogging in the Negative Direction	5-3

6 Exchanging Drive Components 4-1

6.1 Procedure for Exchanging Devices	4-3
Exchange the DKC:	4-3
Motor exchange:	4-4
Cable exchange:	4-5