

Contents

1 Diagnostic Message Descriptions	1-1
1.1 Overview of Diagnostic Message Descriptions	1-1
Diagnostic Message Types.....	1-1
Makeup of a Diagnostic Message.....	1-1
2 Error Diagnostic Messages	2-1
UL Motor Type not registered	2-1
PL Load parameter default values.....	2-1
F207 Switching to uninitialized operation mode.....	2-2
F218 Heatsink Overtemperature Shutdown	2-2
F219 Motor Overtemperature Shutdown	2-3
F220 Bleeder Overtemperature Shutdown	2-3
F226 Undervoltage Error	2-4
F228 Excessive Deviation	2-4
F229 Motor Encoder Failure: Quadrant Error	2-5
F234 Emergency Stop	2-5
F236 Excessive Position Feedback Difference	2-5
F237 Excessive Position Command Difference	2-6
F242 External Encoder Failure: Signals too small.....	2-6
F245 External Encoder Failure: Quadrant Error	2-7
F248 Low Battery Voltage.....	2-7
F267 Erroneous Internal Hardware Synchronization.....	2-8
F276 Absolute encoder error > P-0-0097	2-8
F401 Double MST Error Shutdown.....	2-9
F402 Double MDT Error Shutdown	2-9
F403 Invalid Communication Phase Shutdown	2-9
F404 Error during Phase Progression	2-10
F405 Error during Phase Regression	2-10
F406 Phase Switching Without Ready Signal	2-10
F629 Positive Travel Limit Value is Exceeded.....	2-10
F630 Negative Travel Limit Value is Exceeded	2-11
F643 Positive Travel Limit Switch Detected	2-12
F644 Negative Travel Limit Switch Detected.....	2-12
F822 Motor Encoder Failure: Signals too Small	2-13
F860 Overcurrent: Short in Power Stage.....	2-13
F870 + 24 Volt Error	2-13
F873 Power supply drive stage fault.....	2-14
F878 Velocity Loop Error	2-14

F879, Crossing Velocity Limit (S-0-0091) Value.....	2-15
F895 4 kHz Fault	2-15

3 Warning Diagnostic Messages 3-1

E249 Positioning vel. (S-0-0259) greater S-0-0091.....	3-1
E250 Drive Overtemperature Warning	3-1
E251 Motor Overtemperature Warning	3-1
E252 Bleeder Overtemperature Warning	3-2
E253 Target position out of travel zone.....	3-2
E254 Not Homed	3-2
E255 Feedrate Override(S-0-0108) = 0.....	3-3
E256 Torque Limit = 0	3-3
E257 Continuous Current Limiting Active.....	3-3
E259 Command velocity limitation active	3-4
E410 Slave not scanned or address 0.....	3-4
E825 Overvoltage in the Power Stage.....	3-4
E829 Positive Position Limit Value Exceeded	3-5
E830 Negative Position Limit Value Exceeded.....	3-5
E843 Positive Travel Zone Limit Switch Activated.....	3-5
E844 Negative Travel Zone Limit Switch Activated.....	3-6

4 Command Diagnostic Messages 4-1

C100 Communication phase 3 transition check	4-1
C101 Invalid Communication Parameter (S-0-0021).....	4-1
C102 Limit Error Communication Parameter (S-0-0021)	4-1
C104 Config. IDN for MDT not configurable	4-1
C105 Configured Length > Max. Length for MDT.....	4-2
C106 N for AT not configurable	4-2
C107 Configured Length > Max. Length for AT.....	4-2
C108 Time Slot Parameter > SERCOS Cycle Time.....	4-3
C109 Position of Data Record in MDT (S-0-0009) even.....	4-3
C110 Length of MDT (S-0-0010) odd	4-3
C111 ID9 + Record Length - 1 > Length MDT (S-0-0010).....	4-4
C112 TNcyc (S-0-0001) or TScyc (S-0-0002) Error	4-4
C113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) Error	4-4
C114 T4 > TScyc (S-0-0002) - T4min (S-0-0005)	4-5
C115 T2 too small.....	4-5
C200 Communication phase 4 transition check	4-5
C201 Invalid Parameter (-> S-0-0022)	4-5
C202 Limit Error Parameter (->S-0-0022)	4-6
C203 Parameter Calculation Error (->S-0-0022)	4-6
C207 Load Error LCA	4-6
C210 External Feedback Required (-> S-0-0022)	4-6
C211 Invalid Feedback Data (-> S-0-0022).....	4-7
C212 Invalid amplifier data (-> S-0-0022).....	4-7
C213 Position data scaling error.....	4-7
C214 Velocity data scaling error.....	4-8

C215 Acceleration data scaling error.....	4-8
C216 Torque/force data scaling error	4-9
C217 Motor feedback data reading error.....	4-9
C218 External feedback data reading error.....	4-9
C220 Mot. Feedback Initialization Error.....	4-10
C221 Ext. Feedback Initializing Error	4-10
C227 Modulo range error.....	4-11
C300 Set absolute measuring	4-11
C301 Setting Absolute Measuring Not Allowed, Drive Enable.....	4-11
C302 Absolute Measuring System Not Installed	4-11
C500 Reset class 1 diagnostic	4-12
C600 Drive-controlled homing procedure command	4-12
C601 Homing Not Possible If Drive Is Not Enabled.....	4-12
C602 Distance homing switch - reference mark erroneous	4-12
C603 Homing Not Permitted In This Operating Mode	4-12
C604 Homing of absolute encoder not possible	4-13
C605, Homing velocity too great.....	4-13
C700 Basic load.....	4-13
C800 Command Base-Parameter load	4-13
D400 Positive stop drive procedure command.....	4-14
D401 ZKL1 Error at Command Start	4-14

5 Status Diagnostic Messages

5-1

A000 Communication Phase 0	5-1
A001 Communication Phase 1	5-1
A002 Communication Phase 2	5-1
A003 Communication Phase 3	5-2
A010 Halt Drive.....	5-2
A012 Control and Power Sections Ready for Operation.....	5-2
A013 Ready for Power ON	5-2
A100 Drive in Torque Mode.....	5-2
A101 Drive in Velocity Mode.....	5-3
A102 Position Mode Encoder 1	5-3
A103 Position Mode Encoder 2	5-3
A104 Position Mode Encoder 1 / lagless positioning.....	5-3
A105 Position Mode Encoder 2 / lagless positioning.....	5-3
A106 Drive-Controlled Interpolation/Encoder 1	5-4
A107 Drive-Controlled Interpolation/Encoder 2	5-4
A108 Drive-Controlled Interpolation/Encoder 1/Lagless.....	5-4
A109 Drive-Controlled Interpolation/Encoder 2/Lagless.....	5-4

6 Exchanging Drive Components

6-1

6.1 Procedure for Exchanging Devices	6-2
Exchange the DKC:	6-3
Motor Exchange:.....	6-3
Cable Exchange:	6-4