

CM04	Number of Pole Pairs	8-53
CM05	Torque/Force Constant	8-53
CM06	Moment of Inertia of the Rotor	8-54
CM07	Holding Brake Type	8-54
CM08	Holding Brake Current	8-54
CM09	Motor Temperature	8-55
CM10	Reserved	8-55
CM11	Reserved	8-55
8.8	PLS Parameter	8-56
N100	PLS	8-56
N101	Output Channel 1	8-56
N109	SSI Encoder Monitoring	8-57
N110	Reserved	8-57
N111	Function of Output Channel 1	8-58
N119	Reserved	8-58
N120	Reserved	8-58
N121	Switch 1	8-59
8.9	List of CRP Parameters	8-60

9 Diagnostic Message Descriptions 9-1

9.1	Overview of the Diagnostic Message Descriptions	9-1
	Diagnostic Message Types	9-1
	Composition of a Diagnostic Message	9-1
9.2	Display of PL, UL, and Pd	9-4
9.3	Error Diagnostics for Amplifier F.	9-5
	F208 UL The motor type has changed	9-5
	F209 PL Load parameter default values	9-5
	F217 Blower not connected	9-5
	F218 Amplifier overtemp. shutdown	9-6
	F219 Motor overtemp. shutdown	9-6
	F220 Bleeder overload shutdown	9-7
	F221 Motor temp. surveillance defective	9-7
	F226 Undervoltage in power section	9-7
	F228 Excessive deviation	9-8
	F229 Encoder 1 failure: Quadrant error	9-8
	F230 Max. signal frequency of encoder 1 exceeded	9-8
	F234 Emergency-Stop	9-9
	F236 Excessive position feedback difference	9-9
	F237 Excessive position command difference	9-10
	F242 Encoder 2 failure: Signal amplitude wrong	9-10
	F245 Encoder 2 failure: Quadrant error	9-11
	F246 Max. signal frequency of encoder 2 exceeded	9-11
	F248 Low Battery Voltage	9-11
	F253 Incr. encoder emulator: Frequency too high	9-12
	F267 Erroneous internal hardware synchronization	9-12
	F276 Absolute encoder out of allowed window	9-13

F277 Current measurement trim wrong	9-13
F281 Mains fault	9-13
F288 Error during firmware update of EMD Module firmware	9-14
F291 Timeout in EMD Module	9-14
F292 Overtemperature in EMD Module	9-15
F294 Timeout in EcoX Slave	9-15
F296 Number of EcoX Slaves incorrect.....	9-16
F297 Error in EcoX Slave	9-16
F386 No ready signal from supply module	9-16
F407 Error during initialization of master communication.....	9-16
F408 Fatal error of the interface card	9-17
F411 Double SST failure shutdown	9-17
F434 Emergency-Stop	9-17
F634 Emergency-Stop	9-18
F822 Encoder 1 failure: Signal amplitude wrong	9-18
F860 Overcurrent: short in power stage	9-19
F870 +24Volt DC error.....	9-19
F873 Power supply driver stages fault.....	9-20
F878 Velocity loop error.....	9-20
F895 4-kHz signal wrong	9-20
9.4 Warning Diagnostics for Amplifier E. ..	9-21
E221 Warning, Motor temp. surveillance defective	9-21
E225 Motor overload.....	9-21
E250 Drive overtemp. prewarning	9-22
E251 Motor overtemp. prewarning	9-22
E252 Bleeder overload prewarning	9-22
E257 Continuous current limit active	9-23
E259 Command velocity limit active	9-23
E261 Continuous current limit prewarning.....	9-23
E263 Velocity command value > limit S-0-0091	9-24
E267 Hardware synchronization defective	9-24
E288 Firmware update of EMD Module active	9-24
E289 Waiting for scan by EcoX Master	9-25
E291 Timeout in EMD Module	9-25
E293 Undervoltage in EMD Module	9-26
E296 Number of EcoX Slaves incorrect	9-26
E300 Processor watchdog timer	9-26
E408 Invalid addressing of MDT Data container A.....	9-27
E411 Double SST Failure	9-27
E825 Overvoltage in power stage.....	9-28
E826 Undervoltage in power section	9-28
9.5 Command Diagnostics C.. , D.	9-29
C100 Communication phase 3 transition check	9-29
C200 Communication phase 4 transition check	9-29
C201 Invalid Parameters	9-29
C202 Parameter limit error.....	9-29

C203	Parameter calculation error	9-29
C204	Motor type Parameter CM00 incorrect	9-30
C207	Load error LCA	9-30
C210	Feedback 2 required	9-30
C211	Invalid feedback data	9-30
C212	Invalid amplifier data	9-31
C213	Position data scaling error	9-31
C214	Velocity data scaling error	9-31
C215	Acceleration data scaling error	9-31
C216	Torque/force data scaling error	9-32
C217	Feedback 1 data reading error	9-32
C218	Feedback 2 data reading error	9-32
C220	Feedback 1 initializing error	9-33
C221	Feedback 2 initializing error	9-34
C223	Input value for max. range too high	9-34
C228	Wrong controller type	9-34
C234	Encoder combination not possible	9-35
C400	Switch to Parameter Mode	9-35
C500	Reset class 1 diagnostic, error reset	9-35
C700	Basic load	9-35
C701	Basic load not possible with drive enable	9-35
C702	Default parameters not available	9-36
C703	Default parameters invalid	9-36
C704	Parameters not copyable	9-36
C705	Locked with password	9-36
C800	Default parameter load	9-36
C801	Parameter default value erroneous	9-37
C802	Locked with password	9-37
D400	Command Move to Positive Stop	9-37
D800	Command Measuring Wheel Mode	9-37
D801	Measuring Wheel Mode not possible	9-37
9.6	Diagnostic Status Messages for Amplifier A	9-38
A002	Communication phase 2	9-38
A003	Communication phase 3	9-38
A010	Drive HALT	9-38
A012	Control and power sections ready for operation.	9-38
A013	Ready for power on	9-38
A102	Position mode with encoder 1	9-38
A103	Position mode with encoder 2	9-38
A104	Position mode without position lag (following error), encoder 1	9-39
A105	Position mode without lag, encoder 2	9-39
9.7	Diagnostic Messages for Basic Initialization and Fatal System Errors	9-40
	Diagnostic Message Display: -0	9-40
	Diagnostic Message Display: -1	9-40
	Diagnostic Message Display: -2	9-40
	Diagnostic Message Display: -3	9-40

	Diagnostic Message Display: -4.....	9-40
	Diagnostic Message Display: -5.....	9-40
	Diagnostic Message Display: -6.....	9-40
	Diagnostic Message Display: Watchdog ● ● (2 Dots)	9-40
	Diagnostic Message Display: E1	9-41
	Diagnostic Message Display: E2	9-41
	Diagnostic Message Display: E3	9-41
	Diagnostic Message Display: E4	9-41
	Diagnostic Message Display: E5	9-41
9.8	Operation Status	9-42
	bb	9-42
	Ab.....	9-42
	Ad.....	9-42
	AF.....	9-42
	AU	9-42
	HA	9-42
	PA	9-42
	Jb	9-42
	JF	9-42
	P2.....	9-43
	P3.....	9-43
	P4.....	9-43
	PL.....	9-43
	UL.....	9-43
9.9	NC Error Diagnostics F-	9-44
	F- 0200 Parameter and automatic input simultaneously	9-44
	F- 0201 Wrong phase transition	9-44
	F- 0205 Stack overflow with JSR command.....	9-44
	F- 0206 Stack overflow with RTS command.....	9-44
	F- 0208 Per mil value in ACC command > 999	9-44
	F- 0209 Invalid value in FAK command.....	9-45
	F- 0210 Feed angle loss	9-45
	F- 0212 Program run without power	9-45
	F- 0213 Measuring Wheel Difference	9-45
	F- 0216 V > 999 Per Mil.....	9-45
	F- 0219 Wrong variable value.....	9-45
	F- 0220 Wrong constant value.....	9-46
	F- 0221 Logic Task Program error.....	9-46
	F- 0223 Wrong variable index.....	9-46
	F- 0224 APZ not allowed	9-47
	F- 0226 Control signal bit 1 fault.....	9-47
	F- 0227 Control signal bit 2 fault.....	9-47
	F- 0228 Control signal bit 3 fault.....	9-47
	F- 0229 Control signal bit 4 fault.....	9-47
	F- 0300 Invalid I/O number in command instruction.....	9-47
	F- 0302 NC instruction number illegal	9-48

F- 0307 Data loss parameter	9-48
F- 0308 AT Failure	9-48
F- 0309 NC cycle error.....	9-48
F- 0310 Parameter error	9-49
F- 0312 Select Parameter Mode.....	9-49
F- 0319 NC cycle time exceeded.....	9-49
F- 0320 FW Err. No. nnnn (System Error).....	9-49
F- 0321 NC Variable Number illegal	9-49
F- 0322 SSI-Encoder Error (PLS).....	9-49
F- 0323 PLS speed > N109	9-49
9.10 NC Warning Diagnostics E- ..	9-50
E- 0100 Velocity = 0.....	9-50
E- 0102 'Jog+' & 'Jog-'	9-50
E- 0103 Outputs overloaded	9-50
E- 0109 Load default values	9-50
E- 0110 Jog, no power.....	9-50
9.11 NC- Status Diagnostics A- ..	9-51
A- 0007 Stop is active	9-51
A- 0009 Function interrupt is active	9-51
A- 0011 Feed rolls open.....	9-51
A- 0012 Press Timeout	9-51
A- 0026 Control signal bit 1 invalid	9-51
A- 0027 Control signal bit 2 invalid	9-51
A- 0028 Control signal bit 3 invalid	9-51
A- 0029 Control signal bit 4 invalid	9-51
Notes.....	9-52

10 EMD Module (EcoX-Bus) 10-1

10.1 Digital Input/Output Module	10-1
System Setup.....	10-1
10.2 Technical Data	10-3
EcoX Bus System Data.....	10-3
Input/Output Module Data.....	10-3
10.3 Important Notes.....	10-5
Appropriate Use	10-5
Inappropriate Use	10-6
10.4 Installation	10-7
Dimensions and Installation Measurements	10-7
Installation/Removal.....	10-9
10.5 Electrical Connection	10-12
Position of Connections	10-14
Power Supply, Protection and Grounding.....	10-14
Input Signals	10-15
Power Supply of the Outputs	10-16
Output Signals	10-16
Fieldbus Connectors	10-17