

Contents

1	Diagnostic Message Descriptions	1-1
	Overview of the diagnostic message descriptions	1-1
	Diagnostic Message Types.....	1-1
	Construction of a diagnostic message.....	1-1
2	Important directions for use	2-1
2.1	Introduction.....	2-1
2.2	Inappropriate use	2-2
3	Safety Instructions for Electric Servo Drives and Controls	3-1
3.1	Introduction.....	3-1
3.2	Explanations.....	3-1
3.3	Hazards by inappropriate use	3-2
3.4	General Information	3-3
3.5	Protection against contact with electrical parts.....	3-4
3.6	Protection by protective low voltage (PELV) against electrical shock	3-6
3.7	Protection against dangerous movements.....	3-6
3.8	Protection against magnetic and electromagnetic fields during operations and mounting.....	3-8
3.9	Protection against contact with hot parts	3-9
3.10	Protection during handling and installation	3-9
3.11	Battery safety	3-10
3.12	Protection against pressurized Systems.....	3-10
4	Description of diagnostic letters F... and E...	4-1
4.1	Error diagnostic messages F...	4-1
	F207 Switching to uninitialized operation mode	4-2
	F208 UL The motor type has changed.	4-2
	F209 PL Load parameter default values.....	4-3
	F218 Amplifier overtemp. shutdown	4-3
	F219 Motor overtemp. shutdown	4-4
	F220 Bleeder overload shutdown	4-4
	F221 Motor temp. surveillance defective	4-5
	F223 Error during initialisation of the parking axis.....	4-5
	F224 Maximum braking time exceeded.....	4-6
	F226 Undervoltage in power section	4-6
	F228 Excessive deviation	4-6
	F229 Encoder 1 failure: quadrant error.....	4-7
	F230 Max. signal frequency of encoder 1 exceeded.....	4-7

F236 Excessive position feedback difference.....	4-7
F237 Excessive position command difference	4-8
F242 Encoder 2 failure: signal amplitude wrong.....	4-9
F245 Encoder 2 failure: quadrant error.....	4-10
F246 Max signal frequency of encoder 2 exceeded	4-10
F248 Low battery voltage.....	4-10
F249 Master drive encoder failure: signal too small	4-11
F250 Overflow of target position preset memory.....	4-11
F252 Master drive encoder failure: quadrant error	4-12
F253 Incr. encoder emulator: pulse frequency too high	4-12
F260 Command current limit shutoff.....	4-12
F262 External short at status outputs	4-13
F267 Erroneous internal hardware synchronization	4-13
F269 Error during release of the motor holding brake.....	4-13
F276 Absolute encoder out of allowed window	4-14
F277 Current measurement trim wrong.....	4-14
F281 Mains fault	4-14
F386 No ready signal from supply module	4-15
F402 Double MDT failure shutdown	4-15
F407 Error during initialisation of master communication.....	4-15
F408 Fatal error of the interface card	4-16
F409 Bus failure.....	4-16
F410 Synchronization with field bus impossible	4-16
F434 Emergency-Stop	4-17
F629 Positive travel limit exceeded	4-17
F630 Negative travel limit exceeded.....	4-18
F634 Emergency-Stop	4-18
F643 Positive travel limit switch detected	4-19
F644 Negative travel limit switch detected	4-19
F811 Commutation offset could not be determined.....	4-20
F812 Motion range exceeded during commutation	4-20
F822 Encoder 1 failure: signal amplitude wrong.....	4-20
F860 Overcurrent: short in power stage	4-22
F870 +24Volt DC error.....	4-22
F873 Power supply driver stages fault.....	4-22
F878 Velocity loop error.....	4-23
F879 Velocity limit S-0-0091 exceeded	4-23
4.2 Warning diagnostic messages	4-24
E221 Warning Motor temp. surveillance defective	4-24
E225 Motor overload.....	4-25
E226 Undervoltage in power section	4-25
E247 Interpolation velocity = 0.....	4-25
E248 Interpolation acceleration = 0	4-26
E249 Positioning velocity >= S-0-0091	4-26
E250 Drive overtemp. prewarning	4-27
E251 Motor overtemp. prewarning	4-27

E252 Bleeder overload prewarning	4-28
E253 Target position out of travel range.....	4-28
E254 Not homed	4-29
E255 Feedrate-override S-0-0108 = 0	4-29
E256 Torque limit = 0.....	4-29
E257 Continuous current limit active	4-30
E258 Selected process block is not programmed.	4-30
E259 Command velocity limit active	4-30
E260 Command Current limit active	4-31
E261 Continuous current limit prewarning.....	4-31
E263 Velocity command value > limit S-0-0091	4-31
E264 Target position out of num. range	4-32
E269 Brake torque too low.....	4-32
E281 Mains fault	4-32
E386 No ready signal from supply module	4-33
E401 Error in the parameter channel.....	4-33
E402 Error in the cyclic data channel	4-33
E405 No data exchange possible via the field bus	4-34
E408 Invalid addressing of MDT-data container A	4-34
E409 Invalid addressing of AT-data container A	4-34
E825 Overvoltage in power stage.....	4-34
E826 Undervoltage in power section	4-35
E829 Positive position limit exceeded	4-35
E830 Negative position limit exceeded	4-36
E831 Position limit reached during jog	4-36
E834 Emergency-Stop.....	4-36
E843 Positive limit switch activated	4-37
E844 Negative limit switch activated	4-37
E881 Mains fault	4-37
E886 No ready signal from supply module	4-38

5 Description of Diagnostic Letters B..., C..., D... and A... 5-1

5.1 Command Diagnostic Messages B..., C... and D.....	5-1
B100 Command Release motor holding brake.....	5-1
B101 Command not enabled	5-1
B200 Brake check command.....	5-1
B201 Brake check only with drive enable	5-2
B202 Error during bedding in the brake.....	5-2
B203 Brake torque too low.....	5-2
C100 Communication phase 3 transition check	5-2
C101 Invalid communication parameter (S-0-0021)	5-3
C102 Limit error communication parameter (S-0-0021)	5-3
C104 Config. IDN for MDT not configurable	5-3
C105 Configured length > max. length for MDT	5-3
C106 Config. IDN for AT not configurable	5-4
C107 Configured length > max. length for AT	5-4

C112 TNcyc (S-0-0001) or TScyc (S-0-0002) error.....	5-4
C113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error.....	5-4
C114 $T_4 > T_{Scyc}$ (S-0-0002) - T_{4min} (S-0-0005)	5-5
C118 Order of MDT configuration wrong.....	5-5
C200 Communication phase 4 transition check	5-5
C201 Invalid parameter(s) (->S-0-0022).....	5-6
C202 Parameter limit error (->S-0-0022).....	5-6
C203 Parameter calculation error (->S-0-0022)	5-6
C204 Motor type P-0-4014 incorrect.....	5-6
C210 Feedback 2 required (->S-0-0022).....	5-7
C211 Invalid feedback data (->S-0-0022).....	5-7
C212 Invalid amplifier data (->S-0-0022).....	5-7
C213 Position data scaling error.....	5-8
C214 Velocity data scaling error.....	5-8
C215 Acceleration data scaling error.....	5-9
C216 Torque/force data scaling error	5-9
C217 Feedback1 data reading error.....	5-10
C218 Feedback 2 data reading error.....	5-10
C220 Feedback 1 initializing error	5-11
C221 Feedback 2 initializing error	5-11
C223 Input value for max. range too high.....	5-12
C227 Modulo range error.....	5-12
C234 Encoder combination not possible	5-12
C235 Load-side motor encoder with inductance motor only	5-12
C236 Feedback 1 required (P-0-0074).....	5-13
C238 Wrong function of encoder 2.....	5-13
C241 Binary encoder resolution necessary.....	5-13
C300 Command Set absolute measuring.....	5-13
C302 Absolute measuring system not installed.....	5-14
C400 Switching to parameter mode	5-14
C401 Drive active, switching not allowed	5-14
C402 Only allowed without master	5-14
C500 Reset class 1 diagnostic, error reset.....	5-15
C600 Drive controlled homing procedure command	5-15
C601 Homing only possible with drive enable	5-15
C602 Distance home switch - reference mark erroneous	5-15
C604 Homing of absolute encoder not possible	5-15
C606 Reference mark not detected.....	5-16
C700 Basic load.....	5-16
C702 Default parameters not available	5-16
C703 Default parameters invalid	5-17
C704 Parameters not copyable	5-17
C800 Default parameter load.....	5-17
C801 Parameter default value erroneous (-> S-0-0021)	5-18
C802 Locked with password.....	5-18
D300 Command adjust commutation	5-18

D301 Drive not ready for commutation command	5-18
D302 Torque/Force too small to move	5-18
D303 Drive in control at start of command	5-19
D304 Error in offset calculation.....	5-19
D305 Drive enable refused	5-19
D306 Power is off.....	5-19
D307 Drive does not move	5-19
D308 No adjustment with asynchronous motor	5-19
D309 Proceed to phase 4	5-19
D310 Input master password	5-19
D311 Commutation offset could not be determined.	5-20
D312 Motion range exceeded during commutation	5-20
D400 Positive stop drive procedure command	5-20
D401 ZKL1-Error at command start.....	5-21
D500 Command Get mark position	5-21
D501 Incremental encoder required	5-21
D600 Cancel reference point procedure command.....	5-21
D700 Parking axis command	5-22
D701 Parking axis only while drive is disabled	5-22
D800 Command measuring wheel mode	5-22
D801 Measuring wheel operation not possible.....	5-22
D900 Command automatic loop tuning	5-22
D901 Start requires drive enable	5-23
D902 Motor feedback data not valid	5-23
D903 Inertia detection failed	5-24
D904 Gain adjustment failed.....	5-24
D905 Travel range invalid, P-0-0166 & P-0-0167	5-24
D906 Travel range exceeded.....	5-25
5.2 Status diagnostic messages	5-26
A002 Communication phase 2.....	5-26
A003 Communication phase 3.....	5-26
A010 Drive HALT	5-27
A012 Control and power sections ready for operation	5-27
A013 Ready for power on	5-27
A100 Drive in TORQUE control	5-27
A101 Drive in VELOCITY control.....	5-27
A102 Position mode with encoder 1	5-28
A103 Position mode with encoder 2	5-28
A104 Position mode lagless, encoder 1	5-28
A105 Position control lagless, feedback 2	5-28
A106 Drive controlled interpolation, encoder 1.....	5-28
A107 Drive controlled interpolation, encoder 2.....	5-29
A108 Drive controlled interpolation, lagless, encoder 1	5-29
A109 Drive controlled interpolation, lagless, encoder 2	5-29
A110 Velocity synchronization, virtual master drive	5-30
A111 Velocity synchronization, real master drive	5-30

A112 Phase synchronization, encoder 1, virtual master drive.....	5-30
A113 Phase synchronization, encoder 2, virtual master drive.....	5-30
A114 Phase synchronization, encoder 1, real master drive	5-31
A116 Phase synchr. lagless, encoder 1, virtual master drive.....	5-31
A117 Phase synchr. lagless, encoder 2, virtual master drive.....	5-31
A118 Phase synchr. lagless, encoder 1, real master drive	5-31
A128 Cam shaft, encoder 1, virtual master drive.....	5-32
A129 Cam shaft, encoder 2, virtual master drive.....	5-32
A130 Cam shaft, encoder 1, real master drive	5-32
A132 Cam shaft, lagless, encoder 1, virt. master drive	5-32
A133 Cam shaft, lagless, encoder 2, virt. master drive	5-33
A134 Cam shaft, lagless, encoder 1, real master drive	5-33
A150 Drive controlled positioning, encoder 1	5-33
A151 Drive controlled positioning, encoder 1, lagless.....	5-34
A152 Drive controlled positioning, encoder 2	5-34
A153 Drive controlled positioning, encoder 2, lagless.....	5-35
A206 Process block mode, encoder 1	5-35
A207 Process block mode lagless, encoder 1.....	5-35
A208 JOG mode positive	5-35
A210 Process block mode, encoder 2	5-36
A211 Process block mode lagless, encoder 2.....	5-36
A218 JOG mode negative.....	5-36
A400 Automatic drive check and adjustment.....	5-36
A401 Drive deceleration to standstill	5-37
A800 Unknown operation mode	5-37
5.3 Diagnostic messages for basic initialization and after fatal System errors.....	5-38
Diagnostic Message Display: -0.....	5-38
Diagnostic Message Display: -1.....	5-38
Diagnostic Message Display: -2.....	5-38
Diagnostic Message Display: -3.....	5-38
Diagnostic Message Display: -4.....	5-38
Diagnostic Message Display: -5.....	5-38
Diagnostic Message Display: -6.....	5-38
Diagnostic Message Display: ●● (2 dots)	5-38
Diagnostic Message Display: E1	5-39
Diagnostic Message Display: E2	5-39
Diagnostic Message Display: E3	5-39
Diagnostic Message Display: E4	5-39
Diagnostic Message Display: E5	5-39
5.4 Operation Status	5-40
bb	5-40
Ab.....	5-40
AC	5-40
AE	5-40
AF.....	5-40
AH	5-40

Jb	5-40
JF	5-40
P2	5-41
P3	5-41
PL	5-41
UL	5-41
6 Replacing or Exchanging Drive Components	6-1
6.1 Procedure on Replacing the Unit	6-3
Replacing the DKC:	6-3
Replacing the Motor:	6-4
Replacing cables:	6-4
7 Replacing Firmware	7-7
7.1 Replacing the Parameter Module	7-7
7.2 Replacing the Firmware Module	7-8
7.3 Replacing the Programming Module (complete module)	7-8
8 Index	8-1
9 Kundenbetreuungsstellen - Sales & Service Facilities	9-1