

Parameter	10-24
Variables	10-28
Logic Task.....	10-30
Readout of Status Information	10-32
Interface Commands.....	10-41
Polling Query.....	10-45
SIS Protocol	10-45

11 Command Communications 11-1

11.1 Parallel Interface	11-1
Diagnostic LED for Parallel Interface.....	11-1
11.2 Profibus	11-2
Fieldbus Parameters.....	11-3
Process Data Channel	11-3
Profile 0 :	11-4
Profile 1 :	11-5
Service Data Channel	11-8
Inputs X1 and X3	11-8
Assignment of Profibus Connector X30.....	11-9
Diagnostic LED for Profibus.....	11-9

12 Diagnostic Message Descriptions 12-1

12.1 Overview of the Diagnostic Message Descriptions.....	12-1
Diagnostic Message Types.....	12-1
Composition of a Diagnostic Message	12-1
12.1 Error Diagnostics for Amplifier F.	12-4
F208 UL The motor type has changed	12-4
F209 PL Load parameter default values.....	12-4
F218 Amplifier overtemp. shutdown	12-5
F219 Motor overtemp. shutdown	12-5
F220 Bleeder overload shutdown	12-6
F221 Motor temp. surveillance defective	12-6
F226 Undervoltage in power section	12-6
F228 Excessive deviation	12-7
F229 Encoder 1 failure: Quadrant error	12-7
F230 Max. signal frequency of encoder 1 exceeded.....	12-7
F234 Emergency-Stop	12-8
F236 Excessive position feedback difference.....	12-8
F237 Excessive position command difference	12-9
F242 Encoder 2 failure: Signal amplitude wrong	12-9
F245 Encoder 2 failure: Quadrant error	12-10
F246 Max. signal frequency of encoder 2 exceeded.....	12-10
F248 Low Battery Voltage.....	12-10
F253 Incr. encoder emulator: Frequency too high.....	12-11
F267 Erroneous internal hardware synchronization	12-11
F276 Absolute encoder out of allowed window	12-12

F277 Current measurement trim wrong	12-12
F281 Mains fault	12-12
F217 Blower not connected	12-13
F288 Error during firmware update of EMD Module firmware	12-13
F291 Timeout in EMD Module	12-13
F292 Overtemperature in EMD Module	12-14
F294 Timeout in EcoX Slave	12-14
F296 Number of EcoX Slaves incorrect.....	12-14
F297 Error in EcoX Slave	12-15
F386 No ready signal from supply module	12-15
F407 Error during initialization of master communication.....	12-15
F408 Fatal error of the interface card	12-16
F411 Double SST failure shutdown	12-16
F434 Emergency-Stop	12-16
F629 Positive travel limit exceeded	12-17
F630 Negative travel limit exceeded.....	12-17
F634 Emergency-Stop	12-18
F643 Positive travel limit switch detected	12-18
F644 Negative travel limit switch detected	12-18
F822 Encoder 1 failure: Signal amplitude wrong	12-19
F860 Overcurrent: short in power stage	12-20
F870 +24Volt DC error.....	12-20
F873 Power supply driver stages fault.....	12-20
F878 Velocity loop error	12-21
F895 4-kHz signal wrong	12-21
12.2 Warning Diagnostics for Amplifier E. ..	12-22
E221 Warning, Motor temp. surveillance defective	12-22
E225 Motor overload.....	12-22
E250 Drive overtemp. prewarning	12-22
E251 Motor overtemp. prewarning	12-23
E252 Bleeder overload prewarning	12-23
E256 Torque limit = 0.....	12-23
E257 Continuous current limit active	12-24
E259 Command velocity limit active	12-24
E261 Continuous current limit prewarning.....	12-24
E263 Velocity command value > limit A106	12-25
E267 Hardware synchronization defective	12-25
E288 Firmware update of EMD Module active	12-25
E289 Waiting for scan by EcoX Master	12-26
E291 Timeout in EMD Module	12-26
E296 Number of EcoX Slaves incorrect	12-27
E300 Processor watchdog timer	12-27
E408 Invalid addressing of MDT Data container A.....	12-27
E411 Double SST Failure	12-28
E825 Overvoltage in power stage.....	12-28
E826 Undervoltage in power section	12-29

12.3 Command Diagnostics C., D.	12-30
C100 Communication phase 3 transition check	12-30
C200 Communication phase 4 transition check	12-30
C201 Invalid Parameters	12-30
C202 Parameter limit error	12-30
C203 Parameter calculation error	12-31
C204 Motor type P-0-4014 incorrect	12-31
C207 Load error LCA	12-31
C210 Feedback 2 required	12-31
C211 Invalid feedback data	12-32
C212 Invalid amplifier data	12-32
C213 Position data scaling error	12-32
C214 Velocity data scaling error	12-33
C215 Acceleration data scaling error	12-33
C216 Torque/force data scaling error	12-33
C217 Feedback 1 data reading error	12-34
C218 Feedback 2 data reading error	12-34
C220 Feedback 1 initializing error	12-34
C221 Feedback 2 initializing error	12-35
C223 Input value for max. range too high	12-35
C227 Modulo range error	12-35
C228 Wrong controller type	12-36
C234 Encoder combination not possible	12-36
C235 Load-side motor encoder with inductance motor only	12-36
C236 Feedback 1 required	12-36
C300 Set absolute measuring	12-37
C301 Setting absolute encoder not possible when RF set	12-37
C302 Absolute measuring system not installed	12-37
C400 Switch to Parameter Mode	12-37
C500 Reset class 1 diagnostic, error reset	12-37
C600 Drive-controlled homing procedure command	12-38
C601 Homing only possible with drive enable	12-38
C602 Distance home switch – reference mark erroneous	12-38
C604 Homing of absolute encoder not possible	12-38
C605 Homing velocity too high	12-39
C700 Basic load	12-39
C701 Basic load not possible with drive enable	12-39
C702 Default parameters not available	12-39
C703 Default parameters invalid	12-40
C704 Parameters not copyable	12-40
C705 Locked with password	12-40
C800 Default parameter load	12-40
C801 Parameter default value erroneous	12-40
C802 Locked with password	12-41
D300 Command adjust commutation	12-41
D301 Drive not ready for commutation command	12-41

D302 Torque/force too small for movement	12-41
D400 Command Move to Positive Stop	12-42
D500 Command Detect Marker Position	12-42
D501 No incremental measurement system.....	12-42
D800 Command Measuring Wheel Mode.....	12-42
12.4 Diagnostic Status Messages for Amplifier A.	12-43
A002 Communication phase 2.....	12-43
A003 Communication phase 3.....	12-43
A010 Drive HALT	12-43
A012 Control and power sections ready for operation.	12-43
A013 Ready for power on	12-43
A102 Position mode with encoder 1	12-43
A103 Position mode with encoder 2	12-43
A104 Position mode without position lag (following error), encoder 1.....	12-44
A105 Position mode without lag, encoder 2	12-44
A800 Unknown operating mode	12-44
12.5 Diagnostic Messages for Basic Initialization and Fatal System Errors.....	12-45
Diagnostic Message Display: -0.....	12-45
Diagnostic Message Display: -1.....	12-45
Diagnostic Message Display: -2.....	12-45
Diagnostic Message Display: -3.....	12-45
Diagnostic Message Display: -4.....	12-45
Diagnostic Message Display: -5.....	12-45
Diagnostic Message Display: -6.....	12-45
Diagnostic Message Display: Watchdog ● ● (2 Dots)	12-45
Diagnostic Message Display: E1	12-46
Diagnostic Message Display: E2	12-46
Diagnostic Message Display: E3	12-46
Diagnostic Message Display: E4	12-46
Diagnostic Message Display: E5	12-46
12.6 Operation Status	12-47
bb	12-47
Ab.....	12-47
Ad.....	12-47
AF.....	12-47
AH	12-47
AU	12-47
HA	12-47
PA	12-47
Jb	12-47
JF	12-47
P2.....	12-48
P3.....	12-48
P4.....	12-48
PL.....	12-48
UL.....	12-48

12.7 NC Error Diagnostics F- ..	12-49
F-0200 Parameter and automatic input simultaneously	12-49
F-0201 Wrong phase transition.....	12-49
F-0203 Target position < negative position limit	12-49
F- 0204 Target position > positive position limit	12-49
F- 0205 Stack overflow with JSR command	12-49
F- 0206 Stack overflow with RTS command.....	12-49
F- 0207 Invalid destination task number	12-49
F- 0208 Per mille value in ACC command > 999	12-49
F- 0209 Invalid value in FAK command.....	12-49
F- 0210 Feed monitoring.....	12-50
F- 0211 Torque > 500%.....	12-50
F- 0212 Program run without power	12-50
F- 0213 Max. Difference between motor and measuring wheel encoder too large.....	12-50
F- 0214 Wrong BCD information	12-50
F- 0215 Wrong slave factor input	12-50
F- 0216 Per mille value in command > 999	12-50
F- 0217 HOM command not allowed	12-50
F- 0218 RTM command not allowed.....	12-50
F- 0219 Variable in NC command > permissible input value	12-50
F- 0220 Constant in NC command > permissible input value	12-50
F- 0221 Logic Task Program error.....	12-51
F-0222 SA1 Command not possible.....	12-51
F-0223 Wrong variable index.....	12-51
F-0224, APZ command in NC Program not allowed	12-51
F-0225 No curve data	12-51
F-0226 Control signal bit 1 wrong	12-51
F-0227 Control signal bit 2 wrong	12-51
F-0228 Control signal bit 3 wrong	12-51
F-0229 Control signal bit 4 wrong	12-52
F- 0300 Invalid I/O number in command instruction.....	12-52
F- 0301 Wrong I/O status in command.....	12-52
F- 0302 Command instruction number too large	12-52
F- 0304 Unknown command.....	12-52
F- 0305 Drive not homed to absolute value.....	12-52
F- 0306 Feed distance overrun.....	12-52
F- 0307 Data loss parameter	12-52
F- 0308 Drive message not sent.....	12-52
F- 0309 Master data message not processed	12-53
F- 0310 Input error in parameter.....	12-53
F- 0311 Stack correction value > 9	12-53
F- 0312 Acknowledgement of an initialization error and not in parameter mode	12-53
F- 0313 Interval too large, BCD command	12-53
F- 0314 Instruction offset too large for BIC command	12-53
F- 0315 BIC Command : Wrong selection	12-53
F- 0316 Real-time communication to the Fieldbus / BTV04 interrupted.....	12-53

F- 0317 Fieldbus / BTV04 cyclic communication interrupted	12-54
F- 0318 Wrong axis number in NC command	12-54
F- 0319 NC cycle time exceeded.....	12-54
F- 0320 System error (firmware error)	12-54
F- 0321 Invalid variable number in NC command	12-54
F-0322 SSI-Encoder error (PLS)	12-54
F-0323 Velocity of PLS encoder too high	12-54
F-0324 Function terminated.....	12-54
12.8 NC Warning Diagnostics E-	12-55
E- 0100 Velocity = 0.....	12-55
E- 0102 Both jog inputs read simultaneously	12-55
E- 0103 Hardware outputs overloaded	12-55
E- 0104 System control using BTV interrupted.....	12-55
E- 0105 Real-time communication with BTV interrupted	12-55
E- 0106 Jog reverse not possible	12-55
E- 0107 Jog forward not possible	12-55
E-0108 IDS01 timeout.....	12-55
E-0109 Load default values	12-56
E-0110 Jog, no power.....	12-56
12.9 NC- Status Diagnostics A-	12-57
A- 0007 Stop is active	12-57
A- 0008 Manual vector program is active	12-57
A- 0009 Function interrupt is active	12-57
A-0011 Feed rolls open.....	12-57
A-0012 Press Timeout	12-57
A-0026 Control signal bit 1 wrong.....	12-57
A-0027 Control signal bit 2 wrong.....	12-57
A-028 Control signal bit 3 wrong.....	12-58
A-0029 Control signal bit 4 wrong.....	12-58

13 Connectors

13-1

13.1 DKC21.3.....	13-1
13.2 DKC21.3 and DKC3.3.....	13-2
13.3 Press Encoder.....	13-3

14 Display

14-1

14.1 BTV04	14-1
Parameter Settings	14-2
PC->BTV04->DKC Push-Through Operation	14-2
Switching Between the User Interface and the Programming Displays	14-2
BTV04 Key Descriptions	14-3