

Contents

1	Diagnostic Message Descriptions	1-1
1.1	Overview of the Diagnostic Message Descriptions.....	1-1
	Diagnostic Message Types.....	1-1
	Construction of a Diagnostic Message	1-1
	H1-Display.....	1-2
2	Important directions for use	2-1
2.1	Appropriate use.....	2-1
	Introduction	2-1
	Areas of use and application.....	2-2
2.2	Inappropriate use	2-2
3	Safety Instructions for Electric Drives and Controls	3-1
3.1	Introduction.....	3-1
3.2	Explanations.....	3-1
3.3	Hazards by Improper Use	3-2
3.4	General Information	3-3
3.5	Protection Against Contact with Electrical Parts.....	3-5
3.6	Protection Against Electric Shock by Protective Low Voltage (PELV).....	3-6
3.7	Protection Against Dangerous Movements.....	3-7
3.8	Protection Against Magnetic and Electromagnetic Fields During Operation and Mounting	3-9
3.9	Protection Against Contact with Hot Parts	3-10
3.10	Protection During Handling and Mounting	3-10
3.11	Battery Safety.....	3-11
3.12	Protection Against Pressurized Systems	3-11
4	Description of Diagnostic Messages F... and E...	4-1
4.1	Error Diagnostic Messages F... ..	4-1
	F205 Cam shaft invalid	4-2
	F207 Switching to uninitialized operation mode	4-2
	F208 UL The motor type has changed.	4-2
	F209 PL Load parameter default values.....	4-3
	F217 Blower not connected	4-3
	F218 Amplifier overtemperature shutdown.....	4-3
	F219 Motor overtemperature shutdown.....	4-4
	F220 Braking resistor overload shutdown	4-4
	F221 Motor temp. surveillance defective	4-5
	F223 Error during initialisation of the parking axis.....	4-5

F224 Maximum braking time exceeded	4-6
F226 Undervoltage in power section	4-6
F228 Excessive deviation	4-6
F229 Encoder 1 failure: quadrant error.....	4-7
F230 Max. signal frequency of encoder 1 exceeded.....	4-7
F236 Excessive position feedback difference.....	4-8
F237 Excessive position command difference	4-9
F242 Encoder 2 failure: signal amplitude wrong.....	4-9
F245 Encoder 2 failure: quadrant error.....	4-10
F246 Max signal frequency of encoder 2 exceeded	4-11
F248 Low battery voltage.....	4-11
F249 Master drive encoder failure: signal too small	4-12
F250 Overflow of target position preset memory.....	4-12
F252 Master drive encoder failure: quadrant error	4-13
F253 Incr. encoder emulator: pulse frequency too high	4-13
F260 Command current limit shutoff.....	4-13
F262 External short at status outputs	4-13
F267 Erroneous internal hardware synchronization	4-14
F269 Error during release of the motor holding brake.....	4-14
F276 Absolute encoder out of allowed window	4-15
F277 Current measurement trim wrong.....	4-15
F281 Mains fault	4-16
F386 No ready signal from supply module	4-16
F401 Double MST failure shutdown	4-16
F402 Double MDT failure shutdown	4-16
F403 Invalid communication phase shutdown.....	4-17
F404 Error during phase progression	4-17
F405 Error during phase regression	4-17
F406 Phase switching without ready signal.....	4-18
F407 Error during initialization of master communication.....	4-18
F408 Fatal error of the interface card	4-18
F434 Emergency-Stop	4-18
F629 Positive travel limit exceeded	4-19
F630 Negative travel limit exceeded.....	4-19
F634 Emergency-Stop	4-20
F643 Positive travel limit switch detected	4-20
F644 Negative travel limit switch detected	4-21
F811 Commutation offset could not be determined.....	4-21
F812 Motion range exceeded during commutation	4-22
F822 Encoder 1 failure: signal amplitude wrong.....	4-22
F828 Safe Halt while drive activated	4-24
F842 Encoder 2 failure: signal amplitude wrong.....	4-24
F845 Encoder 2 failure: quadrant error.....	4-24
F860 Overcurrent: short in power stage	4-24
F870 +24Volt DC error.....	4-24
F873 Power supply driver stages fault.....	4-25

F878 Velocity loop error	4-25
F879 Velocity limit S-0-0091 exceeded	4-26
4.2 Warning Diagnostic Messages E... ..	4-27
E217 Cooling fan too slow	4-28
E221 Warning Motor temp. surveillance defective	4-28
E225 Motor overload.....	4-28
E226 Undervoltage in power section	4-29
E247 Interpolation velocity = 0.....	4-29
E248 Interpolation acceleration = 0	4-29
E249 Positioning velocity >= S-0-0091	4-30
E250 Drive overtemp. prewarning	4-31
E251 Motor overtemp. prewarning	4-31
E252 Braking resistor overload prewarning.....	4-31
E253 Target position out of travel range.....	4-32
E254 Not homed	4-32
E255 Feedrate-override S-0-0108 = 0	4-33
E256 Torque limit = 0.....	4-33
E257 Continuous current limit active	4-33
E258 Selected process block is not programmed.	4-34
E259 Command velocity limit active	4-34
E260 Command Current limit active	4-34
E261 Continuous current limit pre-warning.....	4-35
E263 Velocity command value > limit S-0-0091	4-35
E264 Target position out of num. range	4-36
E269 Brake torque too low.....	4-36
E281 Mains fault	4-36
E386 No ready signal from supply module	4-37
E401 Error in the parameter channel.....	4-37
E402 Error in the cyclic data channel	4-37
E408 Invalid addressing of MDT-data container A	4-38
E409 Invalid addressing of AT-data container A	4-38
E410 Slave not scanned or address 0	4-38
E825 Overvoltage in power stage.....	4-38
E826 Undervoltage in power section	4-39
E829 Positive position limit exceeded	4-39
E830 Negative position limit exceeded.....	4-40
E831 Position limit reached during jog	4-40
E834 Emergency-Stop.....	4-40
E835 Quick stop with probe detection is active	4-41
E843 Positive limit switch activated	4-41
E844 Negative limit switch activated	4-41
E881 Mains fault	4-42
E886 No ready signal from supply module	4-42

5	Description of Diagnostic Messages B...; C..., D... and A	5-1
5.1	Command Diagnostic Messages B..., C... and D.....	5-1
	B100 Command Release motor holding brake.....	5-2
	B101 Command not enabled	5-2
	B200 Brake check command.....	5-2
	B201 Brake check only with drive enable	5-2
	B202 Error during abrasion of the brake.....	5-2
	B203 Brake torque too low.....	5-3
	C100 Communication phase 3 transition check	5-3
	C101 Invalid communication parameter (S-0-0021)	5-3
	C102 Limit error communication parameter (S-0-0021)	5-3
	C104 Config. IDN for MDT not configurable.....	5-4
	C105 Configured length > max. length for MDT	5-4
	C106 Config. IDN for AT not configurable	5-4
	C107 Configured length > max. length for AT	5-5
	C108 Time slot parameter > Sercos cycle time	5-5
	C109 Position of data record in MDT (S-0-0009) even	5-5
	C110 Length of MDT (S-0-0010) odd	5-6
	C111 ID9 + Record length - 1 > length MDT (S-0-0010).....	5-6
	C112 TNcyc (S-0-0001) or TScyc (S-0-0002) error.....	5-6
	C113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error.....	5-7
	C114 T4 > TScyc (S-0-0002) - T4min (S-0-0005)	5-7
	C115 T2 too small.....	5-7
	C118 Order of MDT configuration wrong.....	5-7
	C200 Communication phase 4 transition check	5-8
	C201 Invalid parameter(s) (->S-0-0022).....	5-8
	C202 Parameter limit error (->S-0-0022)	5-8
	C203 Parameter calculation error (->S-0-0022)	5-9
	C204 Motor type P-0-4014 incorrect.....	5-9
	C210 Feedback 2 required (->S-0-0022).....	5-9
	C211 Invalid feedback data (->S-0-0022).....	5-10
	C212 Invalid amplifier data (->S-0-0022).....	5-10
	C213 Position data scaling error.....	5-10
	C214 Velocity data scaling error.....	5-11
	C215 Acceleration data scaling error.....	5-11
	C216 Torque/force data scaling error	5-12
	C217 Feedback1 data reading error.....	5-12
	C218 Feedback 2 data reading error.....	5-13
	C220 Feedback 1 initializing error	5-13
	C221 Feedback 2 initializing error	5-14
	C223 Input value for max. range too high.....	5-14
	C227 Modulo range error.....	5-14
	C228 Controller type S-0-0140 wrong	5-15
	C234 Encoder combination not possible	5-15
	C235 Load-side motor encoder with inductance motor only	5-15

C236 Feedback 1 required (P-0-0074)	5-16
C238 Wrong function of encoder 2 (->S-0-0022)	5-16
C241 Binary encoder resolution necessary	5-16
C300 Command Set absolute measuring	5-16
C302 Absolute measuring system not installed	5-16
C400 Switching to parameter mode	5-17
C401 Drive active, switching not allowed	5-17
C402 Only allowed without master	5-17
C500 Reset class 1 diagnostic, error reset.....	5-17
C600 Drive controlled homing procedure command	5-18
C601 Homing only possible with drive enable	5-18
C602 Distance home switch - reference mark erroneous	5-18
C604 Homing of absolute encoder not possible	5-18
C606 Reference mark not detected.....	5-19
C700 Basic load.....	5-19
C702 Default parameters not available	5-19
C703 Default parameters invalid	5-20
C704 Parameters not copyable	5-20
C800 Default parameter load.....	5-20
C801 Parameter default value erroneous (-> S-0-0021)	5-21
C802 Locked with password.....	5-21
D300 Command adjust commutation	5-21
D301 Drive not ready for commutation command	5-21
D302 Torque/Force too small to move	5-21
D303 Drive in control at start of command	5-22
D304 Error in offset calculation.....	5-22
D305 Drive enable refused	5-22
D306 Power is off.....	5-22
D307 Drive does not move	5-22
D308 No adjustment with asynchronous motor	5-22
D309 Proceed to phase 4	5-23
D310 Input master password	5-23
D311 Commutation offset could not be determined.	5-23
D312 Motion range exceeded during commutation.....	5-23
D400 Positive stop drive procedure command.....	5-24
D401 ZKL1-Error at command start.....	5-24
D500 Command Get mark position	5-24
D501 Incremental encoder required	5-25
D600 Cancel reference point procedure command.....	5-25
D700 Parking axis command.....	5-25
D701 Parking axis only while drive is disabled	5-25
D800 Command measuring wheel mode	5-25
D801 Measuring wheel operation not possible.....	5-26
D900 Command automatic loop tuning	5-26
D901 Start requires drive enable	5-26
D902 Motor feedback data not valid	5-27

D903 Inertia detection failed	5-27
D904 Gain adjustment failed.....	5-27
D905 Travel range invalid, P-0-0166 & P-0-0167	5-28
D906 Travel range exceeded.....	5-28
5.2 Status diagnostic messages	5-29
A000 Communication phase 0.....	5-29
A001 Communication phase 1.....	5-29
A002 Communication phase 2.....	5-29
A003 Communication phase 3.....	5-30
A010 Drive HALT	5-30
A012 Control and power sections ready for operation	5-31
A013 Ready for power on	5-31
A014 Safe Halt.....	5-31
A100 Drive in TORQUE control	5-31
A101 Drive in VELOCITY control.....	5-31
A102 Position mode with encoder 1	5-31
A103 Position mode with encoder 2	5-32
A104 Position mode lagless, encoder 1	5-32
A105 Position control lagless, feedback 2.....	5-32
A106 Drive controlled interpolation, encoder 1	5-32
A107 Drive controlled interpolation, encoder 2.....	5-32
A108 Drive controlled interpolation, lagless, encoder 1	5-33
A109 Drive controlled interpolation, lagless, encoder 2	5-33
A110 Velocity synchronization, virtual master drive	5-33
A111 Velocity synchronization, real master drive	5-33
A112 Phase synchronization, encoder 1, virtual master drive.....	5-34
A113 Phase synchronization, encoder 2, virtual master drive.....	5-34
A114 Phase synchronization, encoder 1, real master drive	5-34
A116 Phase synchr. lagless, encoder 1, virtual master drive.....	5-34
A117 Phase synchr. lagless, encoder 2, virtual master drive.....	5-35
A118 Phase synchr. lagless, encoder 1, real master drive	5-35
A128 Cam shaft, encoder 1, virtual master drive.....	5-35
A129 Cam shaft, encoder 2, virtual master drive.....	5-35
A130 Cam shaft, encoder 1, real master drive	5-35
A132 Cam shaft, lagless, encoder 1, virt. master drive	5-36
A133 Cam shaft, lagless, encoder 2, virt. master drive	5-36
A134 Cam shaft, lagless, encoder 1, real master drive	5-36
A150 Drive controlled positioning, encoder 1	5-37
A151 Drive controlled positioning, encoder 1, lagless.....	5-37
A152 Drive controlled positioning, encoder 2	5-37
A153 Drive controlled positioning, encoder 2, lagless.....	5-38
A203 Stepper position mode.....	5-38
A204 Stepper position mode, lagless	5-38
A206 Process block mode, encoder 1	5-39
A207 Process block mode lagless, encoder 1	5-39
A208 JOG mode positive	5-39

A210 Process block mode, encoder 2	5-39
A211 Process block mode lagless, encoder 2.....	5-39
A218 JOG mode negative.....	5-40
A400 Automatic drive check and adjustment.....	5-40
A401 Drive deceleration to standstill	5-40
A800 Unknown operating mode	5-40
5.3 Diagnostic Messages for Basic Initialization and After Fatal System Errors	5-41
Diagnostic Message Display: -0.....	5-41
Diagnostic Message Display: -1.....	5-41
Diagnostic Message Display: -2.....	5-41
Diagnostic Message Display: -3.....	5-41
Diagnostic Message Display: -4.....	5-41
Diagnostic Message Display: -5.....	5-41
Diagnostic Message Display: -6.....	5-41
Diagnostic Message Display: ●● (2 dots)	5-41
Diagnostic Message Display: E1	5-42
Diagnostic Message Display: E2	5-42
Diagnostic Message Display: E3	5-42
Diagnostic Message Display: E4	5-42
Diagnostic Message Display: E5	5-42
5.4 Operation Status	5-43
bb	5-43
Ab.....	5-43
AC	5-43
AE	5-43
AF.....	5-43
AH	5-43
Jb	5-43
JF	5-44
P0.....	5-44
P1.....	5-44
P2.....	5-44
P3.....	5-44
PL.....	5-44
UL.....	5-44