

Contents

1	Diagnostic Message Descriptions	1-1
	Overview of the diagnostic message descriptions	1-1
	Diagnostic Message Types.....	1-1
	Construction of a diagnostic message.....	1-1
2	Safety Instructions for Electric Servo Drives and Controls	2-1
2.1	Introduction.....	2-1
2.2	Explanations.....	2-1
2.3	Hazards by inappropriate use	2-2
2.4	General Information	2-3
2.5	Protection against contact with electrical parts.....	2-4
2.6	Protection by protective low voltage (PELV) against electrical shock	2-5
2.7	Protection against dangerous movements.....	2-6
2.8	Protection against magnetic and electromagnetic fields during operations and mounting.....	2-8
2.9	Protection against contact with hot parts	2-8
2.10	Protection during handling and installation	2-9
2.11	Battery safety	2-9
2.12	Protection against pressurized Systems.....	2-10
3	Description of diagnostic letters F... and E...	3-1
3.1	Error diagnostic messages F...	3-1
	F207 Switching to uninitialized operation mode	3-2
	F208 UL The motor type has changed.	3-2
	F209 PL Load parameter default values.....	3-3
	F218 Amplifier overtemp. shutdown	3-3
	F219 Motor overtemp. shutdown.....	3-4
	F220 Bleeder overload shutdown	3-4
	F221 Motor temp. surveillance defective	3-5
	F223 Error during initialisation of the parking axis.....	3-5
	F224 Maximum braking time exceeded.....	3-6
	F226 Undervoltage in power section	3-6
	F228 Excessive deviation	3-7
	F229 Encoder 1 failure: quadrant error.....	3-7
	F230 Max. signal frequency of encoder 1 exceeded.....	3-7
	F236 Excessive position feedback difference.....	3-8
	F237 Excessive position command difference	3-9
	F242 Encoder 2 failure: signal amplitude wrong.....	3-9
	F245 Encoder 2 failure: quadrant error.....	3-10

F246 Max signal frequency of encoder 2 exceeded	3-11
F248 Low battery voltage.....	3-11
F253 Incr. encoder emulator: pulse frequency too high	3-12
F260 Command current limit shutoff.....	3-12
F262 External short at status outputs	3-12
F267 Erroneous internal hardware synchronization	3-13
F269 Error during release of the motor holding brake.....	3-13
F276 Absolute encoder out of allowed window	3-14
F277 Current measurement trim wrong.....	3-14
F281 Mains fault	3-15
F386 No ready signal from supply module	3-15
F401 Double MST failure shutdown	3-15
F402 Double MDT failure shutdown	3-16
F403 Invalid communication phase shutdown.....	3-16
F404 Error during phase progression	3-16
F405 Error during phase regression	3-17
F406 Phase switching without ready signal.....	3-17
F434 Emergency-Stop	3-17
F629 Positive travel limit exceeded	3-17
F630 Negative travel limit exceeded.....	3-18
F634 Emergency-Stop	3-19
F643 Positive travel limit switch detected	3-19
F644 Negative travel limit switch detected	3-19
F811 Commutation offset could not be determined.....	3-20
F812 Motion range exceeded during commutation	3-20
F822 Encoder 1 failure: signal amplitude wrong.....	3-21
F860 Overcurrent: short in power stage	3-22
F870 +24Volt DC error.....	3-22
F873 Power supply driver stages fault.....	3-23
F878 Velocity loop error.....	3-23
F879 Velocity limit S-0-0091 exceeded	3-24
3.2 Warning diagnostic messages	3-25
E221 Warning Motor temp. surveillance defective	3-25
E225 Motor overload.....	3-26
E226 Undervoltage in power section	3-26
E247 Interpolation velocity = 0.....	3-26
E248 Interpolation acceleration = 0	3-27
E249 Positioning velocity >= S-0-0091	3-27
E250 Drive overtemp. prewarning	3-28
E251 Motor overtemp. prewarning	3-28
E252 Bleeder overload prewarning	3-29
E253 Target position out of travel range.....	3-29
E254 Not homed	3-30
E255 Feedrate-override S-0-0108 = 0	3-30
E256 Torque limit = 0.....	3-31
E257 Continuous current limit active	3-31

E258 Selected process block is not programmed	3-31
E259 Command velocity limit active	3-32
E260 Command Current limit active	3-32
E261 Continuous current limit prewarning	3-32
E263 Velocity command value > limit S-0-0091	3-33
E264 Target position out of num. range	3-33
E269 Brake torque too low.....	3-33
E281 Mains fault	3-34
E386 No ready signal from supply module	3-34
E408 Invalid addressing of MDT-data container A	3-34
E409 Invalid addressing of AT-data container A	3-34
E410 Slave not scanned or address 0.....	3-35
E825 Overvoltage in power stage.....	3-35
E826 Undervoltage in power section	3-35
E829 Positive position limit exceeded	3-36
E830 Negative position limit exceeded	3-36
E831 Position limit reached during jog	3-37
E834 Emergency-Stop	3-37
E843 Positive limit switch activated	3-37
E844 Negative limit switch activated	3-38
E881 Mains fault	3-38
E886 No ready signal from supply module	3-38

4 Description of Diagnostic Letters B..., C..., D... and A... 4-1

4.1 Command Diagnostic Messages B..., C... and D.....	4-1
B000 Pulse wire/Resolver offset detection	4-2
B001 Motor does not have resolver feedback	4-2
B002 Drive active at command start	4-2
B003 Power supply is off	4-2
B004 S pulse not found within travel range	4-2
B005 Error writing to feedback EEPROM.....	4-2
B006 Error in feedback processor, SDAI does not show 1	4-2
B008 Drive must be in operation mode (phase 4)	4-2
B009 Drive does not control in secondary operation mode 1.....	4-2
B010 5 pulses found, but min. distance to move not reached.....	4-3
B011 SDAI goes immediately back to 0, old PIC version.....	4-3
B012 Master password required	4-3
B013 Shaft does not turn as expected.....	4-3
B100 Command Release motor holding brake.....	4-3
B101 Command not enabled	4-3
B200 Brake check command	4-3
B201 Brake check only with drive enable	4-3
B202 Error during bedding in the brake	4-4
B203 Brake torque too low.....	4-4
C100 Communication phase 3 transition check	4-4
C101 Invalid communication parameter (S-0-0021)	4-5

C102 Limit error communication parameter (S-0-0021)	4-5
C104 Config. IDN for MDT not configurable	4-5
C105 Configured length > max. length for MDT	4-6
C106 Config. IDN for AT not configurable	4-6
C107 Configured length > max. length for AT	4-6
C108 Time slot parameter > Sercos cycle time	4-7
C109 Position of data record in MDT (S-0-0009) even	4-7
C110 Length of MDT (S-0-0010) odd	4-7
C111 ID9 + Record length - 1 > length MDT (S-0-0010)	4-8
C112 TNcyc (S-0-0001) or TScyc (S-0-0002) error	4-8
C113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error	4-8
C114 T4 > TScyc (S-0-0002) - T4min (S-0-0005)	4-9
C115 T2 too small	4-9
C118 Order of MDT configuration wrong	4-9
C200 Communication phase 4 transition check	4-10
C201 Invalid parameter(s) (->S-0-0022)	4-10
C202 Parameter limit error (->S-0-0022)	4-10
C203 Parameter calculation error (->S-0-0022)	4-10
C204 Motor type P-0-4014 incorrect	4-11
C210 Feedback 2 required (->S-0-0022)	4-11
C211 Invalid feedback data (->S-0-0022)	4-11
C212 Invalid amplifier data (->S-0-0022)	4-12
C213 Position data scaling error	4-12
C214 Velocity data scaling error	4-13
C215 Acceleration data scaling error	4-13
C216 Torque/force data scaling error	4-14
C217 Feedback1 data reading error	4-14
C218 Feedback 2 data reading error	4-14
C220 Feedback 1 initializing error	4-15
C221 Feedback 2 initializing error	4-15
C223 Input value for max. range too high	4-16
C227 Modulo range error	4-16
C234 Encoder combination not possible	4-16
C235 Load-side motor encoder with inductance motor only	4-17
C236 Feedback 1 required (P-0-0074)	4-17
C238 Wrong function of encoder 2	4-17
C300 Command Set absolute measuring	4-17
C302 Absolute measuring system not installed	4-18
C400 Switching to parameter mode	4-18
C401 Drive active, switching not allowed	4-18
C402 Only allowed without master	4-18
C500 Reset class 1 diagnostic, error reset	4-19
C600 Drive controlled homing procedure command	4-19
C601 Homing only possible with drive enable	4-19
C602 Distance home switch - reference mark erroneous	4-19
C604 Homing of absolute encoder not possible	4-19

C606 Reference mark not detected.....	4-20
C700 Basic load.....	4-20
C702 Default parameters not available	4-21
C703 Default parameters invalid	4-21
C704 Parameters not copyable	4-21
C800 Default parameter load.....	4-21
C801 Parameter default value erroneous (-> S-0-0021)	4-22
C802 Locked with password.....	4-22
C900 Position spindle command	4-22
C902 Spindle positioning requires drive enable	4-22
C905 Positioning with non-init. absolute encoder impossible.....	4-22
C906 Error during search for zero pulse.....	4-23
D300 Command adjust commutation	4-23
D301 Drive not ready for commutation command	4-23
D302 Torque/Force too small to move	4-24
D303 Drive in control at start of command	4-24
D306 Power is off.....	4-24
D307 Drive does not move	4-24
D308 No adjustment with asynchronous motor	4-24
D309 Proceed to phase 4	4-25
D310 Input master password	4-25
D311 Commutation offset could not be determined.	4-25
D312 Motion range exceeded during commutation.....	4-25
D400 Positive stop drive procedure command.....	4-26
D401 ZKL1-Error at command start.....	4-26
D500 Command Get mark position	4-26
D501 Incremental encoder required	4-26
D600 Cancel reference point procedure command.....	4-27
D700 Parking axis command.....	4-27
D701 Parking axis only while drive is disabled	4-27
D900 Command automatic loop tuning	4-28
D901 Start requires drive enable	4-28
D902 Motor feedback data not valid	4-28
D903 Inertia detection failed	4-29
D904 Gain adjustment failed.....	4-29
D905 Travel range invalid, P-0-0166 & P-0-0167	4-30
D906 Travel range exceeded.....	4-30
4.2 Status diagnostic messages	4-31
A000 Communication phase 0.....	4-31
A001 Communication phase 1.....	4-31
A002 Communication phase 2.....	4-31
A003 Communication phase 3.....	4-32
A010 Drive HALT	4-32
A012 Control and power sections ready for operation	4-33
A013 Ready for power on	4-33
A100 Drive in TORQUE control	4-33

A101 Drive in VELOCITY control.....	4-33
A102 Position mode with encoder 1	4-33
A103 Position mode with encoder 2	4-33
A104 Position mode lagless, encoder 1	4-34
A105 Position control lagless, feedback 2	4-34
A106 Drive controlled interpolation, encoder 1.....	4-34
A107 Drive controlled interpolation, encoder 2.....	4-34
A108 Drive controlled interpolation, lagless, encoder 1	4-35
A109 Drive controlled interpolation, lagless, encoder 2	4-35
A146 Relative drive controlled interpolation, encoder 1	4-35
A147 Relative drive controlled interpolation, encoder 2	4-36
A148 Relative drive contr. interpolation, enc. 1, lagless.....	4-36
A149 Relative drive contr. interpolation, enc. 2, lagless.....	4-37
A203 Stepper position mode.....	4-37
A204 Stepper position mode, lagless	4-37
A206 Process block mode, encoder 1	4-37
A207 Process block mode lagless, encoder 1.....	4-38
A208 JOG mode positive	4-38
A210 Process block mode, encoder 2	4-38
A211 Process block mode lagless, encoder 2.....	4-38
A218 JOG mode negative.....	4-38
A400 Automatic drive check and adjustment.....	4-39
A401 Drive deceleration to standstill	4-39
A800 Unknown operation mode	4-39
4.3 Diagnostic messages for basic initialization and after fatal System errors.....	4-40
Diagnostic Message Display: -0.....	4-40
Diagnostic Message Display: -1.....	4-40
Diagnostic Message Display: -2.....	4-40
Diagnostic Message Display: -3.....	4-40
Diagnostic Message Display: -4.....	4-40
Diagnostic Message Display: -5.....	4-40
Diagnostic Message Display: -6.....	4-40
Diagnostic Message Display: ●● (2 dots)	4-40
Diagnostic Message Display: E1	4-41
Diagnostic Message Display: E2	4-41
Diagnostic Message Display: E3	4-41
Diagnostic Message Display: E4	4-41
Diagnostic Message Display: E5	4-41
4.4 Operation Status	4-42
bb	4-42
Ab.....	4-42
AC	4-42
AE	4-42
AF.....	4-42
AH	4-42
Jb	4-42

JF	4-42
P0.....	4-43
P1.....	4-43
P2.....	4-43
P3.....	4-43
PL.....	4-43
UL.....	4-43
5 Replacing or Exchanging Drive Components	5-1
5.1 Procedure on Replacing the Unit	5-3
Replacing the DKC:	5-3
Replacing the Motor:	5-4
Replacing cables:.....	5-4
6 Replacing Firmware	6-7
6.1 Replacing the Parameter Module	6-7
6.2 Replacing the Firmware Module	6-8
6.3 Replacing the Programming Module (complete module).....	6-8
7 Index	7-1
8 Kundenbetreuungsstellen - Sales & Service Facilities	8-1