

Table of Contents

	Page
Notes on Commissioning.....	46
4.2.3 Fixed Status Displays.....	47
Function-Related Status Parameters.....	47
Status Parameters for Real-Time Status Bits.....	48
4.2.4 Control Parameters.....	49
4.3 Control Panels of the IndraDrive Controllers.....	49
4.3.1 General Information on the Operation Options	49
Control Panel Variants.....	49
4.4 Control Panel.....	50
4.4.1 Brief Description.....	50
4.4.2 Functional Description.....	51
4.5 Terms, Basic Principles.....	69
4.5.1 Parameters.....	69
4.5.2 Data Storage and Parameter Handling.....	69
4.5.3 Password.....	70
4.5.4 Commands.....	71
4.5.5 Operation Modes.....	71
4.5.6 Warnings.....	72
4.5.7 Errors.....	72
5 Operating States.....	75
5.1 General Information.....	75
5.2 Ab / VM Bb.....	75
5.3 AC.....	75
5.4 AE.....	75
5.5 AF.....	75
5.6 AH.....	75
5.7 AR.....	75
5.8 AS.....	75
5.9 ASP.....	75
5.10 AU.....	75
5.11 bb / VM bb.....	75
5.12 charg / VM charg.....	76
5.13 CM.....	76
5.14 OM.....	76
5.15 P0 / VM P0.....	76
5.16 P-1.....	76
5.17 P1 / VM P1.....	76
5.18 P2 / VM P2.....	76
5.19 P3 / VM P3.....	76
5.20 PM.....	76
5.21 PL.....	76
5.22 RL.....	76
5.23 SBB.....	76
5.24 SBB1.....	77
5.25 SBB2.....	77

Table of Contents

	Page
5.26 SBB3.....	77
5.27 SBB4.....	77
5.28 SBH.....	77
5.29 SH.....	77
5.30 SMM1.....	77
5.31 SMM2.....	77
5.32 SMM3.....	77
5.33 SMM4.....	77
5.34 SS1.....	77
5.35 SS1 ES.....	77
5.36 SS2.....	77
5.37 STO.....	77
5.38 VM Lb.....	78
5.39 VM LB.....	78
5.40 VM ZKS.....	78
6 Diagnostic Messages when Booting the Devices.....	79
6.1 Devices With Valid Firmware.....	79
6.2 Devices Without Valid Firmware.....	79
6.3 Error Messages When Booting the Devices.....	79
6.3.1 PLC ?	79
6.3.2 Stop PLC	80
6.3.3 Run PLC	80
6.3.4 Load New Safety ?.....	80
6.3.5 No IDN on MMC !.....	80
6.3.6 Load Par from MMC.....	81
6.3.7 End C29	81
6.3.8 new MMC activate.....	81
6.3.9 MMC not correct!.....	81
6.3.10 IBF not correct!.....	82
6.3.11 Firmware update ?.....	82
6.3.12 Update Error !.....	82
6.3.13 XXX Upd	82
6.3.14 ActLW Up	83
6.3.15 E FIP nf	83
6.3.16 E FIP CS	83
6.3.17 E Pge Sz	83
6.3.18 E MMC op	84
6.3.19 E MMC cl	84
6.3.20 E Adress	84
6.3.21 E Length	84
6.3.22 E ET SW	85
6.3.23 E MMC cp	85
6.3.24 E HW nok	85
6.3.25 E SW-VER	86

Table of Contents

	Page
7 Diagnostic Status Messages	87
7.1 A0000 Communication phase 0	87
7.2 A0001 Communication phase 1	87
7.3 A0002 Communication phase 2	88
7.4 A0003 Communication phase 3	89
7.5 A0009 Automatic baud rate detection for SERCOS interface	89
7.6 A0010 Drive HALT	90
7.7 A0011 Safe torque off active	90
7.8 A0012 Control and power sections ready for operation	91
7.9 A0013 Ready for power on	91
7.10 A0014 Safe stop 1 (Emergency stop) active	92
7.11 A0015 Safe stop 1 active	93
7.12 A0016 Safe stop 2 active	93
7.13 A0017 Special mode motion active	94
7.14 A0018 Special mode safe motion 1 active	95
7.15 A0019 Special mode safe motion 2 active	96
7.16 A0020 Special mode safe motion 3 active	97
7.17 A0021 Special mode safe motion 4 active	99
7.18 A0050 Parameterization level 1 active	100
7.19 A0051 Operating mode	100
7.20 A0100 Torque control	100
7.21 A0101 Velocity control	101
7.22 A0102 Position mode, encoder 1	101
7.23 A0103 Position mode, encoder 2	101
7.24 A0104 Position mode lagless, encoder 1	102
7.25 A0105 Position mode lagless, encoder 2	102
7.26 A0106 Drive-internal interpolation, encoder 1	103
7.27 A0107 Drive-internal interpolation, encoder 2	103
7.28 A0108 Drive controlled interpolation, lagless, encoder 1	103
7.29 A0109 Drive controlled interpolation, lagless, encoder 2	104
7.30 A0110 Velocity synchronization, virtual master axis	104
7.31 A0111 Velocity synchronization, real master axis	105
7.32 A0112 Phase synchronization, encoder 1, virtual master axis	105
7.33 A0113 Phase synchronization, encoder 2, virtual master axis	105
7.34 A0114 Phase synchronization, encoder 1, real master axis	106
7.35 A0115 Phase synchronization, encoder 2, real master axis	106
7.36 A0116 Phase synchr. lagless, encoder 1, virtual master axis	107
7.37 A0117 Phase synchr. lagless, encoder 2, virtual master axis	107
7.38 A0118 Phase synchr. lagless, encoder 1, real master axis	107
7.39 A0119 Phase synchr. lagless, encoder 2, real master axis	108
7.40 A0128 Cam, encoder 1, virtual master axis	108
7.41 A0129 Cam, encoder 2, virtual master axis	109
7.42 A0130 Cam, encoder 1, real master axis	109
7.43 A0131 Cam, encoder 2, real master axis	109
7.44 A0132 Cam, lagless, encoder 1, virt. master axis	110
7.45 A0133 Cam, lagless, encoder 2, virt. master axis	110

Table of Contents

	Page
7.46 A0134 Cam, lagless, encoder 1, real master axis.....	111
7.47 A0135 Cam, lagless, encoder 2, real master axis.....	111
7.48 A0136 MotionProfile, encoder 1, virtual master axis.....	112
7.49 A0137 MotionProfile, encoder 2, virtual master axis.....	112
7.50 A0138 MotionProfile, encoder 2, real master axis.....	113
7.51 A0139 MotionProfile, encoder 1, real master axis.....	113
7.52 A0140 MotionProfile lagless, encoder 1, virtual master axis.....	114
7.53 A0141 MotionProfile lagless, encoder 2, virtual master axis.....	114
7.54 A0142 MotionProfile lagless, encoder 1, real master axis.....	115
7.55 A0143 MotionProfile lagless, encoder 2, real master axis.....	115
7.56 A0150 Drive-controlled positioning, encoder 1.....	116
7.57 A0151 Drive-controlled positioning, encoder 1, lagless.....	116
7.58 A0152 Drive-controlled positioning, encoder 2.....	117
7.59 A0153 Drive-controlled positioning, encoder 2, lagless.....	117
7.60 A0154 Position mode drive controlled, encoder 1.....	118
7.61 A0155 Position mode drive controlled, encoder 2.....	118
7.62 A0156 Position mode lagless, encoder 1 drive controlled.....	119
7.63 A0157 Position mode lagless, encoder 2 drive controlled.....	119
7.64 A0160 Position mode drive controlled.....	120
7.65 A0161 Drive-controlled positioning.....	120
7.66 A0162 Positioning block mode.....	121
7.67 A0163 Position synchronization.....	121
7.68 A0164 Velocity synchronization.....	122
7.69 A0206 Positioning block mode, encoder 1.....	122
7.70 A0207 Positioning block mode lagless, encoder 1.....	122
7.71 A0210 Positioning block mode, encoder 2.....	123
7.72 A0211 Positioning block mode lagless, encoder 2.....	123
7.73 A0403 Quick stop with probe detection is active.....	123
7.74 A0500 Supply module in voltage control.....	124
7.75 A0502 Supply module in operation.....	124
7.76 A0503 DC bus charging active.....	124
7.77 A0520 DC bus quick discharge active.....	125
7.78 A0800 Unknown operating mode.....	125
7.79 A4000 Automatic drive check and adjustment.....	126
7.80 A4001 Drive deceleration to standstill.....	126
7.81 A4002 Drive in automatic mode.....	127
7.82 A4003 Setting-up mode is active.....	127
8 Error Messages.....	129
8.1 Fatal System Errors (F9xxx and E-0000).....	129
8.1.1 Behavior in the Case of Fatal System Errors.....	129
8.1.2 E0000 E-0000 Processor exception error.....	129
8.1.3 F9001 Error internal function call.....	130
8.1.4 F9002 Error internal RTOS function call.....	131
8.1.5 F9003 Watchdog.....	131
8.1.6 F9004 Hardware trap.....	131

Table of Contents

	Page
8.2 Fatal Errors (F8xxx).....	131
8.2.1 Behavior in Case of Fatal Errors (F8xxx).....	131
8.2.2 F8000 Fatal hardware error.....	132
8.2.3 F8010 Autom. commutation: Max. motion range when moving back.....	133
8.2.4 F8011 Commutation offset could not be determined.....	134
8.2.5 F8012 Autom. commutation: Max. motion range.....	135
8.2.6 F8013 Automatic commutation: Current too low.....	135
8.2.7 F8014 Automatic commutation: Overcurrent.....	136
8.2.8 F8015 Automatic commutation: Timeout.....	137
8.2.9 F8016 Automatic commutation: Iteration without result.....	137
8.2.10 F8017 Automatic commutation: Incorrect commutation adjustment.....	138
8.2.11 F8018 Device overtemperature shutdown.....	139
8.2.12 F8022 Enc. 1: Enc. signals incorr. (can be cleared in ph. 2).....	140
8.2.13 F8023 Error mechanical link of encoder or motor connection.....	141
8.2.14 F8025 Overvoltage in power section.....	141
8.2.15 F8027 Safe torque off while drive enabled.....	142
8.2.16 F8028 Overcurrent in power section.....	143
8.2.17 F8030 Safe stop 1 while drive enabled.....	143
8.2.18 F8042 Encoder 2 error: Signal amplitude incorrect.....	144
8.2.19 F8057 Device overload shutdown.....	145
8.2.20 F8060 Overcurrent in power section.....	145
8.2.21 F8064 Interruption of motor phase.....	146
8.2.22 F8067 Synchronization PWM-Timer wrong.....	147
8.2.23 F8069 +/-15Volt DC error.....	147
8.2.24 F8070 +24Volt DC error.....	148
8.2.25 F8076 Error in error angle loop.....	148
8.2.26 F8078 Speed loop error.....	149
8.2.27 F8079 Velocity limit value exceeded.....	150
8.2.28 F8091 Power section defective.....	150
8.2.29 F8100 Error when initializing the parameter handling.....	151
8.2.30 F8102 Error when initializing power section.....	152
8.2.31 F8118 Invalid power section/firmware combination.....	152
8.2.32 F8120 Invalid control section/firmware combination.....	153
8.2.33 F8122 Control section defective.....	153
8.2.34 F8129 Incorrect optional module firmware.....	153
8.2.35 F8130 Firmware of option 2 of safety technology defective.....	154
8.2.36 F8133 Error when checking interrupting circuits.....	154
8.2.37 F8134 SBS: Fatal error.....	155
8.2.38 F8135 SMD: Velocity exceeded.....	156
8.2.39 F8140 Fatal CCD error.....	156
8.2.40 F8201 Safety technology basic initialization incorrect.....	156
8.2.41 F8203 Safety technology configuration parameter invalid.....	157
8.2.42 F8813 Connection error mains choke.....	158
8.2.43 F8830 Power section error.....	159
8.2.44 F8838 Overcurrent external braking resistor.....	159
8.3 Safety Technology Errors (F7xxx).....	160

Table of Contents

	Page
8.3.1 Behavior in Case of Safety Technology Errors.....	160
8.3.2 F7010 Safely-limited increment exceeded.....	161
8.3.3 F7011 Safely-monitored position, exceeded in pos. direction.....	162
8.3.4 F7012 Safely-monitored position, exceeded in neg. direction.....	162
8.3.5 F7013 Safely-limited speed exceeded.....	163
8.3.6 F7014 Timeout safely-monitored transient oscillation.....	163
8.3.7 F7020 Safe maximum speed exceeded.....	164
8.3.8 F7021 Safely-limited position exceeded.....	165
8.3.9 F7030 Position window Safe stop 2 exceeded.....	165
8.3.10 F7031 Incorrect direction of motion.....	166
8.3.11 F7040 Validation error parameterized - effective threshold.....	166
8.3.12 F7041 Actual position value validation error.....	167
8.3.13 F7042 Validation error of safe operation mode.....	168
8.3.14 F7043 Error of output stage interlock.....	168
8.3.15 F7050 Time for stopping process exceeded.....	169
8.3.16 F7051 Safely-monitored deceleration exceeded.....	169
8.4 Errors of Category F6xxx.....	170
8.4.1 Behavior in Case of Errors of Category F6xxx.....	170
8.4.2 F6006 Incorrect initialization of effective master axis position.....	171
8.4.3 F6010 PLC runtime error.....	172
8.4.4 F6024 Maximum braking time exceeded.....	173
8.4.5 F6028 Position limit value exceeded (overflow).....	174
8.4.6 F6029 Positive position limit exceeded.....	175
8.4.7 F6030 Negative position limit exceeded.....	176
8.4.8 F6034 Emergency-Stop activated.....	176
8.4.9 F6042 Both travel range limit switches activated.....	177
8.4.10 F6043 Positive travel range limit switch activated.....	178
8.4.11 F6044 Negative travel range limit switch activated.....	179
8.4.12 F6140 CCD slave error (emergency halt).....	179
8.5 Interface Errors (F4xxx).....	180
8.5.1 Behavior in Case of Interface Errors	180
8.5.2 F4001 Sync telegram failure.....	180
8.5.3 F4002 RTD telegram failure.....	181
8.5.4 F4003 Invalid communication phase shutdown.....	183
8.5.5 F4004 Error during phase progression.....	183
8.5.6 F4005 Error during phase regression.....	183
8.5.7 F4006 Phase switching without ready signal.....	184
8.5.8 F4009 Bus failure.....	184
8.5.9 F4011 Communication watchdog: Overload of cyclic communication.....	186
8.5.10 F4012 Incorrect I/O length.....	187
8.5.11 F4016 PLC double real-time channel failure.....	187
8.5.12 F4017 S-III: Incorrect sequence during phase switch.....	188
8.5.13 F4034 Emergency-Stop activated.....	188
8.5.14 F4140 CCD communication error.....	189
8.6 Non-Fatal Safety Technology Errors (F3xxx).....	190
8.6.1 Behavior in Case of Non-Fatal Safety Technology Errors.....	190

Table of Contents

	Page
8.6.2 F3111 Refer. missing when selecting safety related end pos.....	190
8.6.3 F3112 Safe reference missing.....	191
8.6.4 F3115 Brake check time interval exceeded.....	193
8.6.5 F3116 Nominal load torque of holding system exceeded.....	194
8.6.6 F3117 Actual position values validation error.....	195
8.6.7 F3122 SBS: System error.....	196
8.6.8 F3123 SBS: Brake check missing.....	196
8.6.9 F3130 Error when checking input signals.....	197
8.6.10 F3131 Error when checking acknowledgment signal.....	198
8.6.11 F3132 Error when checking diagnostic output signal.....	199
8.6.12 F3133 Error when checking interrupting circuits.....	200
8.6.13 F3134 Dynamization time interval incorrect.....	201
8.6.14 F3135 Dynamization pulse width incorrect.....	203
8.6.15 F3140 Safety parameters validation error.....	205
8.6.16 F3141 Selection validation error.....	206
8.6.17 F3142 Activation time of enabling control exceeded.....	206
8.6.18 F3143 Safety command for clearing errors incorrect.....	208
8.6.19 F3144 Incorrect safety configuration.....	209
8.6.20 F3145 Error when unlocking the safety door.....	210
8.6.21 F3146 System error channel 2.....	211
8.6.22 F3147 System error channel 1.....	212
8.6.23 F3150 Safety command for system start incorrect.....	213
8.6.24 F3151 Safety command for system halt incorrect.....	214
8.6.25 F3152 Incorrect backup of safety technology data.....	214
8.6.26 F3160 Communication error of safe communication.....	215
8.7 Non-Fatal Errors (F2xxx).....	216
8.7.1 Behavior in the Case of Non-Fatal Errors.....	216
8.7.2 F2002 Assignment of encoder for synchronization is not allowed.....	216
8.7.3 F2003 Motion step skipped.....	217
8.7.4 F2004 Error in MotionProfile.....	218
8.7.5 F2005 Cam table invalid.....	219
8.7.6 F2006 MMC was removed.....	220
8.7.7 F2007 Switching to non-initialized operation mode.....	220
8.7.8 F2008 RL The motor type has changed.....	221
8.7.9 F2009 PL Load parameter default values.....	222
8.7.10 F2010 Error when initializing digital I/O (-> S-0-0423).....	223
8.7.11 F2011 PLC - Error no. 1.....	224
8.7.12 F2012 PLC - Error no. 2.....	225
8.7.13 F2013 PLC - Error no. 3.....	225
8.7.14 F2014 PLC - Error no. 4.....	225
8.7.15 F2015 PLC - Error no. 5.....	226
8.7.16 F2016 PLC - Error no. 6.....	226
8.7.17 F2017 PLC - Error no. 7.....	227
8.7.18 F2018 Device overtemperature shutdown.....	227
8.7.19 F2019 Motor overtemperature shutdown.....	228
8.7.20 F2021 Motor temperature monitor defective.....	229

Table of Contents

	Page
8.7.21 F2022 Device temperature monitor defective.....	230
8.7.22 F2025 Drive not ready for control.....	230
8.7.23 F2026 Undervoltage in power section.....	231
8.7.24 F2027 Excessive oscillation in DC bus.....	231
8.7.25 F2028 Excessive deviation.....	232
8.7.26 F2031 Encoder 1 error: Signal amplitude incorrect.....	232
8.7.27 F2032 Validation error during commutation fine adjustment.....	233
8.7.28 F2033 External power supply X10 error.....	234
8.7.29 F2036 Excessive position feedback difference.....	234
8.7.30 F2037 Excessive position command difference.....	235
8.7.31 F2039 Maximum acceleration exceeded.....	236
8.7.32 F2040 Device overtemperature 2 shutdown.....	236
8.7.33 F2042 Encoder 2: Encoder signals incorrect.....	237
8.7.34 F2043 Measuring encoder: Encoder signals incorrect.....	238
8.7.35 F2044 External power supply X15 error.....	239
8.7.36 F2048 Low battery voltage.....	239
8.7.37 F2050 Overflow of target position preset memory.....	240
8.7.38 F2051 No sequential block in target position preset memory.....	241
8.7.39 F2053 Incr. encoder emulator: Pulse frequency too high.....	241
8.7.40 F2054 Incr. encoder emulator: Hardware error.....	242
8.7.41 F2055 External power supply dig. I/O error.....	243
8.7.42 F2057 Target position out of travel range.....	243
8.7.43 F2058 Internal overflow by positioning input.....	244
8.7.44 F2059 Incorrect command value direction when positioning.....	245
8.7.45 F2063 Internal overflow master axis generator.....	246
8.7.46 F2064 Incorrect cmd value direction master axis generator.....	246
8.7.47 F2067 Synchronization to master communication incorrect.....	247
8.7.48 F2068 Brake error.....	247
8.7.49 F2069 Error when releasing the motor holding brake.....	248
8.7.50 F2074 Actual pos. value 1 outside absolute encoder window.....	249
8.7.51 F2075 Actual pos. value 2 outside absolute encoder window.....	249
8.7.52 F2076 Actual pos. value 3 outside absolute encoder window.....	250
8.7.53 F2077 Current measurement trim wrong.....	251
8.7.54 F2086 Error supply module.....	252
8.7.55 F2087 Module group communication error.....	252
8.7.56 F2100 Incorrect access to command value memory.....	253
8.7.57 F2101 It was impossible to address MMC.....	253
8.7.58 F2102 It was impossible to address I2C memory.....	254
8.7.59 F2103 It was impossible to address EnDat memory.....	254
8.7.60 F2104 Commutation offset invalid.....	255
8.7.61 F2105 It was impossible to address Hiperface memory.....	255
8.7.62 F2110 Error in non-cyclical data communic. of power section.....	256
8.7.63 F2120 MMC: Defective or missing, replace.....	256
8.7.64 F2121 MMC: Incorrect data or file, create correctly.....	257
8.7.65 F2122 MMC: Incorrect IBF file, correct it.....	257
8.7.66 F2123 Retain data backup impossible.....	258

Table of Contents

	Page
8.7.67 F2124 MMC: Saving too slowly, replace.....	259
8.7.68 F2130 Error comfort control panel.....	259
8.7.69 F2140 CCD slave error.....	260
8.7.70 F2150 MLD motion function block error.....	260
8.7.71 F2174 Loss of motor encoder reference.....	261
8.7.72 F2175 Loss of optional encoder reference.....	261
8.7.73 F2176 Loss of measuring encoder reference.....	262
8.7.74 F2177 Modulo limitation error of motor encoder.....	263
8.7.75 F2178 Modulo limitation error of optional encoder.....	263
8.7.76 F2179 Modulo limitation error of measuring encoder.....	264
8.7.77 F2190 Incorrect Ethernet configuration.....	264
8.7.78 F2260 Command current limit shutoff.....	265
8.7.79 F2270 Analog input 1 or 2, wire break.....	266
8.7.80 F2802 PLL is not synchronized.....	267
8.7.81 F2814 Undervoltage in mains.....	267
8.7.82 F2815 Overvoltage in mains.....	267
8.7.83 F2816 Softstart fault power supply unit.....	268
8.7.84 F2817 Overvoltage in power section.....	268
8.7.85 F2818 Phase failure.....	269
8.7.86 F2819 Mains failure.....	270
8.7.87 F2820 Braking resistor overload.....	270
8.7.88 F2821 Error in control of braking resistor.....	271
8.7.89 F2825 Switch-on threshold braking resistor too low.....	272
8.7.90 F2833 Ground fault in motor line.....	272
8.7.91 F2834 Contactor control error.....	273
8.7.92 F2835 Mains contactor wiring error.....	273
8.7.93 F2836 DC bus balancing monitor error.....	274
8.7.94 F2837 Contactor monitoring error.....	274
8.7.95 F2840 Error supply shutdown.....	274
8.7.96 F2860 Overcurrent in mains-side power section.....	275
8.7.97 F2890 Invalid device code.....	276
8.7.98 F2891 Incorrect interrupt timing.....	276
8.7.99 F2892 Hardware variant not supported.....	276
8.8 SERCOS Service Channel Error Codes / Error Messages of Serial Communication.....	276
9 Warnings (Exxxx).....	279
9.1 Fatal Warnings (E8xxx).....	279
9.1.1 Behavior in the Case of Fatal Warnings.....	279
9.1.2 E8025 Overvoltage in power section.....	279
9.1.3 E8026 Undervoltage in power section.....	280
9.1.4 E8027 Safe torque off while drive enabled.....	281
9.1.5 E8028 Overcurrent in power section.....	281
9.1.6 E8029 Positive position limit exceeded.....	282
9.1.7 E8030 Negative position limit exceeded.....	283
9.1.8 E8034 Emergency-Stop activated.....	284
9.1.9 E8040 Torque/force actual value limit active.....	284

Table of Contents

	Page
9.1.10 E8041 Current limit active.....	285
9.1.11 E8042 Both travel range limit switches activated.....	285
9.1.12 E8043 Positive travel range limit switch activated.....	286
9.1.13 E8044 Negative travel range limit switch activated.....	287
9.1.14 E8055 Motor overload, current limit active.....	287
9.1.15 E8057 Device overload, current limit active.....	288
9.1.16 E8058 Drive system not ready for operation.....	289
9.1.17 E8260 Torque/force command value limit active.....	289
9.1.18 E8802 PLL is not synchronized.....	290
9.1.19 E8814 Undervoltage in mains.....	291
9.1.20 E8815 Overvoltage in mains.....	292
9.1.21 E8818 Phase failure.....	292
9.1.22 E8819 Mains failure.....	293
9.2 Warnings of Category E4xxx.....	294
9.2.1 E4001 Double MST failure shutdown.....	294
9.2.2 E4002 Double MDT failure shutdown.....	295
9.2.3 E4005 No command value input via master communication.....	296
9.2.4 E4006 Communication module overload.....	297
9.2.5 E4007 SERCOS III: Consumer connection failed.....	297
9.2.6 E4008 Invalid addressing command value data container A.....	297
9.2.7 E4009 Invalid addressing actual value data container A.....	298
9.2.8 E4010 Slave not scanned or address 0.....	298
9.2.9 E4011 Communication watchdog: Overload of cyclic communication.....	299
9.2.10 E4012 Maximum number of CCD slaves exceeded.....	299
9.2.11 E4013 Incorrect CCD addressing.....	299
9.2.12 E4014 Incorrect phase switch of CCD slaves.....	300
9.2.13 E4016 CCD: Topology error.....	301
9.2.14 E4017 CCD: Unknown I/O configuration.....	301
9.3 Possible Warnings When Operating Safety Technology (E3xxx).....	302
9.3.1 Behavior in Case a Safety Technology Warning Occurs.....	302
9.3.2 E3100 Error when checking input signals.....	302
9.3.3 E3101 Error when checking acknowledgment signal.....	303
9.3.4 E3102 Actual position values validation error.....	304
9.3.5 E3103 Dynamization failed.....	304
9.3.6 E3104 Safety parameters validation error.....	305
9.3.7 E3105 Validation error of safe operation mode.....	305
9.3.8 E3106 System error safety technology.....	306
9.3.9 E3107 Safe reference missing.....	307
9.3.10 E3108 Safely-monitored deceleration exceeded.....	307
9.3.11 E3110 Time interval of forced dynamization exceeded.....	308
9.3.12 E3115 Prewarning, end of brake check time interval.....	309
9.3.13 E3116 Nominal load torque of holding system reached.....	309
9.4 Non-Fatal Warnings (E2xxx).....	310
9.4.1 Behavior in Case a Non-Fatal Warning Occurs.....	310
9.4.2 E2010 Position control with encoder 2 not possible.....	310
9.4.3 E2011 PLC - Warning no. 1.....	310

Table of Contents

	Page
9.4.4 E2012 PLC - Warning no. 2.....	311
9.4.5 E2013 PLC - Warning no. 3.....	311
9.4.6 E2014 PLC - Warning no. 4.....	311
9.4.7 E2015 PLC - Warning no. 5.....	312
9.4.8 E2016 PLC - Warning no. 6.....	312
9.4.9 E2017 PLC - Warning no. 7.....	312
9.4.10 E2021 Motor temperature outside of measuring range.....	313
9.4.11 E2026 Undervoltage in power section.....	314
9.4.12 E2040 Device overtemperature 2 prewarning.....	315
9.4.13 E2047 Interpolation velocity = 0.....	315
9.4.14 E2048 Interpolation acceleration = 0.....	316
9.4.15 E2049 Positioning velocity >= limit value.....	317
9.4.16 E2050 Device overtemp. prewarning.....	318
9.4.17 E2051 Motor overtemp. prewarning.....	319
9.4.18 E2053 Target position out of travel range.....	319
9.4.19 E2054 Not homed.....	321
9.4.20 E2055 Feedrate override S-0-0108 = 0.....	321
9.4.21 E2056 Torque limit = 0.....	322
9.4.22 E2058 Selected positioning block has not been programmed.....	323
9.4.23 E2059 Velocity command value limit active.....	324
9.4.24 E2061 Device overload prewarning.....	324
9.4.25 E2063 Velocity command value > limit value.....	325
9.4.26 E2064 Target position out of num. range.....	326
9.4.27 E2069 Holding brake torque too low.....	326
9.4.28 E2070 Acceleration limit active.....	327
9.4.29 E2074 Encoder 1: Encoder signals disturbed.....	328
9.4.30 E2075 Encoder 2: Encoder signals disturbed.....	328
9.4.31 E2076 Measuring encoder: Encoder signals disturbed.....	329
9.4.32 E2077 Absolute encoder monitoring, motor encoder (encoder alarm).....	330
9.4.33 E2078 Absolute encoder monitoring, opt. encoder (encoder alarm).....	331
9.4.34 E2079 Absolute enc. monitoring, measuring encoder (encoder alarm).....	331
9.4.35 E2086 Prewarning supply module overload.....	332
9.4.36 E2092 Internal synchronization defective.....	332
9.4.37 E2100 Positioning velocity of master axis generator too high.....	333
9.4.38 E2101 Acceleration of master axis generator is zero.....	334
9.4.39 E2140 CCD error at node.....	334
9.4.40 E2270 Analog input 1 or 2, wire break.....	334
9.4.41 E2802 HW control of braking resistor.....	335
9.4.42 E2810 Drive system not ready for operation.....	336
9.4.43 E2814 Undervoltage in mains.....	336
9.4.44 E2816 Undervoltage in power section.....	337
9.4.45 E2818 Phase failure.....	337
9.4.46 E2819 Mains failure.....	338
9.4.47 E2820 Braking resistor overload prewarning.....	338
9.4.48 E2829 Not ready for power on.....	339

Table of Contents

	Page
10 Diagnostic Command Messages.....	341
10.1 Commands.....	341
10.1.1 C0100 Communication phase 3 transition check.....	341
10.1.2 C0200 Exit parameterization level procedure command.....	341
10.1.3 C0300 Set absolute position procedure command.....	341
10.1.4 C0400 Activate parameterization level 1 procedure command.....	342
10.1.5 C0500 Reset class 1 diagnostics, error reset.....	342
10.1.6 C0600 Drive-controlled homing procedure command.....	342
10.1.7 C0700 Load defaults proced. command (motor-spec. controller val.).....	343
10.1.8 C0720 Load defaults procedure command (safety technology).....	344
10.1.9 C0730 Load defaults procedure command (MLD).....	345
10.1.10 C0740 Command Activate field bus profile settings.....	345
10.1.11 C0750 Load defaults procedure command (factory settings).....	346
10.1.12 C0800 Load basic parameters command.....	346
10.1.13 C0900 Position spindle command.....	347
10.1.14 C1200 Commutation offset setting command.....	347
10.1.15 C1300 Positive stop drive procedure command.....	347
10.1.16 C1400 Command Get marker position.....	348
10.1.17 C1500 Cancel reference point procedure command.....	348
10.1.18 C1600 Parking axis command.....	348
10.1.19 C1700 Command measuring wheel mode.....	349
10.1.20 C1800 Command Drive optimization / command value box.....	349
10.1.21 C2000 Command Release motor holding brake.....	349
10.1.22 C2100 Command Holding system check.....	350
10.1.23 C2200 Backup working memory procedure command.....	350
10.1.24 C2300 Load working memory procedure command.....	350
10.1.25 C2400 Selectively backup working memory procedure command.....	351
10.1.26 C2500 Copy IDN from optional memory to internal memory.....	351
10.1.27 C2600 Copy IDN from internal memory to optional memory.....	352
10.1.28 C2800 Analog input adjustment command.....	352
10.1.29 C2900 Command Firmware update from MMC.....	353
10.1.30 C3000 Synchronize and store safety technology IDN.....	353
10.1.31 C3100 Recalculate actual value cycle.....	354
10.1.32 C3200 Command Calculate motor data.....	354
10.1.33 C3300 Set coordinate system procedure command.....	354
10.1.34 C3400 Shift coordinate system procedure command.....	355
10.1.35 C3500 Command Determine encoder correction values.....	355
10.1.36 C3600 Command Motor data identification.....	355
10.1.37 C3700 Manually unlocking the safety door.....	356
10.1.38 C3800 Command Apply motor holding brake.....	356
10.1.39 C3900 Command Holding brake resurfacing.....	357
10.1.40 C4000 Homing procedure command channel 2.....	357
10.1.41 C4100 Switch parameter set command.....	357
10.1.42 C4200 Drive-controlled oscillation command.....	357
10.1.43 C4300 NC-controlled homing procedure command.....	358
10.1.44 C4400 Calculate displacement procedure command.....	358

Table of Contents

	Page
10.1.45 C4500 Displacement to referenced system procedure command.....	358
10.1.46 C4600 Command Calculate motor control parameters.....	359
10.1.47 C4700 Command Activate easy startup mode.....	359
10.1.48 C4800 Command Determine cogging torque compensation table.....	359
10.1.49 C4900 PLC command.....	360
10.1.50 C5200 Communication phase 4 transition check.....	360
10.1.51 C5300 SERCOS III: Command SYNC delay measurement.....	360
10.1.52 C5400 Command Save PLC retain data on MMC.....	361
10.1.53 C5500 Command Load PLC retain data from MMC.....	361
10.1.54 C5600 Command subsequent optimization of commutation offset.....	362
10.1.55 C5800 Command Apply redundant holding brake.....	362
10.1.56 C5900 Command Resurfacing of redundant holding brake.....	362
10.1.57 C6000 Set absolute position procedure command.....	363
10.1.58 C6100 Command Activate IP settings.....	363
10.1.59 C6200 Command Enabling SM without valid brake status.....	364
10.1.60 C6400 Reboot command.....	365
10.1.61 C6500 Save operating data on backup memory.....	365
10.1.62 C6600 Restore operating data from backup memory.....	365
10.1.63 C7000 CCD: Command adjust slave addresses.....	366
10.1.64 C7100 CCD: Command Close ring.....	366
10.1.65 C7200 CCD: Command Apply I/O configuration.....	366
10.1.66 C7400 CCD: Switching to phase 2.....	367
10.1.67 C7500 CCD: Switching to phase 4.....	367
10.1.68 C7600 Command Create parameter image.....	367
10.2 Command Errors.....	368
10.2.1 Clearing Command Errors.....	368
10.2.2 C0101 Invalid parameters (-> S-0-0021).....	368
10.2.3 C0102 Limit error in parameter (-> S-0-0021).....	368
10.2.4 C0103 Parameter conversion error (->S-0-0021).....	369
10.2.5 C0104 Config. IDN for MDT not configurable.....	369
10.2.6 C0105 Maximum length for MDT exceeded.....	370
10.2.7 C0106 Config. IDNs for AT not configurable.....	370
10.2.8 C0107 Maximum length for AT exceeded.....	371
10.2.9 C0108 Time slot parameter > Sercos cycle time.....	371
10.2.10 C0109 Telegram offset unsuitable.....	372
10.2.11 C0110 Length of MDT (S-0-0010) odd.....	373
10.2.12 C0111 ID9 + Record length - 1 > length MDT (S-0-0010).....	374
10.2.13 C0112 TNcyc (S-0-0001) or TScyc (S-0-0002) error.....	374
10.2.14 C0113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error.....	375
10.2.15 C0114 T4 > TScyc (S-0-0002) - T4min (S-0-0005).....	375
10.2.16 C0115 T2 too small.....	376
10.2.17 C0116 T3 (S-0-0008) within MDT (S-0-0089 + S-0-0010).....	376
10.2.18 C0118 Order of cyclic command value configuration incorrect.....	377
10.2.19 C0119 Max. travel range too large.....	377
10.2.20 C0120 Error when reading encoder data => motor encoder.....	378
10.2.21 C0121 Incorrect parameterization of motor encoder (hardware).....	378

Table of Contents

	Page
10.2.22 C0122 Incorr. parameteriz. of motor enc. (mechanical system).....	379
10.2.23 C0123 Modulo value for motor encoder cannot be displayed.....	379
10.2.24 C0124 Motor encoder unknown.....	380
10.2.25 C0125 Error when reading encoder data => optional encoder.....	381
10.2.26 C0126 Incorrect parameterization of optional enc. (hardware).....	381
10.2.27 C0127 Incorr. parameteriz. of opt. enc. (mechanical system).....	382
10.2.28 C0128 Modulo value for optional encoder cannot be displayed.....	382
10.2.29 C0129 Optional encoder unknown.....	383
10.2.30 C0130 Maximum travel range cannot be displayed internally.....	383
10.2.31 C0131 Switching to phase 3 impossible.....	384
10.2.32 C0132 Invalid settings for controller cycle times.....	384
10.2.33 C0134 Invalid motor data in encoder memory (->S-0-0021).....	385
10.2.34 C0135 Type of construction of motor P-0-4014 incorrect.....	386
10.2.35 C0136 Several motor encoders connected.....	386
10.2.36 C0137 Error during initialization of motor data (->S-0-0021).....	387
10.2.37 C0138 Invalid control section data (->S-0-0021).....	387
10.2.38 C0139 T2 (S-0-0089)+length MDT (S-0-0010)>TScyc (S-0-0002).....	388
10.2.39 C0140 Rotary scaling not allowed.....	388
10.2.40 C0151 IDN for command value data container not allowed.....	389
10.2.41 C0152 IDN for actual value data container not allowed.....	389
10.2.42 C0153 Error at init. of synchr. motor with reluctance torque.....	390
10.2.43 C0154 Field bus: IDN for cycl. command val. not configurable.....	390
10.2.44 C0155 Field bus: Max. length for cycl. command val. exceeded.....	391
10.2.45 C0156 Field bus: IDN for cycl. actual val. not configurable.....	391
10.2.46 C0157 Field bus: Length for cycl. actual values exceeded.....	392
10.2.47 C0158 Field bus: Tcyc (P-0-4076) incorrect.....	392
10.2.48 C0159 Field bus: P-0-4077 missing for cycl. command values.....	393
10.2.49 C0160 Error when reading encoder data => measuring encoder.....	393
10.2.50 C0161 Incorr. parameterization of measuring enc. (hardware).....	394
10.2.51 C0162 Measuring encoder unknown.....	394
10.2.52 C0163 Modulo value for measuring encoder cannot be displayed.....	395
10.2.53 C0164 Incorrect measuring encoder configuration.....	395
10.2.54 C0170 Config. IDNs for connection not configurable.....	396
10.2.55 C0171 Maximum length for connections exceeded.....	396
10.2.56 C0172 Delay measurement (S-0-1024) not carried out.....	397
10.2.57 C0173 Connections (number) not configurable.....	397
10.2.58 C0174 Connection configuration not allowed.....	397
10.2.59 C0175 Producer cycle time of a connection not correct.....	398
10.2.60 C0199 Functional package selection changed. Restart.....	398
10.2.61 C0201 Invalid parameters (->S-0-0423).....	399
10.2.62 C0202 Parameter limit error (->S-0-0423).....	399
10.2.63 C0203 Parameter conversion error (->S-0-0423).....	400
10.2.64 C0210 Feedback 2 required (->S-0-0423).....	401
10.2.65 C0212 Invalid control section data (->S-0-0423).....	401
10.2.66 C0218 Double signal selection master axis format converter.....	402
10.2.67 C0219 Max. travel range too large.....	402

Table of Contents

	Page
10.2.68 C0220 Error when initializing position of encoder 1.....	403
10.2.69 C0221 Initialization velocity encoder 1 too high.....	404
10.2.70 C0223 Invalid settings for controller cycle times.....	404
10.2.71 C0224 Error when initializing position of encoder 2.....	404
10.2.72 C0225 Initialization velocity encoder 2 too high.....	405
10.2.73 C0227 Error when initializing position of measuring encoder.....	405
10.2.74 C0228 Initialization velocity measuring encoder too high.....	406
10.2.75 C0229 Field bus: IDN for cycl. command val. not configurable.....	407
10.2.76 C0230 Field bus: Max. length for cycl. command val. exceeded.....	407
10.2.77 C0231 Field bus: IDN for cycl. actual val. not configurable.....	407
10.2.78 C0232 Field bus: Length for cycl. actual values exceeded.....	408
10.2.79 C0233 Field bus: Tcyc (P-0-4076) incorrect.....	408
10.2.80 C0234 Field bus: P-0-4077 missing for cycl. command values.....	409
10.2.81 C0238 Order of cyclic command value configuration incorrect.....	409
10.2.82 C0239 IDN for command value data container not allowed.....	410
10.2.83 C0240 IDN for actual value data container not allowed.....	410
10.2.84 C0241 Incorrect parameterization of motion task.....	411
10.2.85 C0242 Multiple configuration of a parameter (->S-0-0423).....	411
10.2.86 C0243 Brake check function not possible.....	413
10.2.87 C0244 Act. modulo value cycle greater than max. travel range.....	414
10.2.88 C0245 Operation mode configuration (->S-0-0423) not allowed.....	415
10.2.89 C0246 Trav. range lim. switch not ass. to dig. input.....	416
10.2.90 C0247 Dig. output already assigned to other axis.....	417
10.2.91 C0248 Dig. input assigned differently to axes.....	417
10.2.92 C0249 Dig. I/Os: Bit number too large.....	418
10.2.93 C0250 Probe inputs incorrectly configured.....	418
10.2.94 C0251 Error during synchronization to master communication.....	419
10.2.95 C0252 Incorrect MLD initialization (write access->S-0-0423).....	419
10.2.96 C0253 Error in combination operation mode - encoder (->S-0-0423).....	420
10.2.97 C0254 Configuration error PROFIsafe.....	420
10.2.98 C0255 Safety command for system init. incorrect.....	421
10.2.99 C0256 Safety technology configuration error.....	421
10.2.100 C0257 Error in safety technology encoder initialization.....	422
10.2.101 C0258 Error in relation TNcyc (S-0-0001) to fine interpol.....	423
10.2.102 C0259 MLD configuration error (->S-0-0423).....	423
10.2.103 C0260 Incremental enc. emulator resol. cannot be displayed.....	424
10.2.104 C0261 Emulator (P-0-0902) activated for both axes.....	425
10.2.105 C0265 Incorrect CCD address configuration.....	425
10.2.106 C0266 Incorrect CCD phase switch.....	426
10.2.107 C0267 CCD timeout phase switch.....	426
10.2.108 C0270 Error when reading encoder data => motor encoder.....	427
10.2.109 C0271 Incorrect parameterization of motor encoder (hardware).....	428
10.2.110 C0272 Incorr. parameteriz. of motor enc. (mechanical system).....	428
10.2.111 C0273 Modulo value for motor encoder cannot be displayed.....	429
10.2.112 C0274 Motor encoder unknown.....	429
10.2.113 C0275 Error when reading encoder data => optional encoder.....	430

Table of Contents

	Page
10.2.114 C0276 Incorrect parameterization of optional enc. (hardware).....	430
10.2.115 C0277 Incorr. parameteriz. of opt. enc. (mechanical system).....	431
10.2.116 C0278 Modulo value for optional encoder cannot be displayed.....	431
10.2.117 C0279 Optional encoder unknown.....	432
10.2.118 C0280 Maximum travel range cannot be displayed internally.....	433
10.2.119 C0281 Commutation via encoder-2 impossible.....	433
10.2.120 C0282 Sensorless posit. of synchr. motors, invalid ctrl parameters.....	434
10.2.121 C0283 Error during initialization of motor control (->S-0-0423).....	434
10.2.122 C0284 Invalid motor data in encoder memory (->S-0-0423).....	435
10.2.123 C0285 Type of construction of motor P-0-4014 incorrect.....	436
10.2.124 C0286 Several motor encoders connected.....	437
10.2.125 C0287 Error during initialization of motor data (->S-0-0423).....	437
10.2.126 C0288 Rotary scaling not allowed.....	439
10.2.127 C0289 Error at init. of synchr. motor with reluctance torque.....	439
10.2.128 C0290 Error when reading encoder data => measuring encoder.....	440
10.2.129 C0291 Incorr. parameterization of measuring enc. (hardware).....	441
10.2.130 C0292 Measuring encoder unknown.....	442
10.2.131 C0293 Modulo value for measuring encoder cannot be displayed.....	442
10.2.132 C0294 Incorrect measuring encoder configuration.....	443
10.2.133 C0298 Impossible to exit parameterization level.....	443
10.2.134 C0299 Configuration changed. Restart.....	444
10.2.135 C0301 Measuring system unavailable.....	444
10.2.136 C0302 Absolute evaluation of measuring system impossible.....	445
10.2.137 C0303 Absolute encoder offset cannot be saved.....	445
10.2.138 C0401 Switching not allowed.....	446
10.2.139 C0403 Switching to CCD phase 2 impossible.....	446
10.2.140 C0501 Error clearing only in parameter mode.....	447
10.2.141 C0601 Homing only possible with drive enable.....	447
10.2.142 C0602 Distance home switch - reference mark erroneous.....	448
10.2.143 C0603 Homing impossible with optional encoder.....	448
10.2.144 C0604 Homing impossible with absolute encoder.....	449
10.2.145 C0606 Reference mark not detected.....	449
10.2.146 C0607 Reference cam input not assigned.....	450
10.2.147 C0608 Pos. stop a. HW lim. switch not allowed f. modulo axes.....	450
10.2.148 C0609 Different travel directions parameterized.....	450
10.2.149 C0610 Absolute encoder offset could not be saved.....	451
10.2.150 C0702 Default parameters not available.....	451
10.2.151 C0703 Default parameters invalid.....	452
10.2.152 C0704 Parameters not copyable.....	452
10.2.153 C0706 Error when reading the controller parameters.....	453
10.2.154 C0722 Parameter default value incorrect (-> S-0-0423).....	453
10.2.155 C0723 Safety command for load defaults procedure incorrect.....	454
10.2.156 C0724 Timeout of safety command for load defaults procedure.....	454
10.2.157 C0751 Parameter default value incorrect (-> S-0-0423).....	455
10.2.158 C0752 Locked with password.....	456
10.2.159 C0799 An invalid index was set.....	456

Table of Contents

	Page
10.2.160 C0851 Parameter default value incorrect (-> S-0-0021).....	457
10.2.161 C0852 Locked with password.....	457
10.2.162 C0902 Spindle positioning requires drive enable.....	457
10.2.163 C0903 Error during initialization.....	458
10.2.164 C0906 Error during search for zero pulse.....	458
10.2.165 C1204 Error in offset calculation.....	459
10.2.166 C1208 No adjustment with asynchronous motor.....	459
10.2.167 C1209 Proceed to phase 4.....	459
10.2.168 C1211 Commutation offset could not be determined.....	460
10.2.169 C1212 Motion range exceeded during commutation.....	460
10.2.170 C1214 Command only possible with linear synchronous motor.....	461
10.2.171 C1215 Command only possible in 'bb'.....	461
10.2.172 C1216 Commutation determination not selected.....	462
10.2.173 C1217 Setting only possible in 'Ab'.....	462
10.2.174 C1218 Automatic commutation: Current too low.....	462
10.2.175 C1219 Automatic commutation: Overcurrent.....	463
10.2.176 C1220 Automatic commutation: Timeout.....	464
10.2.177 C1221 Automatic commutation: Iteration without result.....	464
10.2.178 C1222 Error when writing offset parameters.....	465
10.2.179 C1223 Command execution impossible.....	465
10.2.180 C1301 Class 1 diagnostics error at command start.....	466
10.2.181 C1402 Faulty reference mark signal.....	466
10.2.182 C1701 Measuring wheel mode not possible.....	466
10.2.183 C1801 Start requires drive enable.....	467
10.2.184 C1802 Motor feedback data not valid.....	467
10.2.185 C1803 Inertia detection failed.....	468
10.2.186 C1804 Automatic controller setting failed.....	469
10.2.187 C1805 Travel range invalid.....	469
10.2.188 C1806 Travel range exceeded.....	470
10.2.189 C1807 Determining travel range only via travel distance.....	471
10.2.190 C1808 Drive not homed.....	471
10.2.191 C2001 Command not enabled.....	471
10.2.192 C2101 Holding system check only possible with drive enable.....	472
10.2.193 C2103 Holding brake: Torque too low.....	472
10.2.194 C2104 Command execution impossible.....	473
10.2.195 C2105 Load of holding system greater than test torque.....	473
10.2.196 C2106 Test torque of holding system not reached.....	474
10.2.197 C2107 Redundant holding brake: Torque too low.....	477
10.2.198 C2108 Error when releasing the holding system.....	477
10.2.199 C2109 SBS: Test torque invalid.....	478
10.2.200 C2202 Error when writing data to non-volatile memory.....	479
10.2.201 C2301 Error when reading non-volatile memory.....	479
10.2.202 C2302 Error when converting parameters.....	479
10.2.203 C2402 Error when saving parameters.....	480
10.2.204 C2502 Error when accessing the MMC.....	480
10.2.205 C2504 Error when writing data to internal memory.....	481

Table of Contents

	Page
10.2.206 C2602 Error when accessing the MMC.....	482
10.2.207 C2604 Error when reading the internal memory.....	483
10.2.208 C2801 Analog input not configured.....	483
10.2.209 C2802 Oscillations of input signal outside tolerance range.....	484
10.2.210 C2803 Measured values at zero point and max. value identical.....	484
10.2.211 C2804 Automatic adjustment failed.....	485
10.2.212 C2903 Error when accessing the MMC.....	485
10.2.213 C2904 Error when accessing the flash.....	486
10.2.214 C2905 Programmed firmware defective.....	486
10.2.215 C3001 Synchronization and storage failed.....	487
10.2.216 C3101 Act. modulo value cycle greater than max. travel range.....	488
10.2.217 C3102 Drive is still in drive enable.....	488
10.2.218 C3201 Incorrect input for current.....	488
10.2.219 C3202 Incorrect input for voltage.....	489
10.2.220 C3203 Incorrect input for frequency.....	489
10.2.221 C3204 Incorrect input for speed.....	489
10.2.222 C3205 Incorrect input for power factor.....	490
10.2.223 C3206 Incorrect input for power.....	490
10.2.224 C3207 Type plate list incomplete.....	491
10.2.225 C3208 Error when writing parameters (->S-0-0423).....	491
10.2.226 C3209 Command execution impossible.....	491
10.2.227 C3501 Acquisition velocity not allowed.....	492
10.2.228 C3502 Motor encoder not available.....	492
10.2.229 C3503 Optional encoder not available.....	493
10.2.230 C3504 Measuring encoder not available.....	493
10.2.231 C3505 No encoder selected.....	494
10.2.232 C3506 Correction value table cannot be stored.....	494
10.2.233 C3601 Motor not or not correctly connected.....	495
10.2.234 C3602 Determined values invalid.....	495
10.2.235 C3603 Device current limit too low.....	496
10.2.236 C3604 Error when writing parameters (->S-0-0423).....	496
10.2.237 C3605 Motor turning.....	497
10.2.238 C3606 Type of construction of motor not allowed.....	497
10.2.239 C3607 Motor revolution/motion impeded.....	498
10.2.240 C3608 Incorrect motor phases or rotational direction of encoder.....	498
10.2.241 C3609 Incorrect number of pole pairs or number of encoder lines.....	499
10.2.242 C3610 No encoder: Validation check impossible.....	499
10.2.243 C3611 Test velocity not reached.....	500
10.2.244 C3701 Error when manually unlocking the safety door.....	500
10.2.245 C3901 Resurfacing of holding brake only possible with drive enable.....	501
10.2.246 C3902 Error during resurfacing of holding brake.....	501
10.2.247 C3903 Command execution impossible.....	502
10.2.248 C4001 Error during safe homing procedure.....	502
10.2.249 C4002 Incorrect distance of dedicated point channel 1-2.....	503
10.2.250 C4101 Switching only possible without AF.....	504
10.2.251 C4102 Switching only possible in parameter mode.....	504

Table of Contents

	Page
10.2.252 C4103 Preselect parameter set forbidden value.....	505
10.2.253 C4104 Error during parameter set switching (->S-0-0423).....	505
10.2.254 C4201 Oscillation requires drive enable.....	505
10.2.255 C4202 Oscillation command speed cannot be reached.....	506
10.2.256 C4302 Distance home switch - reference mark erroneous.....	506
10.2.257 C4304 Homing impossible with absolute encoder.....	507
10.2.258 C4306 Reference mark not detected.....	507
10.2.259 C4307 Reference cam input not assigned.....	508
10.2.260 C4308 Pos. stop a. HW lim. switch not allowed f. modulo axes.....	508
10.2.261 C4601 Error when writing parameters (->S-0-0423).....	508
10.2.262 C4701 Drive active, activation of easy startup impossible.....	509
10.2.263 C4801 Cogging torque compensation: Measuring vel. too high.....	509
10.2.264 C4802 Cogging torque compensation: Measuring vel. too low.....	510
10.2.265 C4803 Cogging torque compensation: Inadmissible acceleration.....	510
10.2.266 C4804 Cogging torque comp.: Err. when storing corr. val table.....	511
10.2.267 C4805 Cogging torque comp.: Motor measuring system not homed.....	511
10.2.268 C4901 PLC command error no. 1.....	512
10.2.269 C4902 PLC command error no. 2.....	512
10.2.270 C4903 PLC command error no. 3.....	512
10.2.271 C4904 PLC command error no. 4.....	513
10.2.272 C4910 PLC command timeout.....	513
10.2.273 C5301 SERCOS III: Delay measurement failed.....	514
10.2.274 C5401 PLC program not ready for retain data backup.....	514
10.2.275 C5402 Error when writing data to the MMC.....	515
10.2.276 C5501 PLC program not ready for loading retain data.....	515
10.2.277 C5502 MMC not available or not OK.....	516
10.2.278 C5503 PLC retain data do not match PLC program.....	516
10.2.279 C5504 Unknown format in PLC retain file.....	517
10.2.280 C5505 Invalid PLC retain data.....	517
10.2.281 C5601 Command requires drive enable.....	518
10.2.282 C5602 Axis blocked.....	518
10.2.283 C5603 Timeout: Axis in motion.....	518
10.2.284 C5801 Command Apply redundant holding brake not possible.....	519
10.2.285 C5901 Comm. Resurfacing of red. holding brake only possible AF.....	519
10.2.286 C5902 Error when resurfacing redundant holding brake.....	520
10.2.287 C5903 Command execution impossible.....	520
10.2.288 C6001 Measuring system unavailable.....	521
10.2.289 C6002 Absolute evaluation of measuring system impossible.....	521
10.2.290 C6003 Absolute encoder offset cannot be saved.....	522
10.2.291 C6004 Command cannot be executed under drive enable.....	522
10.2.292 C6101 Incorrect IP settings.....	522
10.2.293 C6201 Command execution impossible.....	523
10.2.294 C6401 reboot command impossible.....	524
10.2.295 C6501 Error when writing backup data (backup memory).....	524
10.2.296 C6502 Error when reading backup data (device).....	525
10.2.297 C6503 Error when checking backup data (comparison).....	526

Table of Contents

	Page
10.2.298 C6601 Error when reading backup data (backup memory).....	526
10.2.299 C6602 Error when writing backup data (device).....	527
10.2.300 C6603 Error when writing comparative data (backup memory).....	528
10.2.301 C6604 Error when reading comparative data (device).....	529
10.2.302 C6605 Warning, restoration incomplete (device).....	529
10.2.303 C7001 CCD: Impossible to adjust slave addresses.....	530
10.2.304 C7101 CCD: Impossible to close ring.....	531
10.2.305 C7201 CCD: Impossible to apply I/O configuration.....	531
10.2.306 C7401 CCD: Impossible to switch to phase 2.....	532
10.2.307 C7501 CCD: Impossible to switch to phase 4.....	532
10.2.308 C7601 Memory access impossible.....	533
10.2.309 C7602 Slave access impossible.....	533
11 Extended Diagnosis (P-0-3219).....	535
11.1 Displays C0254 to C0265.....	535
11.2 Displays C0723 to C2109.....	537
11.3 Displays C4001, C4002 and C6201.....	538
11.4 Displays Exxx, E3107 and E3115.....	539
11.5 Displays F3112 to F3135.....	539
11.6 Display F3140.....	544
11.7 Displays F3141 and F3142.....	547
11.8 Displays F3144 to F3152.....	548
11.9 Displays F7010 to F7022.....	551
11.10 Displays F7030 to F7031.....	552
11.11 Displays F7040 to F7043.....	553
11.12 Displays F7050 to F7051.....	554
11.13 Displays F8027 to F8135.....	556
11.14 Display F8201.....	557
12 Extended Diagnosis (P-0-3219) as of MPx07.....	559
12.1 Displays C0254 to C0265.....	559
12.2 Displays C0723 to C2109.....	561
12.3 Displays C4001, C4002 and C6201.....	563
12.4 Displays Exxx, E3107 and E3115.....	563
12.5 Displays F3112 to F3135.....	564
12.6 Display F3140.....	570
12.7 Displays F3141 and F3142.....	573
12.8 Displays F3144 to F3152.....	574
12.9 Displays F7010 to F7022.....	576
12.10 Displays F7030 to F7031.....	577
12.11 Displays F7040 to F7043.....	579
12.12 Displays F7050 to F7051.....	581
12.13 Displays F8030 to F8135.....	583
12.14 Display F8201.....	584

Table of Contents

	Page
13 Rexroth IndraDrive Mi Diagnostic Display.....	585
13.1 KSM Distributed Servo Drive / KMS Distributed Drive Controller.....	585
13.1.1 LED H14.....	585
13.1.2 Diagnostic Display as of MPB-07V12 / MPx-08VRS.....	585
13.1.3 Diagnostic Display up to MPB-07V10.....	586
13.2 Electronic Control System KCU.....	587
14 Handling, Diagnostic and Service Functions.....	589
14.1 Firmware Replacement.....	589
14.2 Firmware Download.....	589
14.3 Messages During Firmware Download.....	589
14.4 FL: DL	589
14.5 FL:ERASE	590
14.6 FL: PROG	590
14.7 FL: CKS	590
14.8 FL:E ADR	590
14.9 FL:E SEC	590
14.10 FL:E FW	590
14.11 FL:E LD	591
14.12 FL:E SEQ	591
14.13 FL:F9002	591
14.14 FL:F2100	591
14.15 FL:F CKS	591
14.16 FL:F ACC	592
14.17 FL:F2101	592
14.18 FL:F8122	592
14.19 FL:F8129	592
14.20 FL:F8130	592
14.21 FL:F8120	593
15 Notes for Machine Operators.....	595
15.1 General Information.....	595
15.2 Diagnosing Malfunction and Removing Errors.....	595
15.3 Contacting the Service Department	596
16 Notes for Installation Programmers.....	597
16.1 How to Handle Command Errors.....	597
16.2 How to Handle Errors.....	599
16.3 How to Handle Warnings.....	601
17 Service and Support.....	603
Index.....	605