

Table of Contents

	Page
5.2	Operating states of the supply unit Hxx05..... 42
6	Diagnostic Messages when Booting the Devices..... 43
6.1	Devices with Valid Firmware..... 43
6.2	Devices without Valid Firmware..... 43
6.3	IndraMotion MLD Booting Messages..... 43
6.4	"Safe Motion" Booting Messages..... 44
7	Diagnostic Status Messages..... 45
7.1	A0000 Communication phase 0..... 45
7.2	A0001 Communication phase 1..... 45
7.3	A0002 Communication phase 2..... 46
7.4	A0003 Communication phase 3..... 46
7.5	A0004 Initialization..... 47
7.6	A0005 Pre-Operational..... 47
7.7	A0006 Safe-Operational..... 48
7.8	A0008 sercos: NRT-Mode..... 48
7.9	A0009 Automatic baud rate detection for sercos..... 48
7.10	A0010 Drive HALT..... 49
7.11	A0011 STO/SBC active..... 49
7.12	A0012 Control and power sections ready for operation..... 49
7.13	A0013 Ready for power on..... 50
7.14	A0022 WAIT_PRM..... 50
7.15	A0023 WAIT_CFG..... 51
7.16	A0024 Connection established..... 51
7.17	A0050 Parameterization level 1 active..... 51
7.18	A0051 Operating mode..... 52
7.19	A0100 Torque control..... 52
7.20	A0101 Velocity control..... 52
7.21	A0102 Position mode, encoder 1..... 53
7.22	A0103 Position mode, encoder 2..... 53
7.23	A0104 Position mode lagless, encoder 1..... 53
7.24	A0105 Position mode lagless, encoder 2..... 54
7.25	A0106 Drive-internal interpolation, encoder 1..... 54
7.26	A0107 Drive-internal interpolation, encoder 2..... 54
7.27	A0108 Drive controlled interpolation, lagless, encoder 1..... 55
7.28	A0109 Drive controlled interpolation, lagless, encoder 2..... 55
7.29	A0110 Velocity synchronization, virtual master axis..... 55
7.30	A0111 Velocity synchronization, real master axis..... 56
7.31	A0112 Phase synchronization, encoder 1, virtual master axis..... 56
7.32	A0113 Phase synchronization, encoder 2, virtual master axis..... 56
7.33	A0114 Phase synchronization, encoder 1, real master axis..... 56
7.34	A0115 Phase synchronization, encoder 2, real master axis..... 57
7.35	A0116 Phase synchr. lagless, encoder 1, virtual master axis..... 57
7.36	A0117 Phase synchr. lagless, encoder 2, virtual master axis..... 57

Table of Contents

	Page
7.37 A0118 Phase synchr. lagless, encoder 1, real master axis.....	58
7.38 A0119 Phase synchr. lagless, encoder 2, real master axis.....	58
7.39 A0128 Cam, encoder 1, virtual master axis.....	58
7.40 A0129 Cam, encoder 2, virtual master axis.....	58
7.41 A0130 Cam, encoder 1, real master axis.....	59
7.42 A0131 Cam, encoder 2, real master axis.....	59
7.43 A0132 Cam, lagless, encoder 1, virt. master axis.....	59
7.44 A0133 Cam, lagless, encoder 2, virt. master axis.....	60
7.45 A0134 Cam, lagless, encoder 1, real master axis.....	60
7.46 A0135 Cam, lagless, encoder 2, real master axis.....	60
7.47 A0136 MotionProfile, encoder 1, virtual master axis.....	61
7.48 A0137 MotionProfile, encoder 2, virtual master axis.....	61
7.49 A0138 MotionProfile, encoder 2, real master axis.....	61
7.50 A0139 MotionProfile, encoder 1, real master axis.....	62
7.51 A0140 MotionProfile lagless, encoder 1, virtual master axis.....	62
7.52 A0141 MotionProfile lagless, encoder 2, virtual master axis.....	62
7.53 A0142 MotionProfile lagless, encoder 1, real master axis.....	63
7.54 A0143 MotionProfile lagless, encoder 2, real master axis.....	63
7.55 A0150 Drive-controlled positioning, encoder 1.....	64
7.56 A0151 Drive-controlled positioning, encoder 1, lagless.....	64
7.57 A0152 Drive-controlled positioning, encoder 2.....	65
7.58 A0153 Drive-controlled positioning, encoder 2, lagless.....	65
7.59 A0154 Position mode drive controlled, encoder 1.....	66
7.60 A0155 Position mode drive controlled, encoder 2.....	66
7.61 A0156 Position mode lagless, encoder 1 drive controlled.....	66
7.62 A0157 Position mode lagless, encoder 2 drive controlled.....	67
7.63 A0160 Pos. ctrl drive-controlled with ctrl word of axis controller.....	67
7.64 A0161 Drive-controlled posit. with ctrl word of axis controller.....	68
7.65 A0162 Positioning block mode.....	68
7.66 A0163 Position synchronization.....	69
7.67 A0164 Velocity synchronization.....	69
7.68 A0165 Position control with control word of axis controller.....	69
7.69 A0166 Drive-internal interpolat. with ctrl word of axis controller.....	70
7.70 A0206 Positioning block mode, encoder 1.....	70
7.71 A0207 Positioning block mode lagless, encoder 1.....	70
7.72 A0210 Positioning block mode, encoder 2.....	71
7.73 A0211 Positioning block mode lagless, encoder 2.....	71
7.74 A0300 Condition as supplied SMO: Output stage locked.....	71
7.75 A0301 Special mode Safe motion 1 active.....	71
7.76 A0302 Special mode Safe motion 2 active.....	72
7.77 A0303 Special mode Safe motion 3 active.....	72
7.78 A0304 Special mode Safe motion 4 active.....	72
7.79 A0305 Special mode Safe motion 5 active.....	73
7.80 A0306 Special mode Safe motion 6 active.....	73
7.81 A0307 Special mode Safe motion 7 active.....	73
7.82 A0308 Special mode Safe motion 8 active.....	73

Table of Contents

	Page
7.83 A0309 Special mode Safe motion 9 active.....	74
7.84 A0310 Special mode Safe motion 10 active.....	74
7.85 A0311 Special mode Safe motion 11 active.....	74
7.86 A0312 Special mode Safe motion 12 active.....	75
7.87 A0313 Special mode Safe motion 13 active.....	75
7.88 A0314 Special mode Safe motion 14 active.....	75
7.89 A0315 Special mode Safe motion 15 active.....	76
7.90 A0316 Special mode Safe motion 16 active.....	76
7.91 A0320 EMERGENCY STOP active.....	76
7.92 A0321 Special mode Safe standstill active with STO.....	76
7.93 A0322 Special mode Safe standstill active with SOS.....	77
7.94 A0323 SMO configuration mode active.....	77
7.95 A0403 Quick stop with probe detection is active.....	77
7.96 A0500 Supply module in voltage control.....	77
7.97 A0501 Supply module in current control.....	78
7.98 A0502 Supply module in operation.....	78
7.99 A0503 DC bus charging active.....	78
7.100 A0504 Control section ready for oper., mains voltage not available.....	78
7.101 A0505 Power supply module ready for operation.....	78
7.102 A0506 Supply module in rectifier mode.....	79
7.103 A0520 DC bus quick discharge active.....	79
7.104 A4000 Automatic drive check and adjustment.....	79
7.105 A4001 Drive deceleration to standstill.....	80
7.106 A4002 Drive in automatic mode.....	80
7.107 A4003 Setting-up mode is active.....	80
8 Error messages.....	81
8.1 Fatal System Errors (F9xxx).....	81
8.1.1 Behavior in the Case of Fatal System Errors.....	81
8.1.2 F9001 Error internal function call.....	81
8.1.3 F9002 Error internal RTOS function call.....	81
8.1.4 F9003 Watchdog.....	82
8.1.5 F9005 Processor exception.....	82
8.1.6 F9100 Hardware watchdog.....	82
8.1.7 F9200 Booting error programming module.....	83
8.1.8 F9201 Booting error device.....	83
8.1.9 F9202 Processor watchdog.....	83
8.2 Fatal Errors (F8xxx).....	84
8.2.1 Behavior in the Case of Fatal Errors (F8xxx).....	84
8.2.2 F8000 Fatal hardware error.....	85
8.2.3 F8001 Telegram failure, power section parallel bus.....	85
8.2.4 F8003 Communication error with mains connection module.....	85
8.2.5 F8010 Autom. commutation: Max. motion range when moving back.....	86
8.2.6 F8011 Commutation offset could not be determined.....	87
8.2.7 F8012 Autom. commutation: Max. motion range.....	87
8.2.8 F8013 Automatic commutation: Current too low.....	88

Table of Contents

	Page
8.2.9 F8014 Automatic commutation: Overcurrent.....	89
8.2.10 F8015 Automatic commutation: Timeout.....	89
8.2.11 F8016 Automatic commutation: Iteration without result.....	89
8.2.12 F8017 Automatic commutation: Incorrect commutation adjustment.....	90
8.2.13 F8018 Device overtemperature shutdown.....	91
8.2.14 F8022 Enc. 1: Enc. signals incorr. (can be cleared in ph. 2).....	92
8.2.15 F8025 Overvoltage in power section.....	93
8.2.16 F8027 STO/SBC while drive enabled.....	93
8.2.17 F8028 Overcurrent in power section.....	94
8.2.18 F8034 Communication error, power section modules.....	94
8.2.19 F8042 Encoder 2 error: Signal amplitude incorrect.....	95
8.2.20 F8044 Device-internal module communication disturbed.....	95
8.2.21 F8060 Overcurrent in power section.....	96
8.2.22 F8064 Interruption of motor phase.....	96
8.2.23 F8069 Error in device-internal power supply.....	97
8.2.24 F8070 Control voltage failure.....	98
8.2.25 F8071 Overvoltage of control voltage.....	98
8.2.26 F8076 Error in error angle loop.....	99
8.2.27 F8078 Speed loop error.....	100
8.2.28 F8079 Velocity limit value exceeded.....	100
8.2.29 F8091 Power section defective.....	101
8.2.30 F8099 Fatal error in power section.....	102
8.2.31 F8100 Error when initializing the parameter handling.....	102
8.2.32 F8102 Error when initializing power section.....	103
8.2.33 F8118 Invalid power section/firmware combination.....	103
8.2.34 F8120 Invalid control section/firmware combination.....	104
8.2.35 F8122 Control section defective.....	104
8.2.36 F8128 Error when initializing an optional interface.....	104
8.2.37 F8129 Incorrect optional module firmware.....	105
8.2.38 F8140 Fatal CCD error.....	105
8.2.39 F8300 Dynamization pulse width incorrect.....	105
8.2.40 F8301 Error when checking selection signals.....	106
8.2.41 F8302 Error when checking switch-off channels STO/SBC.....	107
8.2.42 F8303 System error STO/SBC.....	107
8.2.43 F8304 SMO: System error.....	107
8.2.44 F8313 SMO: Incorrect parameterization.....	108
8.2.45 F8314 SMO: Incorrect configuration.....	108
8.2.46 F8315 SMO: Error in encoder initialization.....	110
8.2.47 F8316 SMO: Incorrect change of system state.....	110
8.2.48 F8319 SMO: INIT system error.....	111
8.2.49 F8320 SMO: Invalid module/firmware combination.....	111
8.2.50 F8321 SMO: Invalid circuit board/firmware combination.....	111
8.2.51 F8323 SMO: Error in deactivation.....	111
8.2.52 F8324 SMO: Error in activation.....	111
8.2.53 F8330 SMO: Configuration data record has not been activated.....	112
8.2.54 F8350 Maximum transition time exceeded.....	113

Table of Contents

	Page
8.2.55 F8351 Safely-monitored deceleration exceeded.....	114
8.2.56 F8352 Drive enable set in STO.....	114
8.2.57 F8353 SBC system error.....	115
8.2.58 F8354 Error when checking interrupting circuits.....	115
8.2.59 F8355 Incorrect processing of diagnostic message.....	116
8.2.60 F8356 SMO: Incorrect parameter processing.....	116
8.2.61 F8359 SMO: Encoder evaluation error.....	116
8.2.62 F8395 SMO: Drive system configuration error.....	117
8.2.63 F8813 Connection error mains choke.....	117
8.2.64 F8815 Overvoltage in mains.....	117
8.2.65 F8817 Overvoltage in power section.....	118
8.2.66 F8820 Braking resistor overload.....	118
8.2.67 F8821 Transistor short circuit of braking resistor control.....	119
8.2.68 F8830 Power section error.....	119
8.2.69 F8833 Ground fault current (does not decay).....	119
8.2.70 F8835 Inconsistency in power section configuration.....	120
8.2.71 F8836 DC bus balancing monitor.....	121
8.2.72 F8838 Overcurrent external braking resistor.....	121
8.2.73 F8860 Overcurrent in power section (does not decay).....	121
8.2.74 F8899 Fatal error in power section.....	122
8.3 Safety Technology Errors (F7xxx).....	123
8.3.1 Behavior in Case of Safety Technology Errors.....	123
8.3.2 F7010 Safely-limited increment exceeded.....	123
8.3.3 F7013 Velocity threshold exceeded.....	124
8.3.4 F7014 Timeout in safely-monitored transient oscillation.....	125
8.3.5 F7020 Safe maximum speed exceeded.....	125
8.3.6 F7030 Position window for safe operating stop exceeded.....	126
8.3.7 F7031 Incorrect direction of motion.....	126
8.3.8 F7032 Forced zone safety.....	127
8.3.9 F7033 Safety zone module: Hardware error.....	128
8.3.10 F7034 Safety zone module: SDL error.....	128
8.3.11 F7035 Zone bus error.....	129
8.3.12 F7050 Maximum transition time exceeded.....	130
8.3.13 F7051 Safely-monitored deceleration exceeded.....	131
8.3.14 F7052 Selected target velocity exceeded.....	133
8.3.15 F7100 F7 test error during machine acceptance test.....	133
8.4 Errors of Category F6xxx.....	133
8.4.1 Behavior in Case of Errors of Category F6xxx.....	133
8.4.2 F6002 Assignment of encoder for synchronization is not allowed.....	134
8.4.3 F6003 Motion step skipped.....	134
8.4.4 F6004 Error in MotionProfile.....	135
8.4.5 F6005 Cam table invalid.....	136
8.4.6 F6006 Incorrect initialization of effective master axis position.....	137
8.4.7 F6007 Switching to non-initialized operation mode.....	137
8.4.8 F6010 PLC runtime error.....	138
8.4.9 F6024 Maximum braking time exceeded.....	138

Table of Contents

	Page
8.4.10 F6028 Position limit value exceeded (overflow).....	139
8.4.11 F6029 Positive position limit exceeded.....	140
8.4.12 F6030 Negative position limit exceeded.....	141
8.4.13 F6034 Emergency-Stop activated.....	142
8.4.14 F6042 Both travel range limit switches activated.....	142
8.4.15 F6043 Positive travel range limit switch activated.....	143
8.4.16 F6044 Negative travel range limit switch activated.....	144
8.4.17 F6058 Internal overflow by positioning input.....	144
8.4.18 F6059 Incorrect command value direction when positioning.....	145
8.4.19 F6140 CCD slave error (emergency halt).....	146
8.4.20 F6200 Velocity command value > standstill window in SOS.....	146
8.5 Interface Errors (F4xxx).....	146
8.5.1 Behavior in Case of Interface Errors	146
8.5.2 F4001 Sync telegram failure.....	147
8.5.3 F4002 RTD telegram failure.....	147
8.5.4 F4003 Invalid communication phase shutdown.....	148
8.5.5 F4004 Error during phase progression.....	148
8.5.6 F4005 Error during phase regression.....	149
8.5.7 F4006 Phase switching without ready signal.....	149
8.5.8 F4009 Bus failure.....	149
8.5.9 F4011 Communication watchdog: Overload of cyclic communication.....	151
8.5.10 F4012 Incorrect I/O length.....	152
8.5.11 F4016 PLC double real-time channel failure.....	152
8.5.12 F4017 sercos: Incorrect sequence during phase switch.....	152
8.5.13 F4020 sercos: Cable break (L+F to NRT).....	153
8.5.14 F4034 Emergency-Stop activated.....	153
8.5.15 F4140 CCD communication error.....	154
8.5.16 F4141 CCD: IO configuration changed.....	154
8.5.17 F4142 CCD: Ring buffer overflow.....	155
8.5.18 F4150 CSAL error.....	155
8.6 Non-Fatal Safety Technology Errors (F3xxx).....	156
8.6.1 Behavior in the Case of Non-Fatal Safety Technology Errors (F3xxx).....	156
8.6.2 F3010 SMO: IO mapper inputs error.....	156
8.6.3 F3100 F3 test error during machine acceptance test.....	157
8.6.4 F3101 Axis validation missing.....	157
8.6.5 F3115 Brake check time interval exceeded.....	157
8.6.6 F3119 Error in initialization of P-0-3212.....	158
8.6.7 F3131 Control error, safe inputs of HSZ.....	158
8.6.8 F3132 SDL validation error.....	159
8.6.9 F3134 Dynamization time interval incorrect.....	159
8.6.10 F3141 Operating status selection validation error.....	160
8.6.11 F3142 Activation time of enabling control exceeded.....	160
8.6.12 F3150 Safety zone module: Temperature monitoring error.....	161
8.6.13 F3151 Safety zone module: 24 volt error.....	161
8.6.14 F3152 Safety zone module: DYN error.....	162
8.6.15 F3153 Safety zone module: SZE/SZA error.....	162

Table of Contents

	Page
8.6.16 F3304 SMO: System error.....	162
8.6.17 F3360 SMO: Local I/O system error.....	162
8.6.18 F3450 CSS stack error.....	163
8.7 Non-fatal Errors (F2xxx).....	164
8.7.1 Behavior in Case of Non-Fatal Errors.....	164
8.7.2 F2001 Communication error, power section parallel bus.....	165
8.7.3 F2002 Assignment of encoder for synchronization is not allowed.....	165
8.7.4 F2003 Motion step skipped.....	166
8.7.5 F2004 Error in MotionProfile.....	166
8.7.6 F2005 Cam table invalid.....	168
8.7.7 F2007 Switching to non-initialized operation mode.....	168
8.7.8 F2008 RL The motor type has changed.....	169
8.7.9 F2009 PL Load parameter default values.....	170
8.7.10 F2010 Error when initializing digital I/O (-> S-0-0423).....	171
8.7.11 F2011 PLC - Error no. 1.....	171
8.7.12 F2012 PLC - Error no. 2.....	171
8.7.13 F2013 PLC - Error no. 3.....	172
8.7.14 F2014 PLC - Error no. 4.....	172
8.7.15 F2015 PLC - Error no. 5.....	172
8.7.16 F2016 PLC - Error no. 6.....	173
8.7.17 F2017 PLC - Error no. 7.....	173
8.7.18 F2018 Device overtemperature shutdown.....	173
8.7.19 F2019 Motor overtemperature shutdown.....	174
8.7.20 F2021 Motor temperature monitor defective.....	175
8.7.21 F2022 Device temperature monitor defective.....	176
8.7.22 F2025 Drive not ready for control.....	176
8.7.23 F2026 Undervoltage in power section.....	177
8.7.24 F2027 Excessive oscillation in DC bus.....	177
8.7.25 F2028 Excessive deviation.....	178
8.7.26 F2031 Encoder 1 error: Signal amplitude incorrect.....	178
8.7.27 F2032 Validation error during commutation fine adjustment.....	179
8.7.28 F2036 Excessive position feedback difference.....	180
8.7.29 F2037 Excessive position command difference.....	181
8.7.30 F2040 Device overtemperature 2 shutdown.....	182
8.7.31 F2042 Encoder 2: Encoder signals incorrect.....	182
8.7.32 F2043 Measuring encoder: Encoder signals incorrect.....	183
8.7.33 F2048 Low battery voltage.....	184
8.7.34 F2050 Overflow of target position preset memory.....	184
8.7.35 F2051 No sequential block in target position preset memory.....	185
8.7.36 F2053 Incr. encoder emulator: Pulse frequency too high.....	185
8.7.37 F2054 Incr. encoder emulator: Hardware error.....	186
8.7.38 F2055 External power supply dig. I/O error.....	186
8.7.39 F2057 Target position out of travel range.....	187
8.7.40 F2058 Internal overflow by positioning input.....	188
8.7.41 F2059 Incorrect command value direction when positioning.....	188
8.7.42 F2063 Internal overflow master axis generator.....	189

Table of Contents

	Page
8.7.43 F2064 Incorrect cmd value direction master axis generator.....	189
8.7.44 F2067 Synchronization to master communication incorrect.....	190
8.7.45 F2068 Brake error.....	190
8.7.46 F2072 Error in power supply of brake.....	191
8.7.47 F2074 Actual pos. value 1 outside absolute encoder window.....	191
8.7.48 F2075 Actual pos. value 2 outside absolute encoder window.....	192
8.7.49 F2076 Actual pos. value 3 outside absolute encoder window.....	193
8.7.50 F2077 Current measurement trim wrong.....	194
8.7.51 F2086 Error supply module.....	194
8.7.52 F2087 Module group communication error.....	195
8.7.53 F2100 Incorrect access to command value memory.....	195
8.7.54 F2101 File system structure error on the memory card.....	195
8.7.55 F2102 It was impossible to address I2C memory.....	196
8.7.56 F2103 It was impossible to address EnDat memory.....	196
8.7.57 F2104 Commutation offset invalid.....	197
8.7.58 F2105 It was impossible to address Hiperface memory.....	197
8.7.59 F2106 Power section error.....	198
8.7.60 F2110 Error in non-cyclical data communic. of power section.....	198
8.7.61 F2120 Memory card could not be initialized.....	199
8.7.62 F2131 Incorrect switching state of probe 1 input signal.....	199
8.7.63 F2140 CCD slave error.....	200
8.7.64 F2150 MLD motion function block error.....	200
8.7.65 F2174 Loss of motor encoder reference.....	201
8.7.66 F2175 Loss of optional encoder reference.....	202
8.7.67 F2176 Loss of measuring encoder reference.....	202
8.7.68 F2177 Modulo limitation error of motor encoder.....	203
8.7.69 F2178 Modulo limitation error of optional encoder.....	203
8.7.70 F2179 Modulo limitation error of measuring encoder.....	204
8.7.71 F2190 Incorrect Ethernet configuration.....	204
8.7.72 F2270 Analog input, wire break.....	205
8.7.73 F2802 Error in mains synchronization.....	206
8.7.74 F2814 Undervoltage in mains.....	206
8.7.75 F2815 Overvoltage in mains.....	206
8.7.76 F2816 Softstart fault power supply unit.....	207
8.7.77 F2818 Phase failure.....	207
8.7.78 F2819 Mains failure.....	208
8.7.79 F2820 Braking resistor overload.....	208
8.7.80 F2821 Error in control of braking resistor.....	209
8.7.81 F2825 Switch-on threshold braking resistor too low.....	210
8.7.82 F2833 Ground fault in motor line.....	210
8.7.83 F2834 Contactor control error.....	210
8.7.84 F2836 DC bus balancing monitor error.....	211
8.7.85 F2860 Overcurrent in mains-side power section.....	211
8.8 sercos Service Channel Error Codes / Error Messages of Serial Communication.....	212

Table of Contents

	Page
9 Warnings (Exxxx).....	215
9.1 Fatal Warnings (E8xxx).....	215
9.1.1 Behavior in the Case of Fatal Warnings.....	215
9.1.2 E8025 Overvoltage in power section.....	215
9.1.3 E8026 Undervoltage in power section.....	215
9.1.4 E8027 STO/SBC while drive enabled.....	216
9.1.5 E8028 Overcurrent in power section.....	216
9.1.6 E8029 Positive position limit exceeded.....	217
9.1.7 E8030 Negative position limit exceeded.....	218
9.1.8 E8034 Emergency-Stop activated.....	219
9.1.9 E8040 Torque/force actual value limit active.....	219
9.1.10 E8041 Current limit active.....	220
9.1.11 E8042 Both travel range limit switches activated.....	220
9.1.12 E8043 Positive travel range limit switch activated.....	221
9.1.13 E8044 Negative travel range limit switch activated.....	222
9.1.14 E8055 Motor overload, current limit active.....	223
9.1.15 E8057 Device overload, current limit active.....	223
9.1.16 E8058 Drive system not ready for operation.....	224
9.1.17 E8260 Torque/force command value limit active.....	224
9.1.18 E8300 SMO: Error within the safety zone.....	225
9.1.19 E8399 Error in processing of diagnostic message.....	226
9.1.20 E8819 Mains failure.....	226
9.2 Warnings of Category E4xxx.....	226
9.2.1 E4001 Sync telegram failure.....	226
9.2.2 E4002 RTD telegram failure.....	227
9.2.3 E4005 No command value input via master communication.....	227
9.2.4 E4006 Communication module overload.....	228
9.2.5 E4007 sercos: Consumer connection failed.....	229
9.2.6 E4008 Invalid addressing command value data container A.....	229
9.2.7 E4009 Invalid addressing actual value data container A.....	229
9.2.8 E4010 Slave not scanned or address 0.....	230
9.2.9 E4011 Communication watchdog: Overload of cyclic communication.....	230
9.2.10 E4012 Maximum number of CCD slaves exceeded.....	230
9.2.11 E4013 Incorrect CCD addressing.....	231
9.2.12 E4014 Incorrect phase switch of CCD slaves.....	231
9.2.13 E4016 CCD: Topology error.....	232
9.2.14 E4017 CCD: Unknown I/O configuration.....	232
9.2.15 E4020 sercos: Ring interruption (FF to LF).....	233
9.3 Warnings of Category E3xxx.....	233
9.3.1 E3115 Prewarning, end of brake check time interval.....	233
9.4 Non-fatal Warnings (E2xxx).....	234
9.4.1 Behavior in Case a Non-Fatal Warning Occurs.....	234
9.4.2 E2005 One-time telegram failure, power section parallel bus.....	234
9.4.3 E2010 Position control with encoder 2 not possible.....	234
9.4.4 E2011 PLC - Warning no. 1.....	235
9.4.5 E2012 PLC - Warning no. 2.....	235

Table of Contents

	Page
9.4.6 E2013 PLC - Warning no. 3.....	235
9.4.7 E2014 PLC - Warning no. 4.....	236
9.4.8 E2015 PLC - Warning no. 5.....	236
9.4.9 E2016 PLC - Warning no. 6.....	236
9.4.10 E2017 PLC - Warning no. 7.....	236
9.4.11 E2020 Differing DC bus voltages with parallel connection.....	237
9.4.12 E2021 Motor temperature outside of measuring range.....	237
9.4.13 E2022 Collective warning of power section.....	237
9.4.14 E2023 Current unbalance in parallel connection.....	238
9.4.15 E2024 Device blower defective.....	238
9.4.16 E2026 Undervoltage in power section.....	238
9.4.17 E2031 Encoder 1 warning: Signal amplitude incorrect.....	239
9.4.18 E2037 Excessive position command difference warning.....	240
9.4.19 E2040 Device overtemperature 2 prewarning.....	241
9.4.20 E2042 Encoder 2 warning: Encoder signals incorrect.....	241
9.4.21 E2043 Measuring encoder warning: Encoder signals incorrect.....	242
9.4.22 E2049 Positioning velocity $\geq$ limit value.....	243
9.4.23 E2050 Device overtemp. prewarning.....	244
9.4.24 E2051 Motor overtemp. prewarning.....	245
9.4.25 E2053 Target position out of travel range.....	246
9.4.26 E2054 Not homed.....	247
9.4.27 E2055 Feedrate override S-0-0108 = 0.....	247
9.4.28 E2056 Torque limit = 0.....	248
9.4.29 E2058 Selected positioning block has not been programmed.....	249
9.4.30 E2059 Velocity command value limit active.....	249
9.4.31 E2061 Device overload prewarning.....	250
9.4.32 E2063 Velocity command value $>$ limit value.....	251
9.4.33 E2070 Acceleration limit active.....	251
9.4.34 E2074 Encoder 1: Encoder signals disturbed.....	252
9.4.35 E2075 Encoder 2: Encoder signals disturbed.....	253
9.4.36 E2076 Measuring encoder: Encoder signals disturbed.....	254
9.4.37 E2077 Absolute encoder monitoring, motor encoder (encoder alarm).....	254
9.4.38 E2078 Absolute encoder monitoring, opt. encoder (encoder alarm).....	255
9.4.39 E2079 Absolute enc. monitoring, measuring encoder (encoder alarm).....	255
9.4.40 E2086 Prewarning supply module overload.....	256
9.4.41 E2092 Internal synchronization defective.....	256
9.4.42 E2099 Power section warning.....	257
9.4.43 E2100 Positioning velocity of master axis generator too high.....	257
9.4.44 E2140 CCD error at node.....	258
9.4.45 E2667 Machine archive is not up-to-date.....	258
9.4.46 E2810 Drive system not ready for operation.....	258
9.4.47 E2811 Overtemp. in mains connection module / soft start module.....	259
9.4.48 E2814 Undervoltage in mains.....	259
9.4.49 E2816 Undervoltage in power section.....	259
9.4.50 E2819 Mains failure.....	260
9.4.51 E2820 Braking resistor overload prewarning.....	260

Table of Contents

	Page
9.4.52 E2829 Not ready for power on.....	261
10 Command Diagnosis	263
10.1 Commands.....	263
10.1.1 C0100 Communication phase 3 transition check.....	263
10.1.2 C0200 Exit parameterization level procedure command.....	263
10.1.3 C0300 Set absolute position procedure command.....	263
10.1.4 C0400 Activate parameterization level 1 procedure command.....	263
10.1.5 C0500 Reset class 1 diagnostics, error reset.....	263
10.1.6 C0600 Drive-controlled homing procedure command.....	264
10.1.7 C0700 Load defaults proced. command (motor-spec. controller val.).....	264
10.1.8 C0710 Command Load power-supply specific controller values.....	265
10.1.9 C0720 SMO: Load defaults procedure command.....	265
10.1.10 C0730 Load defaults procedure command (MLD).....	266
10.1.11 C0740 Command Activate field bus profile settings.....	266
10.1.12 C0750 Load defaults procedure command (factory settings).....	267
10.1.13 C0900 Position spindle command.....	267
10.1.14 C1200 Commutation offset setting command.....	268
10.1.15 C1300 Positive stop drive procedure command.....	268
10.1.16 C1400 Command Get marker position.....	268
10.1.17 C1500 Cancel reference point procedure command.....	268
10.1.18 C1600 Parking axis command.....	269
10.1.19 C1800 Command Drive optimization / command value box.....	269
10.1.20 C2000 Command Release motor holding brake.....	270
10.1.21 C2100 Command Holding system check.....	270
10.1.22 C2200 Backup working memory procedure command.....	270
10.1.23 C2300 Load working memory procedure command.....	270
10.1.24 C2400 Selectively backup working memory procedure command.....	271
10.1.25 C2800 Analog input adjustment command.....	271
10.1.26 C3100 Recalculate actual value cycle.....	271
10.1.27 C3200 Command Calculate motor data.....	272
10.1.28 C3300 Set coordinate system procedure command.....	272
10.1.29 C3400 Shift coordinate system procedure command.....	272
10.1.30 C3600 Command Motor data identification.....	272
10.1.31 C3800 Command Apply motor holding brake.....	273
10.1.32 C3900 Command Holding brake resurfacing.....	273
10.1.33 C4100 Switch parameter set command.....	273
10.1.34 C4200 Drive-controlled oscillation command.....	273
10.1.35 C4300 NC-controlled homing procedure command.....	274
10.1.36 C4400 Calculate displacement procedure command.....	274
10.1.37 C4500 Displacement to referenced system procedure command.....	274
10.1.38 C4600 Command Calculate motor control parameters.....	274
10.1.39 C4800 Command Determine cogging torque compensation table.....	275
10.1.40 C4900 PLC command.....	275
10.1.41 C5200 Communication phase 4 transition check.....	275
10.1.42 C5300 sercos: Command SYNC delay measurement.....	275

Table of Contents

	Page
10.1.43 C5600 Command Subsequent optimization of commutation offset.....	276
10.1.44 C6100 Command Activate IP settings.....	276
10.1.45 C6400 Reboot command.....	277
10.1.46 C6500 Archive device data.....	277
10.1.47 C6600 Restore device data.....	277
10.1.48 C6700 Update of device data.....	277
10.1.49 C6800 Control command device data archiving.....	278
10.1.50 C7000 CCD: Command adjust slave addresses.....	278
10.1.51 C7100 CCD: Command Close ring.....	278
10.1.52 C7200 CCD: Command Apply I/O configuration.....	278
10.1.53 C7400 CCD: Switching to phase 2.....	279
10.1.54 C7500 CCD: Switching to phase 4.....	279
10.1.55 C7600 Command Create parameter image.....	279
10.1.56 C8000 SMO: Command Apply scaling.....	279
10.1.57 C8100 SMO: Command Activate configuration mode.....	279
10.1.58 C8200 SMO: Command Exit configuration mode.....	280
10.1.59 C8300 SMO: Command Activate parameter image.....	280
10.1.60 C8400 SMO: Command Apply encoder configuration.....	280
10.1.61 C8500 SMO: Command Apply identification data.....	280
10.1.62 C8600 SMO: Command Measure position difference.....	280
10.1.63 C9900 Service function command.....	280
10.2 Command Errors.....	281
10.2.1 Clearing Command Errors.....	281
10.2.2 C0101 Invalid parameters (-> S-0-0021).....	281
10.2.3 C0102 Limit error in parameter (-> S-0-0021).....	281
10.2.4 C0103 Parameter conversion error (->S-0-0021).....	282
10.2.5 C0104 Config. IDN for MDT not configurable.....	282
10.2.6 C0105 Maximum length for MDT exceeded.....	283
10.2.7 C0106 Config. IDNs for AT not configurable.....	283
10.2.8 C0107 Maximum length for AT exceeded.....	283
10.2.9 C0108 Time slot parameter > sercos cycle time.....	284
10.2.10 C0109 Telegram offset unsuitable.....	284
10.2.11 C0110 Length of MDT (S-0-0010) odd.....	285
10.2.12 C0111 ID9 + Record length - 1 > length MDT (S-0-0010).....	285
10.2.13 C0112 TNcyc (S-0-0001) or TScyc (S-0-0002) error.....	286
10.2.14 C0113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error.....	286
10.2.15 C0114 T4 > TScyc (S-0-0002) - T4min (S-0-0005).....	287
10.2.16 C0115 T2 too small.....	287
10.2.17 C0116 T3 (S-0-0008) within MDT (S-0-0089 + S-0-0010).....	288
10.2.18 C0118 Order of cyclic command value configuration incorrect.....	288
10.2.19 C0132 Invalid settings for controller cycle times.....	289
10.2.20 C0139 T2 (S-0-0089)+length MDT (S-0-0010)>TScyc (S-0-0002).....	289
10.2.21 C0151 IDN for command value data container not allowed.....	289
10.2.22 C0152 IDN for actual value data container not allowed.....	290
10.2.23 C0170 Config. IDNs for connection not configurable.....	290
10.2.24 C0171 Maximum length for connections exceeded.....	291

Table of Contents

	Page
10.2.25 C0172 Delay measurement (S-0-1024) not carried out.....	291
10.2.26 C0173 Connections (number) not configurable.....	291
10.2.27 C0174 Connection configuration not allowed.....	292
10.2.28 C0175 Producer cycle time of a connection not correct.....	292
10.2.29 C0201 Invalid parameters (->S-0-0423).....	292
10.2.30 C0202 Parameter limit error (->S-0-0423).....	293
10.2.31 C0203 Parameter conversion error (->S-0-0423).....	293
10.2.32 C0204 Inadmissible motor-amplifier combination.....	293
10.2.33 C0205 Invalid power parameters (-> logbook).....	294
10.2.34 C0210 Feedback 2 required (->S-0-0423).....	294
10.2.35 C0212 Invalid control section data (->S-0-0423).....	294
10.2.36 C0213 SMO: Incorrect parameterization.....	295
10.2.37 C0214 SMO: Incorrect configuration.....	295
10.2.38 C0215 SMO: Error in encoder initialization.....	297
10.2.39 C0216 SMO: SCM-OM switching not allowed.....	298
10.2.40 C0219 Max. travel range too large.....	298
10.2.41 C0220 Error when initializing position of encoder 1.....	298
10.2.42 C0221 Initialization velocity encoder 1 too high.....	299
10.2.43 C0223 Invalid settings for controller cycle times.....	299
10.2.44 C0224 Error when initializing position of encoder 2.....	299
10.2.45 C0225 Initialization velocity encoder 2 too high.....	300
10.2.46 C0227 Error when initializing position of measuring encoder.....	300
10.2.47 C0228 Initialization velocity measuring encoder too high.....	301
10.2.48 C0229 Field bus: IDN for cycl. command val. not configurable.....	301
10.2.49 C0230 Field bus: Max. length for cycl. command val. exceeded.....	302
10.2.50 C0231 Field bus: IDN for cycl. actual val. not configurable.....	302
10.2.51 C0232 Field bus: Length for cycl. actual values exceeded.....	302
10.2.52 C0233 Field bus: Tcyc (P-0-4076) incorrect.....	303
10.2.53 C0234 Field bus: P-0-4077 missing for cycl. command values.....	303
10.2.54 C0238 Order of cyclic command value configuration incorrect.....	303
10.2.55 C0239 IDN for command value data container not allowed.....	304
10.2.56 C0240 IDN for actual value data container not allowed.....	304
10.2.57 C0241 Incorrect parameterization of motion task.....	305
10.2.58 C0242 Multiple configuration of a parameter (->S-0-0423).....	306
10.2.59 C0243 Brake check function not possible.....	307
10.2.60 C0244 Act. modulo value cycle greater than max. travel range.....	308
10.2.61 C0245 Operation mode configuration (->S-0-0423) not allowed.....	308
10.2.62 C0250 Probe inputs incorrectly configured.....	309
10.2.63 C0251 Error during synchronization to master communication.....	309
10.2.64 C0252 Incorrect MLD initialization (write access->S-0-0423).....	310
10.2.65 C0253 Error in combination operation mode - encoder (->S-0-0423).....	310
10.2.66 C0256 Safety technology configuration error.....	311
10.2.67 C0258 Error in relation TNcyc (S-0-0001) to fine interpol.....	311
10.2.68 C0259 MLD configuration error (->S-0-0423).....	312
10.2.69 C0260 Incremental enc. emulator resol. cannot be displayed.....	313
10.2.70 C0265 Incorrect CCD address configuration.....	313

Table of Contents

	Page
10.2.71 C0266 Incorrect CCD phase switch.....	314
10.2.72 C0267 CCD timeout phase switch.....	314
10.2.73 C0270 Error when reading encoder data => motor encoder.....	315
10.2.74 C0271 Incorrect parameterization of motor encoder (hardware).....	315
10.2.75 C0272 Incorr. parameteriz. of motor enc. (mechanical system).....	316
10.2.76 C0273 Modulo value for motor encoder cannot be displayed.....	316
10.2.77 C0274 Motor encoder unknown.....	317
10.2.78 C0275 Error when reading encoder data => optional encoder.....	317
10.2.79 C0276 Incorrect parameterization of optional enc. (hardware).....	318
10.2.80 C0277 Incorr. parameteriz. of opt. enc. (mechanical system).....	318
10.2.81 C0278 Modulo value for optional encoder cannot be displayed.....	319
10.2.82 C0279 Optional encoder unknown.....	319
10.2.83 C0280 Maximum travel range cannot be displayed internally.....	320
10.2.84 C0281 Commutation via encoder-2 impossible.....	320
10.2.85 C0282 Sensorless posit. of synchr. motors, invalid ctrl parameters.....	321
10.2.86 C0283 Error during initialization of motor control (->S-0-0423).....	321
10.2.87 C0284 Invalid motor data in encoder memory (->S-0-0423).....	322
10.2.88 C0285 Type of construction of motor P-0-4014 incorrect.....	322
10.2.89 C0286 Several motor encoders connected.....	323
10.2.90 C0287 Error during initialization of motor data (->S-0-0423).....	323
10.2.91 C0288 Rotary scaling not allowed.....	324
10.2.92 C0289 Error at init. of synchr. motor with reluctance torque.....	324
10.2.93 C0290 Error when reading encoder data => measuring encoder.....	325
10.2.94 C0291 Incorr. parameterization of measuring enc. (hardware).....	325
10.2.95 C0292 Measuring encoder unknown.....	326
10.2.96 C0293 Modulo value for measuring encoder cannot be displayed.....	326
10.2.97 C0294 Incorrect measuring encoder configuration.....	327
10.2.98 C0295 Internal display error during scaling conversion (NM).....	327
10.2.99 C0296 Error in initialization of absolute encoder monitoring.....	327
10.2.100 C0297 Encoder type not possible for selected constr. type of motor.....	328
10.2.101 C0298 Impossible to exit parameterization level.....	328
10.2.102 C0299 Configuration changed. Restart.....	328
10.2.103 C0301 Measuring system unavailable.....	329
10.2.104 C0302 Absolute evaluation of measuring system impossible.....	329
10.2.105 C0303 Absolute encoder offset cannot be saved.....	330
10.2.106 C0304 Command cannot be executed under drive enable.....	330
10.2.107 C0401 Switching not allowed.....	331
10.2.108 C0403 Switching to CCD phase 2 impossible.....	331
10.2.109 C0404 SMO: Incorrect change of system state.....	331
10.2.110 C0501 Error clearing only in parameter mode.....	332
10.2.111 C0601 Homing only possible with drive enable.....	332
10.2.112 C0602 Distance home switch - reference mark erroneous.....	332
10.2.113 C0603 Homing impossible with optional encoder.....	333
10.2.114 C0604 Homing impossible with absolute encoder.....	333
10.2.115 C0606 Reference mark not detected.....	333
10.2.116 C0607 Reference cam input not assigned.....	334

Table of Contents

	Page
10.2.117 C0608 Pos. stop a. HW lim. switch not allowed f. modulo axes.....	334
10.2.118 C0609 Different travel directions parameterized.....	334
10.2.119 C0610 Absolute encoder offset could not be saved.....	335
10.2.120 C0702 Default parameters not available.....	335
10.2.121 C0703 Default parameters invalid.....	336
10.2.122 C0704 Parameters not copyable.....	336
10.2.123 C0706 Error when reading the controller parameters.....	336
10.2.124 C0711 Loading requires determination of system parameters.....	337
10.2.125 C0721 SMO: Load defaults procedure not possible.....	337
10.2.126 C0722 SMO: Error in load defaults procedure.....	337
10.2.127 C0723 SMO: Error in deactivation.....	338
10.2.128 C0743 Error in activation of field bus profile settings.....	338
10.2.129 C0751 Parameter default value incorrect (-> S-0-0423).....	338
10.2.130 C0752 Locked with password.....	338
10.2.131 C0761 Factory default values incorrect (->S-0-0423).....	339
10.2.132 C0799 An invalid index was set.....	339
10.2.133 C0902 Spindle positioning requires drive enable.....	340
10.2.134 C0903 Error during initialization.....	340
10.2.135 C0906 Error during search for zero pulse.....	340
10.2.136 C1204 Error in offset calculation.....	341
10.2.137 C1208 No adjustment with asynchronous motor.....	341
10.2.138 C1209 Proceed to phase 4.....	341
10.2.139 C1211 Commutation offset could not be determined.....	342
10.2.140 C1212 Motion range exceeded during commutation.....	342
10.2.141 C1214 Command only possible with linear synchronous motor.....	342
10.2.142 C1215 Command only possible in 'bb'.....	343
10.2.143 C1216 Commutation determination not selected.....	343
10.2.144 C1217 Setting only possible in 'Ab'.....	344
10.2.145 C1218 Automatic commutation: Current too low.....	344
10.2.146 C1219 Automatic commutation: Overcurrent.....	345
10.2.147 C1220 Automatic commutation: Timeout.....	345
10.2.148 C1221 Automatic commutation: Iteration without result.....	345
10.2.149 C1222 Error when writing offset parameters.....	346
10.2.150 C1223 Command execution impossible.....	346
10.2.151 C1301 Class 1 diagnostics error at command start.....	347
10.2.152 C1402 Faulty reference mark signal.....	347
10.2.153 C1801 Start requires drive enable.....	347
10.2.154 C1802 No useful motor data.....	348
10.2.155 C1803 Inertia detection failed.....	348
10.2.156 C1804 Automatic controller setting failed.....	349
10.2.157 C1805 Travel range invalid.....	349
10.2.158 C1806 Travel range exceeded.....	350
10.2.159 C1807 Determining travel range only via travel distance.....	350
10.2.160 C1808 Drive not homed.....	351
10.2.161 C2001 Command not enabled.....	351
10.2.162 C2101 Holding system check only possible with drive enable.....	351

Table of Contents

	Page
10.2.163 C2103 Holding brake: Torque too low.....	352
10.2.164 C2104 Command execution impossible.....	352
10.2.165 C2105 Load of holding system greater than test torque.....	353
10.2.166 C2106 Test torque of holding system not reached.....	354
10.2.167 C2108 Error when releasing the holding system.....	356
10.2.168 C2202 Error when writing data to non-volatile memory.....	357
10.2.169 C2301 Error when reading non-volatile memory.....	357
10.2.170 C2302 Error when converting parameters.....	357
10.2.171 C2402 Error when saving parameters.....	357
10.2.172 C2801 Analog input not configured.....	358
10.2.173 C2802 Oscillations of input signal outside tolerance range.....	358
10.2.174 C2803 Measured values at zero point and max. value identical.....	358
10.2.175 C2804 Automatic adjustment failed.....	359
10.2.176 C3101 Act. modulo value cycle greater than max. travel range.....	359
10.2.177 C3102 Drive is still in drive enable.....	359
10.2.178 C3201 Incorrect input for current.....	359
10.2.179 C3202 Incorrect input for voltage.....	360
10.2.180 C3203 Incorrect input for frequency.....	360
10.2.181 C3204 Incorrect input for speed.....	360
10.2.182 C3205 Incorrect input for power factor.....	361
10.2.183 C3206 Incorrect input for power.....	361
10.2.184 C3207 Type plate list incomplete.....	361
10.2.185 C3208 Error when writing parameters (->S-0-0423).....	362
10.2.186 C3209 Command execution impossible.....	362
10.2.187 C3601 Motor not or not correctly connected.....	362
10.2.188 C3602 Determined values invalid.....	363
10.2.189 C3603 Device current limit too low.....	363
10.2.190 C3604 Error when writing parameters (->S-0-0423).....	363
10.2.191 C3605 Motor turning.....	364
10.2.192 C3606 Type of construction of motor not allowed.....	364
10.2.193 C3607 Motor revolution/motion impeded.....	364
10.2.194 C3608 Incorrect motor phases or rotational direction of encoder.....	365
10.2.195 C3609 Incorrect number of pole pairs or number of encoder lines.....	365
10.2.196 C3610 No encoder: Validation check impossible.....	366
10.2.197 C3611 Test velocity not reached.....	366
10.2.198 C3612 Command execution impossible.....	367
10.2.199 C3901 Resurfacing of holding brake only possible with drive enable.....	367
10.2.200 C3902 Error during resurfacing of holding brake.....	367
10.2.201 C3903 Command execution impossible.....	368
10.2.202 C4101 Switching only possible without AF.....	368
10.2.203 C4103 Preselect parameter set forbidden value.....	368
10.2.204 C4104 Error during parameter set switching (->S-0-0423).....	369
10.2.205 C4201 Oscillation requires drive enable.....	369
10.2.206 C4202 Oscillation command speed cannot be reached.....	369
10.2.207 C4302 Distance home switch - reference mark erroneous.....	370
10.2.208 C4304 Homing impossible with absolute encoder.....	370

Table of Contents

	Page
10.2.209 C4306 Reference mark not detected.....	370
10.2.210 C4307 Reference cam input not assigned.....	371
10.2.211 C4308 Pos. stop a. HW lim. switch not allowed f. modulo axes.....	371
10.2.212 C4601 Error when writing parameters (->S-0-0423).....	372
10.2.213 C4801 Cogging torque compensation: Measuring vel. too high.....	372
10.2.214 C4802 Cogging torque compensation: Measuring vel. too low.....	372
10.2.215 C4803 Cogging torque compensation: Inadmissible acceleration.....	373
10.2.216 C4804 Cogging torque comp.: Err. when storing corr. val table.....	373
10.2.217 C4805 Cogging torque comp.: Motor measuring system not homed.....	373
10.2.218 C4806 Cogging torque compensation: Measuring range invalid.....	374
10.2.219 C4901 PLC command error no. 1.....	374
10.2.220 C4902 PLC command error no. 2.....	374
10.2.221 C4903 PLC command error no. 3.....	375
10.2.222 C4904 PLC command error no. 4.....	375
10.2.223 C4910 PLC command timeout.....	375
10.2.224 C5301 sercos: Delay measurement failed.....	376
10.2.225 C5601 Command requires drive enable.....	376
10.2.226 C5602 Axis blocked.....	376
10.2.227 C5603 Timeout: Axis in motion.....	377
10.2.228 C6101 Incorrect IP settings.....	377
10.2.229 C6401 reboot command impossible.....	377
10.2.230 C6501 Error when creating machine archive.....	378
10.2.231 C6502 Error when reading device data.....	378
10.2.232 C6503 Inconsistent backup of machine archive.....	379
10.2.233 C6601 Error when accessing machine archive.....	379
10.2.234 C6602 Error when writing device data.....	380
10.2.235 C6604 Error when reading device data.....	381
10.2.236 C6605 Device data incompletely restored.....	381
10.2.237 C6606 PLC user program is active.....	382
10.2.238 C6701 Error when accessing update archive.....	382
10.2.239 C6702 Error when writing device data.....	383
10.2.240 C6703 Warning - Incomplete update of device data.....	384
10.2.241 C6704 Machine archive is not up-to-date.....	385
10.2.242 C6706 PLC user program is active.....	386
10.2.243 C7001 CCD: Impossible to adjust slave addresses.....	386
10.2.244 C7101 CCD: Impossible to close ring.....	386
10.2.245 C7201 CCD: Impossible to apply I/O configuration.....	387
10.2.246 C7401 CCD: Impossible to switch to phase 2.....	387
10.2.247 C7501 CCD: Impossible to switch to phase 4.....	387
10.2.248 C7601 Memory access impossible.....	388
10.2.249 C7602 Slave access impossible.....	388
10.2.250 C8001 SMO: Invalid scaling parameters ->S-0-0423.....	388
10.2.251 C8002 SMO: Not allowed to apply scaling.....	389
10.2.252 C8101 SMO: Command execution impossible.....	389
10.2.253 C8213 SMO: Incorrect parameterization.....	389
10.2.254 C8214 SMO: Incorrect configuration.....	390

Table of Contents

	Page
10.2.255 C8215 SMO: Error in encoder initialization.....	391
10.2.256 C8301 SMO: Incorrect parameter image.....	392
10.2.257 C8302 SMO: Parameter image presently cannot be applied.....	392
10.2.258 C8401 SMO: Impossible to apply encoder type.....	393
10.2.259 C8402 SMO: Impossible to apply encoder configuration.....	393
10.2.260 C8403 SMO: Parameter for applying encoder configuration invalid.....	393
10.2.261 C8501 SMO: Impossible to apply axis identification.....	393
10.2.262 C8502 SMO: Impossible to apply TUNID.....	394
10.2.263 C8601 SMO: Encoder evaluation is inactive.....	394
10.2.264 C9901 Command execution impossible.....	395
11 Diagnostic Display, Rexroth IndraDrive Mi.....	397
11.1 KSM02 Motor-Integrated Servo Drive / KMS02 Near Motor Servo Drive.....	397
11.2 KCU02 Diagnostic Display.....	399
12 Diagnostic Display, Safety Zone Module HSZ01.....	401
13 Diagnostic displays of optional safety technology modules "S3" and "S4".....	403
14 Diagnostic displays of the additional modules for "Hxx05".....	405
14.1 Mains connection module HNA05.....	405
15 Other Display Messages.....	407
16 Handling, Diagnostic and Service Functions.....	409
16.1 Replace firmware.....	409
16.2 Firmware download.....	409
16.3 Messages during firmware download.....	409
16.4 FL: DL	411
16.5 FL:ERASE	412
16.6 FL: PROG	412
16.7 FL: CKS	412
16.8 FL:E FW	412
16.9 FL:E LD	412
16.10 FL:F9002	412
16.11 FL:F2100	413
16.12 FL:F CKS	413
16.13 FL:F ACC	413
16.14 FL:F8122	413
16.15 FL:F8120	413
17 Notes for Machine Operators.....	415
17.1 General Information.....	415