

Table of Contents

	Page
4.2 Control Panel of the IndraDrive Controller.....	41
4.2.1 General Information on the Operation Options	41
Brief Description.....	41
4.2.2 Standard Control Panel.....	42
Functional Description.....	42
Notes on Commissioning.....	56
4.3 Terms, Basic Principles.....	57
4.3.1 Parameters.....	57
4.3.2 Data Storage and Parameter Handling.....	57
4.3.3 Password.....	58
4.3.4 Commands.....	58
4.3.5 Operation Modes.....	59
4.3.6 Warnings.....	59
4.3.7 Errors.....	60
5 Operating States.....	63
5.1 General Information.....	63
5.2 Ab.....	63
5.3 AC.....	63
5.4 AE.....	63
5.5 AF.....	63
5.6 AH.....	63
5.7 AR.....	63
5.8 STO.....	63
5.9 bb.....	63
5.10 OM.....	63
5.11 P0.....	63
5.12 P-1.....	64
5.13 P1.....	64
5.14 P2.....	64
5.15 P3.....	64
5.16 PM.....	64
5.17 PL.....	64
5.18 RL.....	64
6 Diagnostic Messages when Booting the Devices.....	65
6.1 Devices with Valid Firmware.....	65
6.2 Devices without Valid Firmware.....	65
7 Diagnostic Status Messages.....	67
7.1 A0000 Communication phase 0.....	67
7.2 A0001 Communication phase 1.....	67
7.3 A0002 Communication phase 2.....	68
7.4 A0003 Communication phase 3.....	68
7.5 A0009 Automatic baud rate detection for SERCOS interface.....	69

Table of Contents

	Page
7.6 A0010 Drive HALT.....	69
7.7 A0011 STO/SBC active.....	69
7.8 A0012 Control and power sections ready for operation.....	70
7.9 A0013 Ready for power on.....	70
7.10 A0050 Parameterization level 1 active.....	71
7.11 A0051 Operating mode.....	71
7.12 A0100 Torque control.....	71
7.13 A0101 Velocity control.....	71
7.14 A0102 Position mode, encoder 1.....	71
7.15 A0103 Position mode, encoder 2.....	72
7.16 A0104 Position mode lagless, encoder 1.....	72
7.17 A0105 Position mode lagless, encoder 2.....	72
7.18 A0106 Drive-internal interpolation, encoder 1.....	73
7.19 A0107 Drive-internal interpolation, encoder 2.....	73
7.20 A0108 Drive controlled interpolation, lagless, encoder 1.....	73
7.21 A0109 Drive controlled interpolation, lagless, encoder 2.....	73
7.22 A0110 Velocity synchronization, virtual master axis.....	74
7.23 A0111 Velocity synchronization, real master axis.....	74
7.24 A0112 Phase synchronization, encoder 1, virtual master axis.....	74
7.25 A0113 Phase synchronization, encoder 2, virtual master axis.....	75
7.26 A0114 Phase synchronization, encoder 1, real master axis.....	75
7.27 A0115 Phase synchronization, encoder 2, real master axis.....	75
7.28 A0116 Phase synchr. lagless, encoder 1, virtual master axis.....	76
7.29 A0117 Phase synchr. lagless, encoder 2, virtual master axis.....	76
7.30 A0118 Phase synchr. lagless, encoder 1, real master axis.....	76
7.31 A0119 Phase synchr. lagless, encoder 2, real master axis.....	76
7.32 A0128 Cam, encoder 1, virtual master axis.....	77
7.33 A0129 Cam, encoder 2, virtual master axis.....	77
7.34 A0130 Cam, encoder 1, real master axis.....	77
7.35 A0131 Cam, encoder 2, real master axis.....	78
7.36 A0132 Cam, lagless, encoder 1, virt. master axis.....	78
7.37 A0133 Cam, lagless, encoder 2, virt. master axis.....	78
7.38 A0134 Cam, lagless, encoder 1, real master axis.....	79
7.39 A0135 Cam, lagless, encoder 2, real master axis.....	79
7.40 A0136 MotionProfile, encoder 1, virtual master axis.....	79
7.41 A0137 MotionProfile, encoder 2, virtual master axis.....	80
7.42 A0138 MotionProfile, encoder 2, real master axis.....	80
7.43 A0139 MotionProfile, encoder 1, real master axis.....	80
7.44 A0140 MotionProfile lagless, encoder 1, virtual master axis.....	81
7.45 A0141 MotionProfile lagless, encoder 2, virtual master axis.....	81
7.46 A0142 MotionProfile lagless, encoder 1, real master axis.....	81
7.47 A0143 MotionProfile lagless, encoder 2, real master axis.....	82
7.48 A0150 Drive-controlled positioning, encoder 1.....	82
7.49 A0151 Drive-controlled positioning, encoder 1, lagless.....	82
7.50 A0152 Drive-controlled positioning, encoder 2.....	83
7.51 A0153 Drive-controlled positioning, encoder 2, lagless.....	83

Table of Contents

	Page
7.52 A0154 Position mode drive controlled, encoder 1.....	84
7.53 A0155 Position mode drive controlled, encoder 2.....	84
7.54 A0156 Position mode lagless, encoder 1 drive controlled.....	84
7.55 A0157 Position mode lagless, encoder 2 drive controlled.....	85
7.56 A0160 Position mode drive controlled.....	85
7.57 A0161 Drive-controlled positioning.....	86
7.58 A0162 Positioning block mode.....	86
7.59 A0163 Position synchronization.....	86
7.60 A0164 Velocity synchronization.....	87
7.61 A0206 Positioning block mode, encoder 1.....	87
7.62 A0207 Positioning block mode lagless, encoder 1.....	87
7.63 A0210 Positioning block mode, encoder 2.....	87
7.64 A0211 Positioning block mode lagless, encoder 2.....	88
7.65 A0403 Quick stop with probe detection is active.....	88
7.66 A4000 Automatic drive check and adjustment.....	88
7.67 A4001 Drive deceleration to standstill.....	89
7.68 A4003 Setting-up mode is active.....	89
8 Error Messages.....	91
8.1 Fatal System Errors (F9xxx).....	91
8.1.1 Behavior in the Case of Fatal System Errors.....	91
8.1.2 F9001 Error internal function call.....	91
8.1.3 F9002 Error internal RTOS function call.....	91
8.1.4 F9003 Watchdog.....	92
8.1.5 F9005 Processor exception.....	92
8.1.6 F9100 Hardware watchdog.....	92
8.1.7 F9200 Booting error programming module.....	92
8.1.8 F9201 Booting error device.....	93
8.1.9 F9202 Processor watchdog.....	93
8.2 Fatal Errors (F8xxx).....	93
8.2.1 Behavior in the Case of Fatal Errors (F8xxx).....	93
8.2.2 F8000 Fatal hardware error.....	94
8.2.3 F8010 Autom. commutation: Max. motion range when moving back.....	94
8.2.4 F8011 Commutation offset could not be determined.....	95
8.2.5 F8012 Autom. commutation: Max. motion range.....	96
8.2.6 F8013 Automatic commutation: Current too low.....	97
8.2.7 F8014 Automatic commutation: Overcurrent.....	97
8.2.8 F8015 Automatic commutation: Timeout.....	98
8.2.9 F8016 Automatic commutation: Iteration without result.....	98
8.2.10 F8017 Automatic commutation: Incorrect commutation adjustment.....	99
8.2.11 F8022 Enc. 1: Enc. signals incorr. (can be cleared in ph. 2).....	99
8.2.12 F8025 Overvoltage in power section.....	100
8.2.13 F8028 Overcurrent in power section.....	100
8.2.14 F8042 Encoder 2 error: Signal amplitude incorrect.....	101
8.2.15 F8044 Device-internal module communication disturbed.....	102
8.2.16 F8060 Overcurrent in power section.....	102

Table of Contents

	Page
8.2.17 F8064 Interruption of motor phase.....	102
8.2.18 F8069 +/-15Volt DC error.....	103
8.2.19 F8070 +24Volt DC error.....	104
8.2.20 F8071 Overvoltage 24 volt.....	104
8.2.21 F8076 Error in error angle loop.....	105
8.2.22 F8078 Speed loop error.....	105
8.2.23 F8079 Velocity limit value exceeded.....	106
8.2.24 F8091 Power section defective.....	106
8.2.25 F8100 Error when initializing the parameter handling.....	107
8.2.26 F8102 Error when initializing power section.....	108
8.2.27 F8118 Invalid power section/firmware combination.....	108
8.2.28 F8120 Invalid control section/firmware combination.....	108
8.2.29 F8122 Control section defective.....	109
8.2.30 F8128 Error when initializing an optional interface.....	109
8.2.31 F8129 Incorrect optional module firmware.....	109
8.2.32 F8300 Dynamization pulse width incorrect.....	110
8.2.33 F8301 Error when checking selection signals.....	110
8.2.34 F8302 Error when checking switch-off channels STO/SBC.....	111
8.2.35 F8303 System error STO/SBC.....	111
8.2.36 F8838 Overcurrent external braking resistor.....	112
8.3 Errors of Category F6xxx.....	112
8.3.1 Behavior in the Case of Errors of Category F6xxx.....	112
8.3.2 F6024 Maximum braking time exceeded.....	112
8.3.3 F6028 Position limit value exceeded (overflow).....	113
8.3.4 F6029 Positive position limit exceeded.....	114
8.3.5 F6030 Negative position limit exceeded.....	115
8.3.6 F6034 Emergency-Stop activated.....	115
8.3.7 F6042 Both travel range limit switches activated.....	116
8.3.8 F6043 Positive travel range limit switch activated.....	116
8.3.9 F6044 Negative travel range limit switch activated.....	117
8.4 Interface Errors (F4xxx).....	118
8.4.1 Behavior in the Case of Interface Errors	118
8.4.2 F4001 Sync telegram failure.....	118
8.4.3 F4002 RTD telegram failure.....	119
8.4.4 F4003 Invalid communication phase shutdown.....	120
8.4.5 F4004 Error during phase progression.....	121
8.4.6 F4005 Error during phase regression.....	121
8.4.7 F4006 Phase switching without ready signal.....	121
8.4.8 F4009 Bus failure.....	121
8.4.9 F4011 Communication watchdog: Overload of cyclic communication.....	123
8.4.10 F4012 Incorrect I/O length.....	123
8.4.11 F4017 S-III: Incorrect sequence during phase switch.....	124
8.4.12 F4034 Emergency-Stop activated.....	124
8.5 Non-Fatal Safety Technology Errors (F3xxx).....	125
8.5.1 Behavior in the Case of Non-Fatal Safety Technology Errors (F3xxx).....	125
8.5.2 F3115 Error, brake check time interval exceeded.....	125

Table of Contents

	Page
8.5.3 F3134 Dynamization time interval incorrect.....	126
8.6 Non-Fatal Errors (F2xxx).....	126
8.6.1 Behavior in the Case of Non-Fatal Errors.....	126
8.6.2 F2002 Assignment of encoder for synchronization is not allowed.....	127
8.6.3 F2003 Motion step skipped.....	127
8.6.4 F2004 Error in MotionProfile.....	128
8.6.5 F2005 Cam table invalid.....	129
8.6.6 F2007 Switching to non-initialized operation mode.....	130
8.6.7 F2008 RL The motor type has changed.....	130
8.6.8 F2009 PL Load parameter default values.....	131
8.6.9 F2010 Error when initializing digital inputs/outputs.....	132
8.6.10 F2018 Device overtemperature shutdown.....	132
8.6.11 F2019 Motor overtemperature shutdown.....	133
8.6.12 F2021 Motor temperature monitor defective.....	134
8.6.13 F2022 Device temperature monitor defective.....	134
8.6.14 F2025 Drive not ready for control.....	135
8.6.15 F2026 Undervoltage in power section.....	135
8.6.16 F2027 Excessive oscillation in DC bus.....	136
8.6.17 F2028 Excessive deviation.....	136
8.6.18 F2031 Encoder 1 error: signal amplitude incorrect.....	137
8.6.19 F2032 Validation error during commutation fine adjustment.....	137
8.6.20 F2036 Excessive position feedback difference.....	138
8.6.21 F2037 Excessive position command difference.....	139
8.6.22 F2040 Device overtemperature 2 shutdown.....	139
8.6.23 F2042 Encoder 2: Encoder signals incorrect.....	140
8.6.24 F2043 Measuring encoder: Encoder signals incorrect.....	140
8.6.25 F2048 Low battery voltage.....	141
8.6.26 F2050 Overflow of target position preset memory.....	142
8.6.27 F2051 No sequential block in target position preset memory.....	142
8.6.28 F2057 Target position out of travel range.....	143
8.6.29 F2058 Internal overflow by positioning input.....	144
8.6.30 F2059 Incorrect command value direction when positioning.....	144
8.6.31 F2067 Synchronization to master communication incorrect.....	145
8.6.32 F2068 Brake error.....	145
8.6.33 F2074 Actual pos. value 1 outside absolute encoder window.....	146
8.6.34 F2075 Actual pos. value 2 outside absolute encoder window.....	146
8.6.35 F2076 Actual pos. value 3 outside absolute encoder window.....	147
8.6.36 F2077 Current measurement trim wrong.....	148
8.6.37 F2086 Error supply module.....	148
8.6.38 F2087 Module group communication error.....	149
8.6.39 F2100 Incorrect access to command value memory.....	149
8.6.40 F2102 It was impossible to address I2C memory.....	149
8.6.41 F2103 It was impossible to address EnDat memory.....	150
8.6.42 F2104 Commutation offset invalid.....	150
8.6.43 F2105 It was impossible to address Hiperface memory.....	151
8.6.44 F2110 Error in non-cyclical data communic. of power section.....	151

Table of Contents

	Page
8.6.45 F2174 Loss of motor encoder reference.....	152
8.6.46 F2175 Loss of optional encoder reference.....	152
8.6.47 F2176 Loss of measuring encoder reference.....	153
8.6.48 F2177 Modulo limitation error of motor encoder.....	153
8.6.49 F2178 Modulo limitation error of optional encoder.....	154
8.6.50 F2179 Modulo limitation error of measuring encoder.....	154
8.6.51 F2190 Incorrect Ethernet configuration.....	155
8.6.52 F2816 Softstart fault power supply unit.....	155
8.6.53 F2818 Phase failure.....	156
8.6.54 F2819 Mains failure.....	156
8.6.55 F2820 Braking resistor overload.....	157
8.6.56 F2821 Error in control of braking resistor.....	157
8.6.57 F2825 Switch-on threshold braking resistor too low.....	158
8.6.58 F2836 DC bus balancing monitor error.....	158
8.7 SERCOS Service Channel Error Codes / Error Messages of Serial Communication.....	158
9 Warnings (Exxxx).....	161
9.1 Fatal Warnings (E8xxx).....	161
9.1.1 Behavior in the Case of Fatal Warnings.....	161
9.1.2 E8025 Overvoltage in power section.....	161
9.1.3 E8026 Undervoltage in power section.....	161
9.1.4 E8027 STO/SBC while drive enabled.....	162
9.1.5 E8028 Overcurrent in power section.....	162
9.1.6 E8029 Positive position limit exceeded.....	163
9.1.7 E8030 Negative position limit exceeded.....	164
9.1.8 E8034 Emergency-Stop activated.....	164
9.1.9 E8040 Torque/force actual value limit active.....	165
9.1.10 E8041 Current limit active.....	165
9.1.11 E8042 Both travel range limit switches activated.....	166
9.1.12 E8043 Positive travel range limit switch activated.....	166
9.1.13 E8044 Negative travel range limit switch activated.....	167
9.1.14 E8055 Motor overload, current limit active.....	167
9.1.15 E8057 Device overload, current limit active.....	168
9.1.16 E8058 Drive system not ready for operation.....	169
9.1.17 E8260 Torque/force command value limit active.....	169
9.1.18 E8819 Mains failure.....	170
9.2 Warnings of Category E4xxx.....	170
9.2.1 E4001 Sync telegram failure.....	170
9.2.2 E4002 RTD telegram failure.....	171
9.2.3 E4005 No command value input via master communication.....	172
9.2.4 E4007 SERCOS III: Consumer connection failed.....	173
9.2.5 E4008 Invalid addressing command value data container A.....	173
9.2.6 E4009 Invalid addressing actual value data container A.....	173
9.2.7 E4010 Slave not scanned or address 0.....	174
9.2.8 E4011 Communication watchdog: Overload of cyclic communication.....	174
9.3 Warnings of Category E3xxx.....	174

Table of Contents

	Page
9.3.1 Behavior in Case a Warning of Category E3xxx Occurs.....	174
9.3.2 E3115 Prewarning, end of brake check time interval.....	174
9.4 Non-Fatal Warnings (E2xxx).....	175
9.4.1 Behavior in Case a Non-Fatal Warning Occurs.....	175
9.4.2 E2010 Position control with encoder 2 not possible.....	175
9.4.3 E2021 Motor temperature outside of measuring range.....	175
9.4.4 E2026 Undervoltage in power section.....	176
9.4.5 E2040 Device overtemperature 2 prewarning.....	176
9.4.6 E2049 Positioning velocity $\geq$ limit value.....	176
9.4.7 E2050 Device overtemp. prewarning.....	177
9.4.8 E2051 Motor overtemp. prewarning.....	178
9.4.9 E2053 Target position out of travel range.....	178
9.4.10 E2054 Not homed.....	179
9.4.11 E2055 Feedrate override S-0-0108 = 0.....	180
9.4.12 E2056 Torque limit = 0.....	181
9.4.13 E2058 Selected positioning block has not been programmed.....	181
9.4.14 E2059 Velocity command value limit active.....	182
9.4.15 E2061 Device overload prewarning.....	182
9.4.16 E2063 Velocity command value $>$ limit value.....	183
9.4.17 E2070 Acceleration limit active.....	184
9.4.18 E2074 Encoder 1: Encoder signals disturbed.....	184
9.4.19 E2075 Encoder 2: Encoder signals disturbed.....	185
9.4.20 E2076 Measuring encoder: Encoder signals disturbed.....	185
9.4.21 E2086 Prewarning supply module overload.....	186
9.4.22 E2092 Internal synchronization defective.....	186
9.4.23 E2810 Drive system not ready for operation.....	187
9.4.24 E2814 Undervoltage in mains.....	187
9.4.25 E2816 Undervoltage in power section.....	188
9.4.26 E2819 Mains failure.....	188
9.4.27 E2820 Braking resistor overload prewarning.....	188
9.4.28 E2829 Not ready for power on.....	189
10 Diagnostic Command Messages	191
10.1 Commands.....	191
10.1.1 C0100 Communication phase 3 transition check.....	191
10.1.2 C0200 Exit parameterization level procedure command.....	191
10.1.3 C0300 Set absolute position procedure command.....	191
10.1.4 C0400 Activate parameterization level 1 procedure command.....	191
10.1.5 C0500 Reset class 1 diagnostics, error reset.....	191
10.1.6 C0600 Drive-controlled homing procedure command.....	192
10.1.7 C0700 Load defaults proced. command (motor-spec. controller val.).....	192
10.1.8 C0740 Command Activate field bus profile settings.....	193
10.1.9 C0750 Load defaults procedure command (factory settings).....	193
10.1.10 C0900 Position spindle command.....	194
10.1.11 C1200 Commutation offset setting command.....	194
10.1.12 C1300 Positive stop drive procedure command.....	194

Table of Contents

	Page
10.1.13 C1400 Command Get marker position.....	195
10.1.14 C1500 Cancel reference point procedure command.....	195
10.1.15 C1600 Parking axis command.....	195
10.1.16 C1800 Command automatic control loop setting.....	195
10.1.17 C2000 Command Release motor holding brake.....	196
10.1.18 C2100 Brake check command.....	196
10.1.19 C2200 Backup working memory procedure command.....	196
10.1.20 C2300 Load working memory procedure command.....	196
10.1.21 C2400 Selectively backup working memory procedure command.....	197
10.1.22 C2800 Analog input adjustment command.....	197
10.1.23 C3100 Recalculate actual value cycle.....	197
10.1.24 C3200 Command Calculate motor data.....	197
10.1.25 C3300 Set coordinate system procedure command.....	198
10.1.26 C3400 Shift coordinate system procedure command.....	198
10.1.27 C3600 Command Motor data identification.....	198
10.1.28 C3800 Command Apply motor holding brake.....	198
10.1.29 C3900 Command Brake resurfacing.....	199
10.1.30 C4100 Switch parameter set command.....	199
10.1.31 C4200 Drive-controlled oscillation command.....	199
10.1.32 C4300 NC-controlled homing procedure command.....	199
10.1.33 C4400 Calculate displacement procedure command.....	199
10.1.34 C4500 Displacement to referenced system procedure command.....	200
10.1.35 C4600 Command Calculate motor control parameters.....	200
10.1.36 C4800 Command Determine cogging torque compensation table.....	200
10.1.37 C5200 Communication phase 4 transition check.....	200
10.1.38 C5300 SERCOS III: Command SYNC delay measurement.....	200
10.1.39 C5600 Command subsequent optimization of commutation offset.....	201
10.1.40 C6100 Command Activate IP settings.....	201
10.1.41 C9900 Service function command.....	201
10.2 Command Errors.....	202
10.2.1 Clearing Command Errors.....	202
10.2.2 C0101 Invalid parameters (-> S-0-0021).....	202
10.2.3 C0102 Limit error in parameter (-> S-0-0021).....	202
10.2.4 C0103 Parameter conversion error (->S-0-0021).....	202
10.2.5 C0104 Config. IDN for MDT not configurable.....	203
10.2.6 C0105 Maximum length for MDT exceeded.....	203
10.2.7 C0106 Config. IDNs for AT not configurable.....	204
10.2.8 C0107 Maximum length for AT exceeded.....	204
10.2.9 C0108 Time slot parameter > Sercos cycle time.....	204
10.2.10 C0109 Telegram offset unsuitable.....	205
10.2.11 C0110 Length of MDT (S-0-0010) odd.....	206
10.2.12 C0111 ID9 + Record length - 1 > length MDT (S-0-0010).....	206
10.2.13 C0112 TNcyc (S-0-0001) or TScyc (S-0-0002) error.....	206
10.2.14 C0113 Relation TNcyc (S-0-0001) to TScyc (S-0-0002) error.....	207
10.2.15 C0114 T4 > TScyc (S-0-0002) - T4min (S-0-0005).....	207
10.2.16 C0115 T2 too small.....	208

Table of Contents

	Page
10.2.17 C0116 T3 (S-0-0008) within MDT (S-0-0089 + S-0-0010).....	208
10.2.18 C0118 Order of cyclic command value configuration incorrect.....	208
10.2.19 C0132 Invalid settings for controller cycle times.....	209
10.2.20 C0139 T2 (S-0-0089)+length MDT (S-0-0010)>TScyc (S-0-0002).....	210
10.2.21 C0151 IDN for command value data container not allowed.....	210
10.2.22 C0152 IDN for actual value data container not allowed.....	210
10.2.23 C0170 Config. IDNs for connection not configurable.....	211
10.2.24 C0171 Maximum length for connections exceeded.....	211
10.2.25 C0172 Delay measurement (S-0-1024) not carried out.....	211
10.2.26 C0173 Connections (number) not configurable.....	212
10.2.27 C0174 Connection configuration not allowed.....	212
10.2.28 C0175 Producer cycle time of a connection not correct.....	212
10.2.29 C0201 Invalid parameters (->S-0-0423).....	212
10.2.30 C0202 Parameter limit error (->S-0-0423).....	213
10.2.31 C0203 Parameter conversion error (->S-0-0423).....	213
10.2.32 C0204 Inadmissible motor-amplifier combination.....	213
10.2.33 C0210 Feedback 2 required (->S-0-0423).....	213
10.2.34 C0212 Invalid control section data (->S-0-0423).....	214
10.2.35 C0219 Max. travel range too large.....	214
10.2.36 C0220 Error when initializing position of encoder 1.....	215
10.2.37 C0221 Initialization velocity encoder 1 too high.....	215
10.2.38 C0223 Invalid settings for controller cycle times.....	215
10.2.39 C0224 Error when initializing position of encoder 2.....	216
10.2.40 C0225 Initialization velocity encoder 2 too high.....	216
10.2.41 C0227 Error when initializing position of measuring encoder.....	216
10.2.42 C0228 Initialization velocity measuring encoder too high.....	217
10.2.43 C0229 Field bus: IDN for cycl. command val. not configurable.....	217
10.2.44 C0230 Field bus: Max. length for cycl. command val. exceeded.....	217
10.2.45 C0231 Field bus: IDN for cycl. actual val. not configurable.....	218
10.2.46 C0232 Field bus: Length for cycl. actual values exceeded.....	218
10.2.47 C0233 Field bus: Tcyc (P-0-4076) incorrect.....	219
10.2.48 C0234 Field bus: P-0-4077 missing for cycl. command values.....	219
10.2.49 C0238 Order of cyclic command value configuration incorrect.....	219
10.2.50 C0239 IDN for command value data container not allowed.....	220
10.2.51 C0240 IDN for actual value data container not allowed.....	220
10.2.52 C0242 Multiple configuration of a parameter (->S-0-0423).....	221
10.2.53 C0243 Brake check function not possible.....	221
10.2.54 C0244 Act. modulo value cycle greater than max. travel range.....	222
10.2.55 C0245 Operation mode configuration (->S-0-0423) not allowed.....	222
10.2.56 C0250 Probe inputs incorrectly configured.....	223
10.2.57 C0251 Error during synchronization to master communication.....	223
10.2.58 C0253 Error in combination operation mode - encoder (->S-0-0423).....	224
10.2.59 C0256 Safety technology configuration error.....	224
10.2.60 C0258 Error in relation TNcyc (S-0-0001) to fine interpol.....	224
10.2.61 C0270 Error when reading encoder data => motor encoder.....	225
10.2.62 C0271 Incorrect parameterization of motor encoder (hardware).....	226

Table of Contents

	Page
10.2.63 C0272 Incorr. parameteriz. of motor enc. (mechanical system).....	226
10.2.64 C0273 Modulo value for motor encoder cannot be displayed.....	226
10.2.65 C0274 Motor encoder unknown.....	227
10.2.66 C0275 Error when reading encoder data => optional encoder.....	227
10.2.67 C0276 Incorrect parameterization of optional enc. (hardware).....	228
10.2.68 C0277 Incorr. parameteriz. of opt. enc. (mechanical system).....	228
10.2.69 C0278 Modulo value for optional encoder cannot be displayed.....	228
10.2.70 C0279 Optional encoder unknown.....	229
10.2.71 C0280 Maximum travel range cannot be displayed internally.....	229
10.2.72 C0281 Commutation via encoder-2 impossible.....	230
10.2.73 C0282 Sensorless posit. of synchr. motors, invalid ctrl parameters.....	230
10.2.74 C0283 Error during initialization of motor control (->S-0-0423).....	230
10.2.75 C0284 Invalid motor data in encoder memory (->S-0-0423).....	231
10.2.76 C0285 Type of construction of motor P-0-4014 incorrect.....	232
10.2.77 C0286 Several motor encoders connected.....	232
10.2.78 C0287 Error during initialization of motor data (->S-0-0423).....	232
10.2.79 C0288 Rotary scaling not allowed.....	233
10.2.80 C0289 Error at init. of synchr. motor with reluctance torque.....	233
10.2.81 C0290 Error when reading encoder data => measuring encoder.....	234
10.2.82 C0291 Incorr. parmeterization of measuring enc. (hardware).....	235
10.2.83 C0292 Measuring encoder unknown.....	235
10.2.84 C0293 Modulo value for measuring encoder cannot be displayed.....	235
10.2.85 C0294 Incorrect measuring encoder configuration.....	236
10.2.86 C0295 Internal display error during scaling conversion (NM).....	236
10.2.87 C0298 Impossible to exit parameterization level.....	236
10.2.88 C0299 Configuration changed. Restart.....	237
10.2.89 C0301 Measuring system unavailable.....	237
10.2.90 C0302 Absolute evaluation of measuring system impossible.....	237
10.2.91 C0303 Absolute encoder offset cannot be saved.....	238
10.2.92 C0304 Command cannot be executed under drive enable.....	238
10.2.93 C0401 Switching not allowed.....	239
10.2.94 C0501 Error clearing only in parameter mode.....	239
10.2.95 C0601 Homing only possible with drive enable.....	239
10.2.96 C0602 Distance home switch - reference mark erroneous.....	239
10.2.97 C0603 Homing impossible with optional encoder.....	240
10.2.98 C0606 Reference mark not detected.....	240
10.2.99 C0607 Reference cam input not assigned.....	241
10.2.100 C0608 Pos. stop a. HW lim. switch not allowed f. modulo axes.....	241
10.2.101 C0609 Different travel directions parameterized.....	241
10.2.102 C0610 Absolute encoder offset could not be saved.....	241
10.2.103 C0702 Default parameters not available.....	242
10.2.104 C0703 Default parameters invalid.....	242
10.2.105 C0704 Parameters not copyable.....	242
10.2.106 C0706 Error when reading the controller parameters.....	243
10.2.107 C0722 Parameter default value incorrect (-> S-0-0423).....	243
10.2.108 C0751 Parameter default value incorrect (-> S-0-0423).....	243

Table of Contents

	Page
10.2.109 C0752 Locked with password.....	244
10.2.110 C0799 An invalid index was set.....	244
10.2.111 C0902 Spindle positioning requires drive enable.....	244
10.2.112 C0903 Error during initialization.....	245
10.2.113 C0906 Error during search for zero pulse.....	245
10.2.114 C1204 Error in offset calculation.....	245
10.2.115 C1208 No adjustment with asynchronous motor.....	246
10.2.116 C1209 Proceed to phase 4.....	246
10.2.117 C1211 Commutation offset could not be determined.....	246
10.2.118 C1212 Motion range exceeded during commutation.....	246
10.2.119 C1214 Command only possible with linear synchronous motor.....	247
10.2.120 C1215 Command only possible in 'bb'.....	247
10.2.121 C1216 Commutation determination not selected.....	248
10.2.122 C1217 Setting only possible in 'Ab'.....	248
10.2.123 C1218 Automatic commutation: Current too low.....	248
10.2.124 C1219 Automatic commutation: Overcurrent.....	249
10.2.125 C1220 Automatic commutation: Timeout.....	249
10.2.126 C1221 Automatic commutation: Iteration without result.....	250
10.2.127 C1222 Error when writing offset parameters.....	250
10.2.128 C1223 Command execution impossible.....	251
10.2.129 C1301 Class 1 diagnostics error at command start.....	251
10.2.130 C1402 Faulty reference mark signal.....	251
10.2.131 C1801 Start requires drive enable.....	252
10.2.132 C1802 Motor feedback data not valid.....	252
10.2.133 C1803 Inertia detection failed.....	252
10.2.134 C1804 Automatic controller setting failed.....	253
10.2.135 C1805 Travel range invalid.....	253
10.2.136 C1806 Travel range exceeded.....	254
10.2.137 C1807 Determining travel range only via travel distance.....	254
10.2.138 C1808 Drive not homed.....	255
10.2.139 C2001 Command not enabled.....	255
10.2.140 C2101 Brake check only possible with drive enable.....	255
10.2.141 C2103 Holding brake torque too low.....	255
10.2.142 C2104 Command execution impossible.....	256
10.2.143 C2105 Load of holding system greater than test torque.....	256
10.2.144 C2106 Test torque of holding system not reached.....	257
10.2.145 C2108 Error when releasing the holding system.....	259
10.2.146 C2202 Error when writing data to non-volatile memory.....	260
10.2.147 C2301 Error when reading non-volatile memory.....	260
10.2.148 C2302 Error when converting parameters.....	260
10.2.149 C2402 Error when saving parameters.....	260
10.2.150 C2801 Analog input not configured.....	261
10.2.151 C2802 Oscillations of input signal outside tolerance range.....	261
10.2.152 C2803 Measured values at zero point and max. value identical.....	261
10.2.153 C2804 Automatic adjustment failed.....	262
10.2.154 C3101 Act. modulo value cycle greater than max. travel range.....	262

Table of Contents

	Page
10.2.155 C3102 Drive is still in drive enable.....	262
10.2.156 C3201 Incorrect input for current.....	262
10.2.157 C3202 Incorrect input for voltage.....	263
10.2.158 C3203 Incorrect input for frequency.....	263
10.2.159 C3204 Incorrect input for speed.....	263
10.2.160 C3205 Incorrect input for power factor.....	264
10.2.161 C3206 Incorrect input for power.....	264
10.2.162 C3207 Type plate list incomplete.....	264
10.2.163 C3208 Error when writing parameters (->S-0-0423).....	264
10.2.164 C3209 Command execution impossible.....	265
10.2.165 C3601 Motor not or not correctly connected.....	265
10.2.166 C3602 Determined values invalid.....	265
10.2.167 C3603 Device current limit too low.....	266
10.2.168 C3604 Error when writing parameters (->S-0-0423).....	266
10.2.169 C3605 Motor turning.....	266
10.2.170 C3606 Type of construction of motor not allowed.....	267
10.2.171 C3901 Resurfacing of brake only possible with drive enable.....	267
10.2.172 C3902 Error during resurfacing of brake.....	267
10.2.173 C3903 Command execution impossible.....	268
10.2.174 C4101 Switching only possible without AF.....	268
10.2.175 C4103 Preselect parameter set forbidden value.....	268
10.2.176 C4104 Error during parameter set switching (->S-0-0423).....	269
10.2.177 C4201 Oscillation requires drive enable.....	269
10.2.178 C4202 Oscillation command speed cannot be reached.....	269
10.2.179 C4302 Distance home switch - reference mark erroneous.....	270
10.2.180 C4304 Homing impossible with absolute encoder.....	270
10.2.181 C4306 Reference mark not detected.....	270
10.2.182 C4307 Reference cam input not assigned.....	271
10.2.183 C4308 Pos. stop a. HW lim. switch not allowed f. modulo axes.....	271
10.2.184 C4601 Error when writing parameters (->S-0-0423).....	271
10.2.185 C4801 Cogging torque compensation: Measuring vel. too high.....	272
10.2.186 C4802 Cogging torque compensation: Measuring vel. too low.....	272
10.2.187 C4803 Cogging torque compensation: Inadmissible acceleration.....	272
10.2.188 C4804 Cogging torque comp.: Err. when storing corr. val table.....	273
10.2.189 C4805 Cogging torque comp.: Motor measuring system not homed.....	273
10.2.190 C5301 SERCOS III: Delay measurement failed.....	273
10.2.191 C5601 Command requires drive enable.....	274
10.2.192 C5602 Axis blocked.....	274
10.2.193 C5603 Timeout: Axis in motion.....	274
10.2.194 C6101 Incorrect IP settings.....	275
11 Handling, Diagnostic and Service Functions.....	277
11.1 Firmware Replacement.....	277
11.2 Firmware Download.....	277
11.3 Messages During Firmware Download.....	277
11.4 FL: DL	278

Table of Contents

	Page
11.5 FL:ERASE	279
11.6 FL: PROG	279
11.7 FL: CKS	279
11.8 FL:E FW	279
11.9 FL:E LD	279
11.10 FL:F9002	280
11.11 FL:F2100	280
11.12 FL:F CKS	280
11.13 FL:F ACC	280
11.14 FL:F8122	280
11.15 FL:F8120	281
 12 Notes for Machine Operators.....	 283
12.1 General Information.....	283
12.2 Diagnosing Malfunction and Removing Errors.....	283
12.3 Contacting the Service Department	284
 13 Notes for Installation Programmers.....	 285
13.1 How to Handle Command Errors.....	285
13.2 How to Handle Errors.....	287
13.3 How to Handle Warnings.....	289
 14 Service and Support.....	 291
 Index.....	 293