

Table of Contents

1	Important Directions for Use	1-1
1.1	Appropriate Use	1-1
	Introduction	1-1
	Areas of Use and Application	1-2
1.2	Inappropriate Use	1-2
2	Safety Instructions for Electric Drives and Controls	2-1
2.1	Introduction	2-1
2.2	Explanations	2-1
2.3	Hazards by Improper Use	2-2
2.4	General Information	2-3
2.5	Protection Against Contact with Electrical Parts	2-4
2.6	Protection Against Electric Shock by Protective Low Voltage (PELV)	2-5
2.7	Protection Against Dangerous Movements	2-6
2.8	Protection Against Magnetic and Electromagnetic Fields During Operation and Mounting	2-8
2.9	Protection Against Contact with Hot Parts	2-9
2.10	Protection During Handling and Mounting	2-9
2.11	Battery Safety	2-10
2.12	Protection Against Pressurized Systems	2-10
3	Diagnosis IndraMotion MLC	3-1
3.1	Diagnosis Possibilities	3-1
3.2	Further Documentation	3-1
4	Diagnosis IndraMotion MLC	4-1
4.1	Layout of a MLC Diagnosis	4-1
4.2	Usage of Diagnosis Numbers and -texts as Indication for the Display of the IndraMotion MLC	4-2
4.3	Usage of Diagnosis Numbers and -texts in Dialog Window "Error/Diagnostic Memory", IndraWorks MLC	4-2
4.4	Usage of Diagnosis Numbers in the PLC-Program as Entries of the Error Table, "MLC_TABLE", 16#0030	4-3
4.5	Implementation of the Diagnosis Messages	4-5
	IndraDrive-Errors	4-5
	IndraDrive-Warnings	4-5
	Virtual Axis, Error Message	4-5
	Generic Axis/Drive, Error Message	4-6
	SERCOS-Error Message	4-7

	PLC-User Blocks, Assumption of Diagnosis into the Logbook (in Preparation).....	4-7
4.6	Diagnosis Parameters	4-8
4.7	MLC-Diagnosis - Error Numbers at the L40-Display	4-9
	General	4-9
	A00B0005 - Drive message.....	4-9
	A00B0007 - ZeroBit, Sercos driver, Test mode, Zero bit stream	4-9
	A00B0008 - LightOn, Sercos driver, Test mode, Continuous light on.....	4-10
	A00B0009 - LightOff, Sercos driver, Test mode, Continuous light off	4-10
	A00C0001 - BOOT END, boot up of control finished	4-10
	A00C0002 - ErrClear, Error cleared	4-10
	A00D0001 - Warning	4-11
	A00D0002 - Info.....	4-11
	A00D0010 - PLC user task watchdog expired	4-11
	A00D0011 - Hardware Watchdog expired.....	4-11
	A00D0012 - Bus error.....	4-11
	A00D0013 - Checksum error.....	4-12
	A00D0014 - Field bus error	4-12
	A00D0015 - Error while I/O update	4-12
	A00D0016 - Cycletime exceeded	4-12
	A00D0017 - Not enough memory.....	4-13
	A00D0018 - Unresolved external references	4-13
	A00D0019 - Download was rejected by custom adaption.....	4-13
	A00D001A - Bootproject saved on Controller	4-13
	A00D001B - Boot project not loaded and deleted.....	4-13
	A00D001C - System memory very low (memory leak)	4-14
	A00D001D - Retain memory corrupt or cannot be mapped.....	4-14
	A00D001E - Boot project that could be loaded but caused a crash later	4-14
	A00D001F - Not enough memory for target visu.....	4-14
	A00D0020 - Not enough memory for config.....	4-15
	A00D0021 - Target of the bootproject doesn't match the current target.....	4-15
	A00D0022 - Error at scheduling tasks.....	4-15
	A00D0023 - Checksum error at transfer of file.....	4-15
	A00D0024 - Retain identity does not match to bootproject identity	4-15
	A00D0050 - Illegal instruction.....	4-16
	A00D0051 - Access violation.....	4-16
	A00D0052 - Privileged instruction	4-16
	A00D0053 - Page fault	4-16
	A00D0054 - Stack overflow	4-17
	A00D0055 - Invalid disposition	4-17
	A00D0056 - Invalid handle	4-17
	A00D0057 - Access on guarded page	4-17
	A00D0058 - Double fault	4-17
	A00D0059 - Invalid Opcode	4-18
	A00D0100 - Access on odd address	4-18
	A00D0101 - Array bounds exceeded	4-18
	A00D0102 - Division by zero.....	4-18

A00D0103 - Overflow	4-19
A00D0104 - Non continuable exception	4-19
A00D0150 - FPU, Unspecified error	4-19
A00D0151 - FPU, Denormal operand	4-19
A00D0152 - FPU, Division by zero	4-20
A00D0153 - FPU, Inexact result	4-20
A00D0154 - FPU, Invalid operation	4-20
A00D0155 - FPU, Overflow	4-20
A00D0156 - FPU, Stack check failed	4-21
A00D0157 - FPU, Underflow	4-21
A00D0158 - Specific diagnosis of node	4-21
A00D07D0 - Fatal error communication	4-21
A00D07D1 - Fatal error semaphores	4-21
A00D07D2 - Fatal error memory managment	4-22
A00D07D3 - Rexroth-Inline configuration mismatch from node	4-22
A00D07D4 - File not written ()	4-22
A00D07E3 - PLC can not be started with pending error - RESET	4-22
A00D07E4 - Array lower bounds violation - RESET	4-23
A00D07E5 - Array upper bounds violation - RESET	4-23
A00D07E6 - Division (8bit) by zero - RESET	4-24
A00D07E7 - Division (16bit) by zero - RESET	4-24
A00D07E8 - Division (32bit) by zero - RESET	4-24
A00D07E9 - Division (REAL) by zero - RESET	4-25
A00D07EA - Lower range bounds (unsigned) violation - RESET	4-25
A00D07EB - Upper range bounds (unsigned) violation - RESET	4-26
A00D07EC - Lower range bounds (signed) violation - RESET	4-26
A00D07ED - Upper range bounds (signed) violation - RESET	4-27
A00D07EE - Division (LREAL) by zero - RESET	4-27
A00D07EF - Invalid pointer access (address), - RESET	4-27
A00D07F0 - Invalid pointer access (area) - RESET	4-28
A00D07F1 - Invalid pointer access (Write access on input) - RESET	4-28
A00D07F2 - Invalid pointer access (Alignment) - RESET	4-29
A00D07F7 - PLC can not be started with pending error - RESET	4-29
A00D07F8 - Array lower bounds violation - Index modified to MIN!	4-29
A00D07F9 - Array upper bounds violation - Index modified to MAX!	4-30
A00D07FA - Division (8bit) by zero - Divisor modified to 1!	4-30
A00D07FB - Division (16bit) by zero - Divisor modified to 1!	4-31
A00D07FC - Division (32bit) by zero - Divisor modified to 1!	4-31
A00D07FD - Division (REAL) by zero - Divisor modified to 1.0!	4-31
A00D07FE - Lower range bounds (unsigned) violation - Value to MIN!	4-32
A00D07FF - Upper range bounds (unsigned) violation - Value to MAX!	4-32
A00D0800 - Lower range bounds (signed) violation - Value to MIN!	4-33
A00D0801 - Upper range bounds (signed) violation - Value to MAX!	4-33
A00D0802 - Division (LREAL) by zero - Divisor modified to 1.0!	4-34
A00D0803 - Invalid pointer access (address) - Pointer to a dummy!	4-34
A00D0804 - Invalid pointer access (area) - Pointer to a dummy!	4-35

A00D0805 - Invalid pointer access (Write on input)- Pointer to a dummy!	4-35
A00D0806 - Invalid pointer access (alignment) - Pointer to a dummy!	4-35
A00D1200 - WriteParameter, inputs do not fit to attribute of parameter	4-36
A00D1201 - WriteParameter, inputs do not fit to attribute of parameter	4-36
A00D1202 - WriteParameter, inputs do not fit to attribute of parameter	4-37
A00D1203 - WriteParameter, inputs do not fit to attribute of parameter	4-37
A00D1204 - WriteParameter, parameter types are not supported.....	4-37
A00D2EE0 - Nonconforming Inline IO Configuration	4-38
A00E0001 - No entry found in data base	4-38
A00E0002 - OK.....	4-38
A0200001 - P0 STOP, reached phase 0, PLC in stop	4-38
A0200002 - P1 STOP, reached phase 1, PLC in stop	4-39
A0200003 - P2 STOP, reached phase 2, PLC in stop	4-39
A0200004 - P3 STOP, reached phase 3, PLC in stop	4-39
A0200005 - BB STOP, Motion ready, PLC in stop.....	4-39
A0200006 - P0 RUN, reached phase 0, PLC in run.....	4-40
A0200007 - P1 RUN, reached phase 1, PLC in run.....	4-40
A0200008 - P2 RUN, reached phase 2, PLC in run.....	4-40
A0200009 - P3 RUN, reached phase 3, PLC in run.....	4-40
A0200010 - BB RUN, Motion ready, PLC in run	4-41
A0200011 - P0 INIT, reached phase 0, PLC in init	4-41
A0200012 - P1 INIT, reached phase 1, PLC in init	4-41
A0200013 - P2 INIT, reached phase 2, PLC in init	4-41
A0200014 - P3 INIT, reached phase 3, PLC in init	4-42
A0200015 - BB INIT, Motion ready, PLC in init.....	4-42
A0200016 - Firmware download successfully finished.....	4-42
A0200017 - Hardware changed; Restoring nvRAM	4-42
A0200018 - Restoring nvRAM.....	4-43
E00B0005 - Drive warning.....	4-43
E00C0001 - Parameter inconsistent, restorage via C-0-1001	4-43
E00C0002 - running on unsupported hardware	4-44
E00D1001 - Writeaccess to parameter S-0-0000 of UserCmdDataX.....	4-44
E00E0026 - Version conflict in error logbook, logbook deleted!	4-44
E0110001 - Axis in 'PowerOn'	4-45
E0110002 - Axis not in 'StandStill'.....	4-45
E0110029 - Positive travel limit exceeded	4-45
E0110030 - Negative travel limit exceeded	4-46
E0110050 - Axis position is extrapolated	4-46
E0112039 - Maximum acceleration exceeded	4-47
E0112047 - Velocity of interpolation = 0.....	4-47
E0112048 - Acceleration of interpolation = 0	4-47
E0112049 - Positioning velocity greater than (A-0-0032/ 33)	4-48
E0112063 - Commanded velocity greater than Limit (A-0-0032/ 33).....	4-48
E0170001 - Configured master axis is parking	4-48
E0200000 - Usable memory (RAM) near minimum	4-49
E0200001 - Usable memory (CF) near minimum	4-49

E0200002 - Temperature warning.....	4-49
E0200003 - CPU-Load critical.....	4-50
F0020001 to F0050013, RTOS-Error.....	4-50
F0070001 - Size of parameter changed.....	4-50
F00A0001 - Parameter write-error during import, see C-0-0114	4-50
F00A0002 - Import/Export: file could not be opened.....	4-51
F00A0003 - Import/Export: unknown parameter type	4-51
F00A0004 - Import: length of line in import file exceeded maximum	4-51
F00A0005 - Import/Export: unsupported Sercos parameter format.....	4-51
F00B0003 - Fiber optic ring not closed	4-52
F00B0005 - Drive error.....	4-52
F00B0006 - Progression to phase 3 not possible	4-52
F00B0007 - Progression to state ready not possible	4-53
F00B0008 - Drive not found	4-53
F00B0009 - Maximum number of drives exceeded.....	4-53
F00B0013 - MC cycletime too less.....	4-53
F00B0014 - Parameter write protected by password	4-53
F00B0090 - RTOS error (Real Time Operating System)	4-54
F00B0098 - Cannot write on parameter S-0-0015	4-54
F00B0099 - Cannot write on parameter S-0-0016	4-54
F00B0100 - Cannot write on parameter S-0-0024	4-54
F00B0101 - Cannot write on parameter S-0-0007	4-55
F00B0102 - Cannot read time slot parameter	4-55
F00B0103 - Cannot read time slot parameter	4-55
F00B0104 - Cannot write on time slot parameter.....	4-55
F00B0105 - Cannot write on time slot parameter.....	4-56
F00B7010 - Command already set.....	4-56
F00C0001 - Error while setting module references.....	4-56
F00C0003 - Error in power up delay	4-57
F00C0004 - Error while switching to power up target mode	4-57
F00D1002 - Cyclic position channel already open	4-57
F00D100A - Error while reading C-0-0483.....	4-57
F00D100B - Error while reading C-0-0484.....	4-58
F00D100C - Error while opening cyclic channel	4-58
F00D100D - Error while opening cyclic channel	4-58
F00D1014 - No reference for opening cyclic channel available	4-58
F00D1016 - Wrong #-address of axis data	4-58
F00D1017 - Wrong #-address of axis data	4-59
F00D1018 - Wrong #-address of axis data	4-59
F00D1019 - Error while closing cyclic channel.....	4-59
F00D1027 - Error closing cyclic channel.....	4-59
F00D102A - ListParameter requested, ReadParameter	4-60
F00D1030 - Error closing cyclic channel.....	4-60
F00D103B - Invalid control number.....	4-60
F00D103C - Invalid axis number	4-60
F00D1205 - Error ReadListParameter, cannot handle a single parameter.....	4-61

F00D1207 - Error WriteListParameter, data greater 64KBytes.....	4-61
F00D1210 - Error WriteListParameter, cannot handle a single parameter	4-61
F00D1211 - Error ReadSercosDataStatus, no memory available	4-61
F00D1218 - Error ReadStringParameter, no memory available	4-62
F00D1219 - Error ReadStringParameter, cannot handle a single parameter	4-62
F00D1222 - Error WriteStringParameter, too many data to transmit.....	4-62
F00D1224 - Error WriteStringParameter, no memory available	4-62
F00D1225 - Error WriteStringParameter, cannot handle a single parameter	4-63
F00D1227 - Error WriteStringParameter, error writing date.....	4-63
F00D1230 - Error ReadSercosAttribute, no memory available	4-63
F00D2001 - Access error, axis 1.....	4-64
F00D2002 - Access error, axis 2.....	4-64
F00D2003 - Access error, axis 3.....	4-64
F00D2004 - Access error, axis 4.....	4-65
F00D2005 - Access error, axis 5.....	4-65
F00D2006 - Access error, axis 6.....	4-65
F00D2007 - Access error, axis 7.....	4-66
F00D2008 - Access error, axis 8.....	4-66
F00D2009 - Access error, axis 9.....	4-66
F00D200A - Access error, axis 10.....	4-67
F00D200B - Access error, axis 11.....	4-67
F00D200C - Access error, axis 12	4-67
F00D200D - Access error, axis 13	4-68
F00D200E - Access error, axis 14.....	4-68
F00D200F - Access error, axis 15.....	4-68
F00D2010 - Access error, axis 16.....	4-69
F00D2064 - Axis not configured.....	4-69
F00F0001 to F00F0006, RTOS error (Real Time Operating System)	4-69
F0110001 - No power turned.....	4-69
F0140001 - Error in drive configuration.....	4-70
F0160001 to F0160002, RTOS error (Real Time Operating System)	4-70
F0160003 - Error while changing to P0.....	4-70
F0160004 - Error while changing to P0.....	4-71
F0160005 - Error while changing to P2.....	4-71
F0160006 - Error while changing to P2.....	4-71
F0160008 - Error while changing to P3.....	4-71
F0160009 - Error while changing to P3.....	4-72
F0160010 - Error while changing to P3.....	4-72
F0160011 - Error during preparation for changing to P2	4-72
F0160012 - Error while changing to BB	4-73
F0160013 - Error while changing to BB	4-73
F0160014 - Error while changing to BB	4-73
F0160015 to F0160023, RTOS-Error.....	4-73
F0160024 - Error in cross check C parameters	4-73
F0160025 - Error in cross check A parameters.....	4-74
F0160026 to F0160029, RTOS-Error.....	4-74

F0160032 - Error while changing to P2.....	4-74
F0160033 - Error while changing to P2.....	4-74
F0160034 - Error while changing to P3.....	4-75
F0160035 - Error during configuration of link communication.....	4-75
F0160036 - Error during configuration of link communication.....	4-76
F0160037 - Error during configuration of link communication.....	4-76
F01B0000 to F01D0014, RTOS-Error	4-77
F0200001 - Firmware download failed	4-77
F0200002 - Firmware download failed	4-77
F0200003 - Firmware download failed	4-77
F0200004 - Firmware download failed	4-77
F0200005 - Firmware download failed	4-78
F0200006 - Firmware download failed	4-78
F0200007 - Firmware download failed	4-78
F0200008 - Firmware download failed	4-78
F0200011 to F0200022, RTOS-Error	4-79
F0220200 - General drive error	4-79
F0220201 - Invalid control number	4-79
F0220202 - Invalid axis number	4-79
F0220203 - Invalid command type	4-79
F0220204 - Command not supported by axis	4-80
F0220205 - Command rejected no power	4-80
F0220206 - Command rejected while 'Stopping'	4-80
F0220207 - Command rejected while 'Homing'	4-80
F0220208 - Invalid command number	4-81
F0220210 - Reset still 'Errorstop'	4-81
F0220211 - Command rejected while 'Diskrete Motion'	4-81
F0220212 - Command rejected while 'Continuous Motion'	4-82
F0220213 - Command rejected while 'Synchronized Motion'	4-82
F0220214 - Command rejected while 'ErrorStop'	4-82
F0220216 - No power available.....	4-83
F0220217 - Command rejected, while 'Standstill' and 'PowerOn'	4-83
F0220218 - Command rejected, while standstill	4-83
F0220223 - Velocity below minimum	4-83
F0220224 - Velocity above maximum	4-84
F0220225 - Acceleration below minimum	4-84
F0220226 - Acceleration above maximum	4-84
F0220227 - Deceleration below minimum	4-85
F0220228 - Deceleration above maximum	4-85
F0220232 - Invalid master control number.....	4-85
F0220233 - Invalid master axis number	4-85
F0220234 - Invalid CamTableID.....	4-86
F0220263 - RatioNumerator below minimum.....	4-86
F0220264 - RatioNumerator above maximum	4-86
F0220265 - RatioDenominator below minimum	4-86
F0220266 - RatioDenominator above maximum	4-87

F0220267 - MasterFineAdjust below minimum	4-87
F0220268 - MasterFineAdjust above maximum	4-87
F0220269 - Invalid SyncMode	4-88
F0220270 - Invalid StartMode	4-88
F0220271 - CamShaftDistance below minimum	4-88
F0220272 - CamShaftDistance above maximum	4-88
F0220273 - Command rejected while parameter mode	4-89
F0220274 - Axis not referenced	4-89
F0220275 - Command aborted	4-89
F0220276 - Control error	4-90
F0220277 - Direct master axis change	4-90
F0220278 - Disabled axis	4-90
F0220279 - Command 'parking axis' active	4-90
F0220501 - Wrong data type	4-91
F0280004 - Link ring broken	4-91
F0280005 - Link ring - masterposition incorrect MDT	4-91
F0280006 - Link ring - masterposition incorrect AT	4-92
F10B0001 - External synchron clock failed	4-92
F20D1015 - Error while closing cyclic channel	4-92
F20D1025 - Error closing cyclic channel	4-92
F20D1029 - Error opening cyclic channel	4-93
F20D102B - Error opening cyclic channel (READ-ACCESS)	4-93
F20D102C - Error reading access (DirectReadReal)	4-93
F20D102D - Error reading access (DirectReadWord)	4-93
F20D102E - Error reading access (DirectReadDword)	4-93
F20D1034 - Error write access (DirectWriteWord)	4-94
F20D1036 - axis has not been found (ML_AXISDATA)	4-94
F20D1037 - Invalid Write/Read-Access to ML_AXISDATA	4-94
F2110002 - Axis is not homed	4-94
F2110003 - Drive of axis does not exist	4-95
F2110004 - Synchronization A to S/P-Parameter failed (A-0-0014)	4-95
F2110005 - Loss of encoder axis reference	4-95
F2110006 - Invalid axis configuration	4-96
F2110029 - Positive travel limit exceeded	4-96
F2110030 - Negative travel limit exceeded	4-97
F2112053 - Target position out of travel range error	4-97
F2116029 - Positive travel limit exceeded	4-98
F2116030 - Negative travel limit exceeded	4-98
F2119001 - RTOS error, illegal master axis	4-98
F2229200 - General drive error	4-99
F2229203 - Invalid command type	4-99
F2229204 - Command not supported by axis	4-99
F2229205 - Command rejected, no power	4-99
F2229206 - Command rejected while 'Stopping'	4-100
F2229207 - Command rejected while 'Homing'	4-100
F2229208 - Invalid command number	4-100

F2229210 - Reset still 'Errorstop'	4-100
F2229211 - Command rejected while 'Diskrete Motion'	4-101
F2229212 - Command rejected while 'Continuous Motion'	4-101
F2229213 - Command rejected while 'Synchronized Motion'	4-101
F2229214 - Command rejected while 'ErrorStop'	4-102
F2229216 - No power available.....	4-102
F2229217 - Command rejected, while 'Standstill' and 'PowerOn'	4-102
F2229218 - Command rejected, while standstill	4-103
F2229223 - Velocity below minimum	4-103
F2229224 - Velocity above maximum	4-103
F2229225 - Acceleration below minimum	4-103
F2229226 - Acceleration above maximum.....	4-104
F2229227 - Deceleration below minimum.....	4-104
F2229228 - Deceleration above maximum	4-104
F2229231 - Invalid direction	4-105
F2229232 - Invalid master control number.....	4-105
F2229233 - Invalid master axis number	4-105
F2229234 - Invalid CamTableID.....	4-105
F2229263 - RatioNumerator below minimum.....	4-106
F2229264 - RatioNumerator above maximum	4-106
F2229265 - RatioDenominator below minimum	4-106
F2229266 - RatioDenominator above maximum	4-106
F2229267 - MasterFineAdjust below minimum	4-107
F2229268 - MasterFineAdjust above maximum	4-107
F2229269 - Invalid SyncMode.....	4-107
F2229270 - Invalid StartMode	4-108
F2229271 - CamShaftDistance below minimum.....	4-108
F2229272 - CamShaftDistance above maximum	4-108
F2229273 - Command rejected while parameter mode.....	4-108
F2229274 - Axis not referenced	4-109
F2229275 - Command aborted	4-109
F2229276 - Control error	4-109
F2229277 - Direct master axis change	4-109
F22E0000 - Drive error (generic axis)	4-110
F50B0002 - Sercos ring break.....	4-110
F50D2000 - Forced stop activated	4-110
F50D2EE1 - Fatal error at Inline IOs.....	4-111
F5180001 - Invalid master axes combination.....	4-111
F5180005 - Motion kernel exceeded control cycle time.....	4-111
F5280007 - Link ring - different cycle times detected.....	4-112
F80B0004 - Double AT missing.....	4-112
F8200023 - Critical Temperatur reached; processor will stop.....	4-112
F9010001 - Default object on wrong address	4-113
F9010002 - Memory allocation error, no memory available.....	4-113
F9010003 - Invalid function pointer	4-113
F90B0012 - Sercos interface watch dog occured	4-113

4.8	F9** **** - RTOS-Error	4-114
4.9	MLC-Diagnosis - Plaintext indication at the MLC-Display	4-114
	BOOT END, boot up of control finished	4-114
	ErrClear, Error cleared	4-114
	P0 STOP, reached phase 0, PLC in stop.....	4-114
	P1 STOP, reached phase 1, PLC in stop.....	4-115
	P2 STOP, reached phase 2, PLC in stop.....	4-115
	P3 STOP, reached phase 3, PLC in stop.....	4-115
	BB STOP, Motion ready, PLC in stop.....	4-115
	P0 RUN, reached phase 0, PLC in run	4-116
	P1 RUN, reached phase 1, PLC in run	4-116
	P2 RUN, reached phase 2, PLC in run	4-116
	P3 RUN, reached phase 3, PLC in run	4-116
	BB RUN, Motion ready, PLC in run	4-117
	P0 INIT, reached phase 0, PLC in init	4-117
	P1 INIT, reached phase 1, PLC in init	4-117
	P2 INIT, reached phase 2, PLC in init	4-117
	P3 INIT, reached phase 3, PLC in init	4-118
	BB INIT, Motion ready, PLC in init.....	4-118
	ZeroBit, Sercos driver, Test mode, Zero bit stream	4-118
	LightOn, Sercos driver, Test mode, Continuous light on.....	4-118
	LightOff, Sercos driver, Test mode, Continuous light off.....	4-119
4.10	SERCOS-Errors.....	4-119
	General	4-119
	F02D0000 - Sercos, no error in the service channel.....	4-119
	F02D0001 - Sercos, Service channel not open.....	4-119
	F02D0009 - Sercos, invalid access to closing the service channel	4-119
	F02D1001 - Sercos, no IDN	4-119
	F02D1009 - Sercos, invalid access to element 1	4-119
	F02D2001 - Sercos, no name	4-119
	F02D2002 - Sercos, Name transmission too short	4-120
	F02D2003 - Sercos, Name transmission too long.....	4-120
	F02D2004 - Sercos, Name cannot be changed (read only).....	4-120
	F02D2005 - Sercos, Name is write-protected at this time.....	4-120
	F02D3002 - Sercos, Attribute transmission too short.....	4-120
	F02D3003 - Sercos, Attribute transmission too long.....	4-120
	F02D3004 - Sercos, Attribute cannot be changed (read only).....	4-120
	F02D3005 - Sercos, Attribute is write-protected at this time	4-120
	F02D4001 - Sercos, no units.....	4-120
	F02D4002 - Sercos, Unit transmission too short.....	4-121
	F02D4003 - Sercos, Unit transmission too long.....	4-121
	F02D4004 - Sercos, Unit cannot be changed (read only)	4-121
	F02D4005 - Sercos, Unit is write-protected at this time	4-121
	F02D5001 - Sercos, no minimum input value	4-121
	F02D5002 - Sercos, Minimum input value transmission too short.....	4-121
	F02D5003 - Sercos, Minimum input value transmission too long.....	4-121

F02D5004 - Sercos, Minimum input value cannot be changed (read only)	4-121
F02D5005 - Sercos, Minimum input value is write-protected at this time	4-121
F02D6001 - Sercos, no maximum input value	4-121
F02D6002 - Sercos, Maximum input value transmission too short.....	4-122
F02D6003 - Sercos, Maximum input value transmission too long	4-122
F02D6004 - Sercos, Maximum input value cannot be changed (read only)	4-122
F02D6005 - Sercos, Maximum input value is write-protected at this time	4-122
F02D7001 - Sercos, no operation data	4-122
F02D7002 - Sercos, Operation data transmission too short	4-122
F02D7003 - Sercos, Operation data transmission too long	4-122
F02D7004 - Sercos, Operation data cannot be changed (read only)	4-122
F02D7005 - Sercos, Operation data is write-protected at this time	4-122
F02D7006 - Sercos, Operation data is smaller than the min input value.....	4-123
F02D7007 - Sercos, Operation data is greater than the max input value	4-123
F02D7008 - Sercos, invalid operation data	4-123
F02D7009 - Sercos, Operation data write protected by a password	4-123
F02D700A - Sercos, Operation data is write protected (cyclically conf)	4-123
F02D700B - Sercos, invalid indirect addressing, (data container, list).....	4-123
F02D700C - Sercos, Operation data is write protected (other settings)	4-123
F02D700D - Sercos, reserved.....	4-123
F02D700E - Sercos, reserved	4-123
F02D700F - Sercos, reserved	4-124
F02D7010 - Sercos, Procedure command already active	4-124
F02D7011 - Sercos, Procedure command not interruptible.....	4-124
F02D7012 - Sercos, Procedure command at this time not executable.....	4-124
F02D7013 - Sercos, Procedure command not executable	4-124
F02D710C - Sercos, Data exceed maximal range	4-124
F02D8001 - Sercos, Access temporary not possible	4-124

5 Index 5-1

6 Service & Support 6-1

6.1 Helpdesk	6-1
6.2 Service-Hotline	6-1
6.3 Internet.....	6-1
6.4 Vor der Kontaktaufnahme... - Before contacting us... ..	6-1
6.5 Kundenbetreuungsstellen - Sales & Service Facilities	6-2