

Table of Contents

	Page
1 About this documentation.....	39
1.1 Validity of the documentation.....	39
1.2 Documentation structure.....	39
1.3 Using safety instructions.....	40
1.3.1 Safety instructions – Structure.....	40
1.3.2 Explaining signal words and safety alert symbol.....	40
1.3.3 Symbols used.....	42
1.4 Required and supplementing documentations.....	42
1.5 Names and abbreviations.....	48
 2 General information on the XLC/MLC diagnostic system.....	 51
2.1 Structure of an XLC/MLC diagnostics.....	51
2.2 Diagnostic Numbers and Texts in the IndraControl L25/L45/L65 Display.....	52
2.3 Diagnostic Numbers and Diagnostic Texts in the "Error/Diagnostics Memory", IndraWorks MLC/ XLC.....	53
2.4 Accessing Diagnostics of the "Error/Diagnostic Memory) from a PLC Program.....	55
2.5 Diagnostic numbers in the PLC program.....	56
2.6 Implementing diagnostic messages.....	57
2.6.1 IndraDrive/HydraulicDrive drive errors	57
2.6.2 IndraDrive/HydraulicDrive drive warnings	57
2.6.3 Virtual Axis, error messages.....	58
2.6.4 SercosDrive, PackProfile, error messages.....	58
2.6.5 Sercos Error Messages.....	59
2.6.6 Command error message.....	59
2.6.7 User Diagnostics, Transfer of Diagnostics from the PLC Program to the Logbook.....	60
2.7 Overview: XLC/MLC Diagnostic Parameters.....	60
 3 XLC/MLC diagnostic system tables.....	 63
3.1 XLC/MLC diagnostics.....	63
3.1.1 Diagnostics on Errors Impeding Control Startup.....	63
Diagnostics on Errors Impeding Control Startup, General Information.....	63
UNSUPPHW.....	63
ERROR_IP.....	63
3.1.2 Messages.....	63
Messages, general information.....	63
A00B0005, Drive message.....	64
A00B0007, sercos driver: ZeroBit, Test mode, Zero bit stream.....	64
A00B0008, sercos driver: LightOn, Test mode, Continuous light on.....	64
A00B0009, sercos driver: LightOff, Test mode, Continuous light off.....	64
A00B0020, Hardware initialization, don't switch off the control.....	64
A00B0030, sercos: modul activated, cycle times set to default.....	64
A00B0161, Set point transfer error.....	64
A00C0001, BOOT END, boot up of control finished.....	65
A00C0002, ErrClear, error cleared.....	65

Table of Contents

	Page
A00C0003, BOOTWAIT, startup delay active.....	65
A00C0004, Firmware version:.....	65
A00D0001, Warning.....	65
A00D0002, Info.....	65
A00D0010, PLC user task watchdog expired.....	65
A00D0011, Hardware watchdog expired.....	66
A00D0012, Bus error.....	66
A00D0013, Checksum error.....	66
A00D0014, Field bus error.....	66
A00D0015, Error while I/O update.....	66
A00D0016, Cycletime exceeded.....	66
A00D0017, Not enough memory.....	66
A00D0018, Online change not possible.....	67
A00D0019, Not enough memory.....	67
A00D001A, Boot project not loaded, retain variables not relocatable.....	67
A00D001B, Boot project not loaded and deleted.....	67
A00D001C, System memory very low (memory leak).....	67
A00D001D, Retain memory corrupt or cannot be mapped.....	67
A00D001E, Boot project that could be loaded but caused a crash later.....	67
A00D001F, Not enough memory for target visu.....	67
A00D0020, Not enough memory for configuration.....	67
A00D0021, Target ID (bootproject) doesn't match the current target.....	68
A00D0022, Error at scheduling tasks.....	68
A00D0023, Checksum error at transfer of file.....	68
A00D0024, Retain identity does not match to bootproject identity.....	68
A00D0025, Task could not be created.....	68
A00D0026, Task could not be stopped.....	68
A00D0030, Create boot project done.....	68
A00D0050, Illegal instruction.....	68
A00D0051, Access violation.....	69
A00D0052, Privileged instruction.....	69
A00D0053, Page fault.....	69
A00D0054, Stack overflow.....	69
A00D0055, Invalid disposition.....	69
A00D0056, Invalid handle.....	69
A00D0057, Access on guarded page.....	69
A00D0058, Double fault.....	69
A00D0059, Invalide Opcode.....	69
A00D0100, Access on odd address.....	70
A00D0101, Array bounds exceeded.....	70
A00D0102, Division by zero.....	70
A00D0103, Overflow.....	70
A00D0104, Non continuable exception.....	70
A00D0150, FPU, Unspecified error.....	70
A00D0151, FPU, Denormal operand.....	70
A00D0152, FPU, Division by zero.....	71

Table of Contents

	Page
A00D0153, FPU, Inexact result.....	71
A00D0154, FPU, Invalid operation.....	71
A00D0155, FPU, Overflow.....	71
A00D0156, FPU, Stack check failed.....	71
A00D0157, FPU, Underflow.....	71
A00D0158, Specific diagnosis of node.....	71
A00D07D0, Fatal error: Communication.....	71
A00D07D1, Fatal error: Semaphores.....	71
A00D07D2, Fatal error: Memory management.....	72
A00D07D3, Rexroth-Inline configuration mismatch from node.....	72
A00D07D4, File not written ().....	72
A00D07E3, PLC can not be started with pending error - RESET.....	72
A00D07E4, Array lower bounds violation - RESET.....	73
A00D07E5, Array upper bounds violation - RESET.....	73
A00D07E6, Division (8bit) by zero - RESET.....	73
A00D07E7, Division (16bit) by zero - RESET.....	74
A00D07E8, Division (32bit) by zero - RESET.....	74
A00D07E9, Division (REAL) by zero - RESET.....	74
A00D07EA, Lower range bounds (unsigned) violation - RESET.....	74
A00D07EB, Upper range bounds (unsigned) violation - RESET.....	75
A00D07EC, Lower range bounds (signed) violation - RESET.....	75
A00D07ED, Upper range bounds (signed) violation - RESET.....	76
A00D07EE, Division (LREAL) by zero - RESET.....	76
A00D07EF, Invalid pointer access (address) - RESET.....	76
A00D07F0, Invalid pointer access (area) - RESET.....	76
A00D07F1, Invalid pointer access (Write access on input) - RESET.....	77
A00D07F2, Invalid pointer access (Alignment) - RESET.....	77
A00D07F7, PLC can not be started with pending error - RESET.....	77
A00D07F8, Array lower bounds violation - Index modified to MIN!.....	78
A00D07F9, Array upper bounds violation - Index modified to MAX!.....	78
A00D07FA, Division (8bit) by zero - Divisor modified to 1!.....	79
A00D07FB, Division (16bit) by zero - Divisor modified to 1!.....	79
A00D07FC, Division (32bit) by zero - Divisor modified to 1!.....	79
A00D07FD, Division (REAL) by zero - Divisor modified to 1.0!.....	79
A00D07FE, Lower range bounds (unsigned) violation - Value to MIN!.....	80
A00D07FF, Upper range bounds (unsigned) violation - Value to MAX!.....	80
A00D0800, Lower range bounds (signed) violation - Value to MIN!.....	80
A00D0801, Upper range bounds (signed) violation - Value to MAX!.....	81
A00D0802, Division (LREAL) by zero - Divisor modified to 1.0!.....	81
A00D0803, Invalid pointer access (address) - Pointer to dummy!.....	82
A00D0804, Invalid pointer access (area) - Pointer to dummy!.....	82
A00D0805, Invalid pointer access (write on input)- Pointer to dummy!.....	82
A00D0806, Invalid pointer access (alignment) - Pointer to dummy!.....	82
A00D0807, Identification PROFINET device.....	83
A00D1200, WriteParameter, data type not supported by POU.....	83
A00D1201, WriteParameter, data type not supported by POU.....	83

Table of Contents

	Page
A00D1202, WriteParameter, data type not supported by POU.....	84
A00D1203, WriteParameter, data type not supported by POU.....	84
A00D1204, WriteParameter, data type not supported by POU.....	84
A00D2EE4, Module error Inline bus goes.....	85
A00E0001, No entry found in data base.....	85
A00E0002, OK.....	85
A0110001, Axis has been removed.....	85
A0110002, Axis has been created.....	85
A0110031, PM: Axis not in standstill.....	85
A0110032, PM: Axis not in power off.....	85
A0110033, PM: Parameterization level not supported.....	85
A0110034, PM: Switching to parameterization level failed.....	85
A0110035, PM: Switching to operation level failed.....	86
A01D0001, Operation mode switch was switched to RUN.....	86
A01D0002, Operation mode switch was switched to STOP.....	86
A01D0003, Operation mode switch was switched to CLEAR.....	86
A0200001, P0 STOP, reached phase 0, PLC in stop.....	86
A0200002, P1 STOP, reached phase 1, PLC in stop.....	86
A0200003, P2 STOP, reached phase 2, PLC in stop.....	86
A0200004, P3 STOP, reached phase 3, PLC in stop.....	87
A0200005, BB STOP, Motion ready, PLC in stop.....	87
A0200006, P0 RUN, reached phase 0, PLC in run.....	87
A0200007, P1 RUN, reached phase 1, PLC in run.....	87
A0200008, P2 RUN, reached phase 2, PLC in run.....	87
A0200009, P3 RUN, reached phase 3, PLC in run.....	87
A0200010, BB RUN, Motion ready, PLC in run.....	88
A0200011, P0 INIT, reached phase 0, PLC in init.....	88
A0200012, P1 INIT, reached phase 1, PLC in init.....	88
A0200013, P2 INIT, reached phase 2, PLC in init.....	88
A0200014, P3 INIT, reached phase 3, PLC in init.....	88
A0200015, BB INIT, Motion ready, PLC in init.....	89
A0200016, Firmware download successfully finished.....	89
A0200017, Hardware changed; Restoring NVRAM.....	89
A0200018, Restoring NVRAM.....	89
A0200020, Power cycle of control necessary.....	89
A0200021, P0 RDY, reached phase 0, PLC in ready.....	90
A0200022, P1 RDY, reached phase 1, PLC in ready.....	90
A0200023, P2 RDY, reached phase 2, PLC in ready.....	90
A0200024, P3 RDY, reached phase 3, PLC in ready.....	90
A0200025, BB RDY, Motion ready, PLC in ready.....	90
A0200026, Time write-protected because LINK slave.....	91
A0200027, Finishing download, don't switch off the control.....	91
A0200028, PLC runtime incompatible, application invalid.....	91
A0200030, INIT, PLC in init.....	91
A0200031, RDY, PLC in ready.....	91
A0200032, STOP, PLC in stop.....	91

Table of Contents

	Page
A0200033, RUN, PLC in run.....	91
A0200034, Hardware watchdog not active during boot configuration.....	92
A0200035, Hardware watchdog not active during control configuration.....	92
A0290001, Kinematics has been removed.....	92
A0290002, Kinematics has been created.....	92
A0290010, Axis coordinate system.....	92
A0290011, Base coordinate system.....	92
A0290012, Machine coordinate system.....	92
A0290013, Product coordinate system.....	92
A039****, PLC messages from the kernel.....	92
A03A0002, Online change.....	92
A03A3001, Messages from DCC-Components.....	92
3.1.3 Warnings.....	93
General information.....	93
E000****, Drive warning with warning number E****	93
E00B0001, ASIC Error.....	93
E00B0005, Drive warning.....	93
E00B0179, sercos III: redundancy loss.....	93
E00C0001, Parameter inconsistent, restorage via C-0-1001.....	94
E00C0002, Running on unsupported hardware.....	94
E00C0003, Running on unsupported hardware revision.....	94
E00C0004, Running on unsupported hardware revision.....	95
E00D0004, Acyclic communication active yet.....	95
E00D1001, Writeaccess to parameter S-0-0000 of UserCmdDataX.....	95
E00D1002, Unknown PLC system task.....	95
E00D2EE0, Nonconforming Inline IO Configuration.....	95
E00E0026, Version conflict in error logbook, logbook deleted!.....	95
E00E0050, Logbook is inconsistent. Faulty entries deleted.....	96
E0110001, Axis in 'PowerOn'.....	96
E0110002, Axis not in 'StandStill'.....	96
E0110029, Positive travel limit exceeded.....	96
E0110030, Negative travel limit exceeded.....	97
E0110050, Axis position is extrapolated.....	97
E0110100, Control axis in warning.....	98
E0110101, Control axis, command in PLC-Stop or breakpoint refused.....	98
E0112039, Maximum acceleration exceeded.....	98
E0112047, Velocity of interpolation = 0.....	98
E0112048, Acceleration of interpolation = 0.....	99
E0112049, Positioning velocity greater than limit (A-0-0032/ 33).....	99
E0112050, Torque/force limit exceeded (A-0-0038).....	99
E0112051, Commanded torque/force grather than Limit (A-0-0038).....	99
E0112055, Feedrate Override A-0-0240=0.....	99
E0112063, Commanded velocity greater than Limit (A-0-0032/ 33).....	99
E0112064, Slave axis, velocity limit exceeded (A-0-0032/33).....	100
E0113001, Maximum jerk exceeded.....	100
E0113002, Velocity too high for cycletime.....	100

Table of Contents

	Page
E0113003, Dynamic jerk adjust active.....	101
E0170001, Configured master axis is parking.....	101
E0180005, Warning: Motion kernel exceeded control cycle time.....	101
E0200000, Usable memory (RAM) near minimum.....	102
E0200001, Usable memory (CF) near minimum.....	102
E0200002, Temperature warning.....	103
E0200003, CPU-Load critical.....	103
E0200004, Usable memory (USR) near minimum.....	104
E0200005, Usable memory (SYS) near minimum.....	104
E0200006, Usable memory (OEM) near minimum.....	104
E0200007, Battery of SRAM module low.....	105
E0200009, Modified functionality of sercos FMs, reboot is necessary.....	105
E0200010, Modif. nr of com. sercos FMs, reboot may be necessary.....	106
E0200011, Invalid commanded config. of drive ring via sercos FM.....	106
E0200012, Invalid commanded config. of link ring via sercos FM.....	107
E0200013, Error in SYS-partition, check done.....	107
E0200014, Error in OEM-partition, check done.....	108
E0200015, Error in USR-partition, check done.....	108
E0200016, Rem. memory (NVRAM) near min. - reboot may be necessary.....	108
E0200018, security mechanisms inactive for system mode debugging.....	109
E0200019, security mechanisms inactive for task mode debugging.....	109
E02C00B7, Velocity of the axis too high.....	110
E02C00B8, Velocity of the axis too high.....	110
E02C0184, Vector assignment with different components.....	110
E02C085E, SRAM batterie low.....	110
E02C0880, Axis deactivated.....	110
E02C08CD, Resulting path jerk too high.....	110
E02C08CE, Resulting path acceleration too high.....	111
E02C08CF, Resulting path velocity too high.....	111
E02C08D2, Resulting path velocity too high.....	111
E02C08D3, Resulting path velocity too high.....	111
E02C08D4, Resulting path velocity too high.....	111
E02C08D5, Resulting path velocity too high.....	112
E02C08D6, Resulting path velocity too high.....	112
E02C08D7, Resulting path velocity too high.....	112
E02C08DF, No name specified with call of SET_RK_SYSTEM.....	112
E02C0900, Blending error: Interpolator.....	112
E02C0901, Blending error: Lead distance of the spline too high.....	112
E02C0902, Blending error: Deceleration distance too short.....	113
E02C0903, Blending error: Radius too small.....	113
E02C0904, Blending error: Lead distance of the spline exceeded.....	113
E02C0905, Blending error: Point invalid.....	113
E02C0906, Blending error: Parameter length of the spline invalid.....	113
E02C0907, Blending error: Spline function invalid.....	113
E02C0908, Blending error: Arc length of the spline invalid.....	114
E02C0909, Blending error: Inverse path length function invalid.....	114

Table of Contents

	Page
E02C090A, Blending error: Spline interpolator.....	114
E02C090B, Blending error: Spline invalid.....	114
E02C090C, Blending error: Shorten path at the end.....	114
E02C090D, Blending error: Shorten path at the beginning.....	114
E02C090E, Blending error: Calc.of the deceleration distance incorrect.....	114
E02C090F, Multiple De-/Synchronization not allowed.....	115
E0350154, RCL Compiler: Character not read.....	115
E0350175, RCL Compiler: Symbols will be ignored up to end of file.....	115
E0350176, RCL Compiler: Symbols up to end of file will be ignored.....	115
E0350187, RCL Compiler: Only EXTERN and GLOBAL permitted.....	115
E035021C, RCL Compiler: No defined variable as BINARY declared.....	115
E035021D, RCL Compiler: No defined variable as CHAR declared.....	115
E0350236, RCL Compiler: Implicit point definition.....	115
E0350246, RCL Compiler: Illegal alignment.....	115
E0370001, System overloaded.....	115
E03C0001, Check of integrity of XML configuration failed.....	116
E0400001, Defect type plate.....	116
E039****, PLC warnings from the kernel	116
E03A****, PLC warnings from company components.....	116
3.1.4 C0 Errors, Non-Fatal Errors.....	117
C0 Errors, Error Reaction.....	117
C0280101, C2C-C0100: incomplete/invalid parameter set.....	117
C0280102, C2C-C0100: communication parameter limit exceeded.....	117
C0280108, C2C-C0100: invalid timing parameter (cycle time).....	118
C0280109, C2C-C0100: invalid offset in HotPlug field (MDT address).....	118
C0280113, C2C-C0100: invalid ratio of cycle times (motion/sercos).....	118
C0280171, C2C-C0100: maximum length for connections exceeded.....	118
C0280172, C2C-C0100: no delay measuring executed (S-0-1024).....	119
C0280173, C2C-C0100: maximum number of connections exceeded.....	119
3.1.5 F0 errors, non-fatal errors.....	119
F0 errors, error reaction.....	119
F0020001 up to F0020009, RTOS Error (Real Time Operating System)	119
F0020010, No socket available.....	120
F0020011 up to F0050013, RTOS Error (Real Time Operating System)	120
F0070001, Size of parameter changed.....	120
F00A0001, Parameter write-error during import, see C-0-0114.....	120
F00A0002, Import/Export: File could not be opened.....	120
F00A0003, Import/Export: Unknown parameter type.....	120
F00A0004, Import: Length of line in import file exceeds maximum.....	121
F00A0005, Import/Export: Unsupported sercos parameter format.....	121
F00A0009, Import/Export: parameter type invalid.....	121
F00A0010, Import/Export: parameter attribute invalid.....	121
F00A0011, Import/Export: Value exceeds datarange (maximum).....	121
F00A0012, Import/Export: Value below datarange (minimum).....	122
F00B0003, sercos bus not closed.....	122
F00B0006, Progression to phase 3 not possible.....	122

Table of Contents

	Page
F00B0007, Progression to state ready not possible.....	123
F00B0008, Drive not found.....	123
F00B0009, Maximum number of sercos devices exceeded.....	123
F00B0013, MC cycletime too less.....	123
F00B0014, Parameter write-protected by password.....	123
F00B0090, RTOS error (Real Time Operating System).....	123
F00B0098, Cannot write on parameter S-0-0015.....	123
F00B0099, Cannot write on parameter S-0-0016.....	124
F00B0100, Cannot write on parameter S-0-0024.....	124
F00B0101, Cannot write on parameter S-0-0007.....	124
F00B0102, Cannot read time slot parameter.....	124
F00B0103, Cannot read time slot parameter.....	124
F00B0104, Cannot write on time slot parameter.....	125
F00B0105, Cannot write on time slot parameter.....	125
F00B0121, sercos: IO Error.....	125
F00B0130, sercos III: Connection configuration not read/writeable.....	126
F00B0131, sercos III: Parameter for configuration not writeable.....	126
F00B0132, sercos III: Communication capabilities not readable.....	127
F00B0133, sercos III: Error in transfer of configuration.....	127
F00B0134, sercos III: Connection configuration error.....	127
F00B0135, sercos III: Error in phaseswitch to CP1.....	128
F00B0136, sercos III: Error in phaseswitch to CP1.....	128
F00B0137, sercos III: Max. number of MDT-Data exceeded.....	128
F00B0138, sercos III: Max. number of AT-Data exceeded.....	128
F00B0139, sercos III: Cycletime exceeded.....	128
F00B0140, sercos III: Length of connection inconsistent.....	129
F00B0141, sercos III: Length of connection greater than max.....	129
F00B0142, sercos III: Cycletime of connection inconsistent.....	129
F00B0143, sercos III: Connection Number not unique.....	129
F00B0144, sercos III: Error in type of configuration.....	129
F00B0145, sercos III: Max. number of connections exceeded.....	130
F00B0146, sercos III: Wrong number of connections.....	130
F00B0147, sercos III: SCP classification error.....	130
F00B0148, sercos III: Error in procedure command S-0-0128.....	130
F00B0149, sercos III: Error in procedure command S-0-0127.....	130
F00B0150, sercos III: Bus not stable.....	130
F00B0151, sercos Address not valid.....	131
F00B0152, sercos Addresses inconsistent.....	131
F00B0153, sercos III: Error in phaseswitch to CP2.....	131
F00B0154, sercos III: Error in phaseswitch to CP2.....	131
F00B0155, sercos III: Error in phaseswitch to CP3.....	131
F00B0156, sercos III: Error in phaseswitch to CP3.....	132
F00B0157, sercos III: Error in phaseswitch to CP4.....	132
F00B0158, sercos III: Error in phaseswitch to CP4.....	132
F00B0159, Error in transfer of configuration.....	132
F00B0160, Error in transfer of configuration.....	133

Table of Contents

	Page
F00B0164, Control timing error (T4).....	133
F00B0165, Drive error.....	133
F00B0166, sercos III: Insufficient FPGA-TxRam.....	133
F00B0167, sercos III: Insufficient FPGA-RxRam.....	133
F00B0168, sercos III: Bus configuration inconsistent.....	134
F00B0169, sercos III: Data format in C-0-0520 not valid.....	134
F00B016A, sercos III: Invalid sercos address.....	134
F00B016B, sercos III: Connection number already used.....	134
F00B016C, sercos III: Connection instance already used.....	135
F00B016D, sercos III: Connection instance not valid.....	135
F00B016E, sercos III: Configuration too large.....	135
F00B016F, sercos III: Max. number of connections exceeded.....	135
F00B0170, sercos III: Max. number of real-time bits exceeded.....	135
F00B0171, sercos III: Max. number of IDN for one connection exceeded.....	136
F00B0173, Ring topology could not be established.....	136
F00B0174, sercos III: Data format in C-0-0519 not valid.....	136
F00B0175, sercos III: Connection has no producer or consumer.....	136
F00B0176, sercos III: Connection has no producer or consumer.....	137
F00B0177, sercos III: Max. number of slave setup parameters exceeded.....	137
F00B0178, sercos III: Max. number of slave setup parameters exceeded.....	137
F00B0179, sercos: Initialisation of hardware failed.....	137
F00B7010, Command already set.....	138
F00C0001, Error while setting module references.....	138
F00C0003, Error in power up delay.....	138
F00C0004, Error while switching to power up target mode.....	138
F00C0005, Error remanent data; data cleared.....	138
F00C0006, Error remanent data; restored last backup.....	139
F00C0007, Firmware does not fit hardware.....	140
F00D0002, Axis access error.....	140
F00D0030, Create boot project failed.....	140
F00D0060, Maximum number of PLC applications exceeded.....	140
F00D0300, Output shorted.....	141
F00D0301, Voltage supply dropped.....	141
F00D0302, Watchdog error.....	141
F00D0303, Module removed.....	141
F00D0304, Fault repaired.....	141
F00D0305, Multiple error, fast I/Os.....	142
F00D0400, Error restoring PLC-retain-data from file.....	142
F00D0401, Error saving PLC-retain-data to file.....	142
F00D1002, Cyclic position channel already open.....	142
F00D1003, Cyclic force channel already open.....	142
F00D1004, Cyclic velocity channel already open.....	143
F00D1005, Cyclic analog channel already open.....	143
F00D100A, Error while reading C-0-0483.....	143
F00D100B, Error while reading C-0-0484.....	143
F00D100C, Error while opening cyclic channel.....	143

Table of Contents

	Page
F00D100D, Error while opening cyclic channel.....	143
F00D1014, No reference for opening cyclic channel available.....	143
F00D1016, Wrong #-address of axis data.....	144
F00D1017, Wrong #-address of axis data.....	144
F00D1018, Wrong #-address of axis data.....	144
F00D1019, Error while closing cyclic channel.....	144
F00D1027, Error while closing cyclic channel.....	144
F00D102A, ListParameter requested, ReadParameter.....	144
F00D1030, Error while closing cyclic channel.....	145
F00D103B, Invalid control number.....	145
F00D103C, Invalid axis number.....	145
F00D1040, Invalid Value.....	145
F00D1205, Error, cannot handle a single parameter.....	145
F00D1207, Error, data greater 64KBytes.....	146
F00D1210, Error, cannot handle a single parameter.....	146
F00D1211, Error ReadSERCOSDataStatus, no memory available.....	146
F00D1218, Error, no memory available.....	146
F00D1219, Error, cannot handle a single parameter.....	146
F00D1220, Unsupported selection of sercos element.....	146
F00D1221, Timeout on parameter access.....	147
F00D1222, Too many data to transmit.....	147
F00D1224, Error, no memory available.....	147
F00D1225, Error, cannot handle a single parameter.....	147
F00D1227, Error while writing date.....	148
F00D1230, Error ReadSERCOSAttribute, no memory available.....	148
F00D2001, Access error, axis 1.....	148
F00D2002, Access error, axis 2.....	148
F00D2003, Access error, axis 3.....	148
F00D2004, Access error, axis 4.....	149
F00D2005, Access error, axis 5.....	149
F00D2006, Access error, axis 6.....	149
F00D2007, Access error, axis 7.....	150
F00D2008, Access error, axis 8.....	150
F00D2009, Access error, axis 9.....	150
F00D200A, Access error, axis 10.....	151
F00D200B, Access error, axis 11.....	151
F00D200C, Access error, axis 12.....	151
F00D200D, Access error, axis 13.....	152
F00D200E, Access error, axis 14.....	152
F00D200F, Access error, axis 15.....	152
F00D2010, Access error, axis 16.....	153
F00D2064, Axis not configured.....	153
F00D2EE1, Fatal error: Inline los.....	153
F00D2EE2, An untreated Inlinebus error has occurred.....	154
F00D2EE3, Reset on Inlinebus occured.....	154
F00D2EE5, Module error Inline bus comes.....	154

Table of Contents

	Page
F00D2EE7, System at the maximum load.....	155
F00F0001 up to F00F0006, RTOS Error (Real Time Operating System).....	155
F0110001, No power turned.....	155
F0110010, Error while synchronization of system time of the drive.....	155
F0110040, Axis reference invalid, axis is master axis.....	156
F0140001, Error in device configuration.....	156
F0160001 up to F0160002, RTOS Error (Real Time Operating System).....	156
F0160003, Error while changing to P0.....	156
F0160004, Error while changing to P0.....	157
F0160005, Error while changing to P2.....	157
F0160006, Error while changing to P2.....	157
F0160008, Error while changing to P3.....	157
F0160009, Error while changing to P3.....	157
F0160010, Error while changing to P3.....	158
F0160011, Error during preparation for changing to P2.....	158
F0160012, Error while changing to BB.....	158
F0160013, Error while changing to BB.....	158
F0160014, Error while changing to BB.....	158
F0160015 up to F0160023, RTOS Error (Real Time Operating System)	159
F0160024, Error in cross-check C-parameters.....	159
F0160025, Error in cross-check A-parameters.....	159
F0160026 up to F0160029, RTOS Error (Real Time Operating System)	159
F0160030, Multiple configuration of cyclic parameter.....	159
F0160031, Cyclic channel not available.....	160
F0160032, Error while changing to P2.....	160
F0160033, Error while changing to P2.....	160
F0160034, Error while changing to P3.....	161
F0160035, Error during configuration of link communication.....	161
F0160036, Error during configuration of link communication.....	161
F0160037, Error during configuration of link communication.....	162
F0160038, Unable to deactivate link axes.....	162
F0160040, Error in cross-check K-parameters.....	162
F0180008, Motion kernel exceeded control cycle time.....	162
F0180009, Calculation of actual values exceeded cycle time.....	163
F01B0000, RTOS error (Real Time Operating System).....	163
F01B0001, RTOS error (Real Time Operating System).....	164
F01B0002, RTOS error (Real Time Operating System).....	164
F01B0003, RTOS error (Real Time Operating System).....	164
F01B0004, RTOS error (Real Time Operating System).....	165
F01B0005, RTOS error (Real Time Operating System).....	165
F01B0006, RTOS error (Real Time Operating System).....	165
F01B0007, RTOS error (Real Time Operating System).....	165
F01B0008, RTOS error (Real Time Operating System).....	166
F01B0009, RTOS error (Real Time Operating System).....	166
F01B0010, RTOS error (Real Time Operating System).....	166
F01B0011, Error while starting DHCP client.....	166

Table of Contents

	Page
F01B0012, Error while starting DHCP client.....	166
F01B0013, Error DHCP Client - No lease, default restored.....	166
F01D0001 bis F01D0014, Error RTOS (Real Time Operating System)	166
F01D0015, Excecution locked by C-0-0036.....	167
F01D0016, No application found to load.....	167
F0200001, Firmware download failed.....	167
F0200002, Firmware download failed.....	167
F0200003, Firmware download failed.....	167
F0200004, Firmware download failed.....	167
F0200005, Firmware download failed.....	167
F0200006, Firmware download failed.....	168
F0200007, Firmware download failed.....	168
F0200008, Firmware download failed.....	168
F0200009, Firmware download failed.....	168
F0200010 up to F0200022, RTOS Error (Real Time Operating System)	168
F0200024, Firmware download failed.....	168
F0200025, Firmware download failed.....	169
F0200026, Firmware download failed.....	169
F0200027, Firmware download failed.....	169
F0200028, Firmware download failed.....	169
F0200029, Firmware download failed.....	169
F0200030, Error deleting files in SYSTEM partition.....	169
F0200031, Error deleting files in OEM partition.....	170
F0200032, Error deleting files in USER partition.....	170
F0200033, Storage of remanent data impossible.....	170
F0200036, Error initialising the hardware watchdog.....	170
F0200037, Error triggering the hardware watchdog.....	170
F0200038, Firmware download failed.....	171
F0200039, Firmware download failed.....	171
F0200040, Failure of temperature monitoring, hardware defect impends.....	171
F0220200, General drive error.....	171
F0220201, Invalid control number.....	172
F0220202, Invalid axis number.....	172
F0220203, Invalid command type.....	172
F0220204, Command not supported by axis.....	172
F0220205, Command rejected, no power.....	172
F0220206, Command rejected while 'Stopping'.....	172
F0220207, Command rejected while 'Homing'.....	173
F0220208, Invalid command number.....	173
F0220210, Reset still 'ErrorStop'.....	173
F0220211, Command rejected while 'Diskrete Motion'.....	173
F0220212, Command rejected while 'Continuous Motion'.....	174
F0220213, Command rejected while 'Synchronized Motion'.....	174
F0220214, Command rejected while 'ErrorStop'.....	174
F0220216, No power available.....	174
F0220217, Command rejected while 'StandStill' and 'PowerOn'.....	175

Table of Contents

	Page
F0220218, Command rejected while 'StandStill'.....	175
F0220223, Velocity below minimum.....	175
F0220224, Velocity above maximum.....	175
F0220225, Acceleration below minimum.....	175
F0220226, Acceleration above maximum.....	176
F0220227, Deceleration below minimum.....	176
F0220228, Deceleration above maximum.....	176
F0220229, Jerk below minimal.....	176
F0220230, Jerk above maximum.....	176
F0220232, Invalid master control number.....	177
F0220233, Invalid master axis number.....	177
F0220234, Invalid CamTable ID.....	177
F0220263, RatioNumerator below minimum.....	177
F0220264, RatioNumerator above maximum.....	177
F0220265, RatioDenominator below minimum.....	178
F0220266, RatioDenominator above maximum.....	178
F0220267, MasterFineAdjust below minimum.....	178
F0220268, MasterFineAdjust above maximum.....	178
F0220269, Invalid SyncMode.....	179
F0220270, Invalid StartMode.....	179
F0220271, Cam distance below minimum value.....	179
F0220272, Cam distance above maximum value.....	179
F0220273, Command rejected while 'Parameter Mode'.....	179
F0220274, Axis not referenced.....	180
F0220275, Command aborted.....	180
F0220276, Control error.....	180
F0220277, Direct master axis change.....	180
F0220278, Command 'Disabled axis' active.....	180
F0220279, Command 'parking axis' active.....	181
F0220280, Command rejected while 'Coordinated Motion'.....	181
F0220281, Invalid float data.....	181
F0220282, MotionProfile, SetSelection below minimum value.....	181
F0220283, MotionProfile, SetSelection above maximum value.....	181
F0220284, Command rejected while 'Parameter Mode'.....	182
F0220287, Unreferenced cam table object.....	182
F0220288, ChangeCamTable: above maximum value.....	182
F0220289, ChangeCamTable: below minimum value.....	182
F0220290, ChangeCamTable: invalid ID.....	182
F0220291, Unreferenced MotionProfile object.....	182
F0220292, ChangeMotionProfileSet: SetNumber below minimum value.....	183
F0220293, ChangeMotionProfileSet: SetNumber above maximum value.....	183
F0220294, ChangeMotionProfileSet: Selected profile write-protected.....	183
F0220295, ChangeMotionProfileStep, invalid StepNumber.....	183
F0220300, Invalid command channel.....	183
F0220301, Command rejected while 'Controlled Motion'.....	184
F0220316, ChangeFlexProfile: Length of FlexProfile lists inconsist.....	184

Table of Contents

	Page
F0220317, ChangeFlexProfile: No steps in profile.....	186
F0220318, ChangeFlexProfile: Unknown master.....	186
F0220319, ChangeFlexProfile: Motion law unknown.....	186
F0220320, ChangeFlexProfile: Step mode unknown.....	187
F0220321, ChangeFlexProfile: Step range 0 or negative.....	187
F0220322, ChangeFlexProfile: Invalid comb. of boundary value types.....	187
F0220323, ChangeFlexProfile: Invalid boundary values.....	188
F0220324, ChangeFlexProfile: Invalid Hub.....	188
F0220325, ChangeFlexProfile: Invalid value for turnaround point disp.....	189
F0220326, ChangeFlexProfile: Invalid slope.....	189
F0220327, ChangeFlexProfile: Invalid Cam table.....	189
F0220328, ChangeFlexProfile: Motion law + selected step mode.....	190
F0220329, ChangeFlexProfile: Velocity jump in profile.....	190
F0220330, ChangeFlexProfile: Acceleration jump in profile.....	191
F0220331, ChangeFlexProfile: Jerk jump in profile.....	191
F0220332, ChangeFlexProfile: Velocity limit invalid.....	191
F0220333, ChangeFlexProfile: Acceleration limit invalid.....	192
F0220334, Unreferenced FlexProfile object.....	192
F0220335, FlexProfile: Set is write-protected.....	192
F0220341, FlexEvent: Set is write-protected.....	193
F0220343, ChangeFlexEvent: Length of FlexProfile lists inconsistent.....	193
F0220344, ChangeFlexEvent: Step Number assignment is invalid.....	193
F0220345, ChangeFlexEvent: Trigger-Mode is invalid.....	194
F0220346, ChangeFlexEvent: Action-Mode is invalid.....	194
F0220349, ChangeFlexProfile: Jerk limit invalid.....	194
F0220350, ChangeFlexProfile: Limit too low.....	195
F0220355, ChangeFlexProfile: Invalid sequence of Flex-Steps.....	195
F0220360, Command rejected while 'Controlled Motion'.....	196
F0220361, ChangeFlexProfile: Invalid master axis source.....	196
F0220501, Wrong data type.....	196
F0220502, ProbeModule out of range.....	197
F0220503, ProbeInput out of range.....	197
F0220504, ExpectWindowPosEdgeMode out of range.....	197
F0220505, ExpectWindowNegEdgeMode out of range.....	197
F0220506, ExpectWindowPosEdgeStart out of range.....	198
F0220507, ExpectWindowPosEdgeEnd out of range.....	198
F0220508, ExpectWindowNegEdgeStart out of range.....	198
F0220509, ExpectWindowNegEdgeEnd out of range.....	198
F0220510, ExpectWindowPosEdgeSetPoint out of range.....	198
F0220511, ExpectWindowNegEdgeSetPoint out of range.....	198
F0220512, MarkerFailureEnable out of range.....	199
F0220513, MaxNumberOfMarkerFailure out of range.....	199
F0220514, Interpolation out of range.....	199
F0220515, TimeStampEnable out of range.....	199
F0220516, DeadTimePosEdge out of range.....	199
F0220517, DeadTimeNegEdge out of range.....	199

Table of Contents

	Page
F0220518, ProbeData out of range.....	200
F0220519, PositionEvalMode out of range.....	200
F0220520, DiffEvalMode out of range.....	200
F0220521, TOUCHPROBE_REF is not valid or wrong configuration.....	200
F0220522, AXIS_REF is not valid or wrong configuration of axis.....	200
F0220600, Path / file name unknown.....	200
F0220601, Unsupported file system.....	201
F0220602, Input 'StartIdx' has an invalid value.....	201
F0220603, Invalid state of state machine.....	201
F0220604, Error in file structure.....	201
F0220605, Input 'ArrayDimension' has an invalid value.....	201
F0220606, Point not found.....	201
F0220607, Wrong number of coordinates per point.....	202
F0220608, Wrong number of kinematics.....	202
F0220609, Wrong point type, point in world or joint coordinates.....	202
F0260001, MC_DigitalCamSwitch, Unable to acquire APS reference.....	202
F0260002, MC_DigitalCamSwitch, Unable to open cyclic channel.....	202
F0260003, MC_DigitalCamSwitch, Unable to allocate memory.....	202
F0260004, MC_DigitalCamSwitch, Unable to read parameter.....	203
F0260005, MC_DigitalCamSwitch, Invalid combination of units.....	203
F0260006, MC_DigitalCamSwitch, On-/Off compensation time longer 16s.....	203
F0260007, MC_DigitalCamSwitch, Invalid state of state machine.....	203
F0260010, ML_PIDType01, Low limit is higher than High limit.....	203
F0260011, ML_PIDType01, Invalid state of state machine.....	204
F0260012, ML_PIDType01, Selected controller type not supported.....	204
F0260030, Inputs have invalid values.....	204
F0260031, Invalid state of state machine.....	204
F0260032, Calculations resulted in invalid values.....	204
F0260040, Reference to base system not found.....	204
F0260041, Function block could not be instantiated.....	205
F0260042, Function block may not be located in RETAIN data area.....	205
F0260050, ML_CtrlJobConnect, Invalid values of inputs of POU.....	205
F0260051, ML_CtrlJobConnect, Set of command into queue failed.....	205
F0260052, ML_CtrlJobConnect, Reject of inv. command or status error.....	205
F0260053, ML_CtrlJobConnect, Watch dog - time out.....	207
F026005D, ML_CtrlJobConnect, Invalid state of I/O of POU.....	207
F026005E, ML_CtrlJobConnect, Invalid state of state machine of POU.....	207
F026005F, ML_CtrlJobConnect, Error during init of POU instance.....	207
F0260060, ML_ShowJobConnect, Invalid values of inputs of POU.....	207
F0260061, ML_ShowJobConnect, Set of command into queue failed.....	207
F0260062, ML_ShowJobConnect, Reject of inv. command or status error.....	207
F0260063, ML_ShowJobConnect, Watch dog - time out.....	207
F026006E, ML_ShowJobConnect, Invalid state of state machine of POU.....	207
F026006F, ML_ShowJobConnect, Error during init of POU instance.....	208
F0260070, ML_SendJobTlg, Invalid values of inputs of POU.....	208
F0260071, ML_SendJobTlg, Set of command into queue failed.....	208

Table of Contents

	Page
F0260072, ML_SendJobTlg, Watch dog - time out.....	208
F026007E, ML_SendJobTlg, Invalid state of state machine of POU.....	208
F026007F, ML_SendJobTlg, Error during init of POU instance.....	208
F0260080, ML_RecvJobTlg, Invalid values of inputs of POU.....	208
F0260081, ML_RecvJobTlg, Set of command into queue failed.....	208
F0260082, ML_RecvJobTlg, Watch dog - time out.....	208
F026008E, ML_RecvJobTlg, Invalid state of state machine of POU.....	209
F026008F, ML_RecvJobTlg, Error during init of POU instance.....	209
F0260090, ML_SendRecvJobAss, Invalid values of inputs of POU.....	209
F0260091, ML_SendRecvJobAss, Store of recieved job telegram failed.....	209
F0260092, ML_SendRecvJobAss, Watch dog - time out.....	209
F0260095, ML_SendRecvJobAss, Error communication socket (create).....	209
F0260096, ML_SendRecvJobAss, Error communication socket (close).....	209
F0260097, ML_SendRecvJobAss, Error communication socket (ioctl).....	209
F0260098, ML_SendRecvJobAss, Error communication socket (bind).....	209
F0260099, ML_SendRecvJobAss, Error ethernet buffer (recvfrom).....	210
F026009A, ML_SendRecvJobAss, Error ethernet buffer (sendto).....	210
F026009B, ML_SendRecvJobAss, Defrag error of send/ receive buffer.....	210
F026009C, ML_SendRecvJobAss, Error on communication sockets.....	210
F026009D, ML_SendRecvJobAss, Invalid state of I/O of POU.....	210
F026009E, ML_SendRecvJobAss, Invalid state of state machine of POU.....	210
F026009F, ML_SendRecvJobAss, Error during init of POU instance.....	210
F02600A0, ML_DebugJobConnect, Invalid values of inputs of POU.....	210
F02600A1, ML_DebugJobConnect, Set of command into queue failed.....	210
F02600A2, ML_DebugJobConnect, Invalid command / getting status.....	211
F02600A3, ML_DebugJobConnect, Invalid command / getting status.....	211
F02600A4, ML_DebugJobConnect, Watch dog - time out.....	211
F02600AE, ML_DebugJobConnect, Invalid state of state machine of POU.....	211
F02600AF, ML_DebugJobConnect, Error during init of POU instance.....	211
F0280001, Invalid number of CFL01.1 modules (-Q2, -R3).....	211
F0280002, Upload of firmware into des CFL01.1-Q2-FPGA failed.....	212
F0280003, Initialization of the CFL01.1-Q2 module failed.....	212
F0280004, Link ring broken.....	212
F0280005, Link ring: masterposition incorrect MDT.....	213
F0280006, Link ring: masterposition incorrect AT.....	213
F0280007, Link ring: variant cycle time detected.....	213
F0280010, Link axis not projectable, C2C is not configured yet.....	213
F0280011, C2C: Connection not applicable, as not configured.....	214
F0280012, C2C: Connection error.....	214
F0280020, Semaphore error while switching C2C phase.....	214
F0280021, Invalid commanded C2C phase.....	214
F0280022, Internal error due to the C2C service channel.....	214
F0280023, Incompatible C2C device found.....	215
F0280024, C2C ring not closed.....	215
F0280025, C2C: Configuration not consistent.....	215
F0280027, C2C: Error device not found.....	216

Table of Contents

	Page
F0280029, C2C: Error switching phase 3.....	216
F0280030, C2C: Error command S-0-0127, P3 transition check.....	216
F0280031, C2C: Error switching phase 4.....	216
F0280034, Invalid configuration of C2C timing.....	217
F0280041, C2C: sercos cycle time not possible.....	217
F0280044, Link ring: invalid HW synchronization.....	217
F0280060, C2C master: hot plug slave w/o sercos III-interface (HP0).....	217
F0280061, C2C master: misconfigured hot plug slave (HP0).....	218
F0280062, C2C master: error while scanning the hot plug slaves (HP1).....	218
F0280063, C2C master: HP1 parameters faultily receipted (HP1).....	218
F0280064, C2C master: error running the service channel (HP1).....	219
F0280065, C2C master: hot plug mechanism aborted.....	219
F0280066, C2C master: HotPlug not supported.....	219
F0280067, C2C master: invalid slave address detected (HP1).....	220
F0280068, Ring topology could not be established.....	220
F0280080, C2C slave: hot plug via C2C master impossible (HP0.1).....	220
F0280081, C2C slave: HP0 parameters defective/incomplete (HP0.2).....	221
F0280082, C2C slave: slave address missed in HP control word (HP0.3).....	221
F0280083, C2C slave: HP1 parameters defective/incomplete (HP01.1).....	221
F0280084, C2C slave: error within C2C service channel (HP1.2).....	222
F0280085, C2C slave: faulty scan algorithm within C2C master (HP1.2).....	222
F0280086, C2C slave: error running switch command S-0-0127/8 (HP2).....	222
F0280087, C2C slave: hot plug mechanism failed.....	223
F0280100, Lack of memory due to the C2C interface data.....	223
F0280101, Initialization of the C2C hardware failed.....	223
F0280103, Master axis not applicable, defective internal axis table.....	224
F0280104, Old master axis unerasable, defective internal axis table.....	224
F0280105, Setup of the P-/S-Count values via SVCH failed.....	224
F0280106, Enquiry of the P-/S-SynCnt values via SVCH failed.....	224
F0280107, Enquiry of the ring configuration ID via SVCH failed.....	225
F0280109, Generic (configuration) error due to the C2C interface.....	225
F0280161, Set point transfer error.....	225
F0290001, Transformation not valid.....	226
F0290400, General kinematics error.....	226
F0290401, Invalid control number.....	226
F0290402, Invalid kinematics number.....	226
F0290403, Invalid command type.....	226
F0290404, Command not supported by kinematics.....	226
F0290405, Command rejected while 'StandStill Incomplete'.....	226
F0290406, Command rejected while 'PM Program Stopping'.....	226
F0290407, Command rejected while 'StandStill Complete'.....	226
F0290408, Invalid command number.....	227
F0290409, Command not supported in this state.....	227
F0290410, Reset still 'ErrorStop'.....	227
F0290411, Command rejected while 'PM Program Running'.....	227
F0290412, Error while selecting RCL program.....	227

Table of Contents

	Page
F0290413, Command rejected while 'Parameter Mode'.....	227
F0290414, Command rejected while 'ErrorStop'.....	227
F0290415, Command aborted.....	227
F0290416, Switching to 'StandStill' not possible.....	227
F0290417, RCL process does not exist.....	228
F0290501, Two PLC-MotionCommands per motion cycle not allowed.....	228
F0290502, Command rejected - buffer full.....	228
F0290503, Invalid motion command.....	228
F0290505, Synchronisation to more than one belt not possible.....	228
F0290508, Invalid coordinate system.....	228
F0290510, Belt not configured.....	228
F0290516, Wrong PCS index.....	228
F0290517, Wrong CS selected.....	228
F0299528, TeachIn: No name given.....	229
F0299529, TeachIn: Name too long.....	229
F029952A, TeachIn: Wrong name.....	229
F029952B, TeachIn: Point already exist.....	229
F029952C, TeachIn: Point doesn't exist.....	229
F029952D, TeachIn: Wrong option.....	229
F029952E, Tacheln: File corrupted.....	229
F029952F, TeachIn: Wrong coordinate.....	230
F0299530, TeachIn: Wrong coordinate system.....	230
F0299531, TeachIn: File could not be opened.....	230
F0299538, Too many position axes.....	230
F0299539, Too many orientation axes.....	230
F029953A, Too many belt axes.....	230
F02B0004, Axis not part of kinematics.....	230
F02B0005, Axis not existing.....	230
F02B0028, Jog in other coordinate system already active.....	230
F02B0029, Jog in same direction already active.....	231
F02B9020, Transformation does not exist.....	231
F02B9021, Axis angles out of definition range.....	231
F02B9022, Point can not reached by transformation.....	231
F02B9023, In saved range of transformation.....	231
F02B9024, Axis has wrong scaling for transformation.....	231
F02B9025, Too less axes for Transformation.....	231
F02C0066, Axis list in K-0-0008 not completed.....	231
F02C00B7, Reserved.....	232
F02C0173, Illegal jump instruction.....	232
F02C0177, Error in exclusive statement, EXCLUSIVE_END expected.....	232
F02C017B, Subprogram nesting depth exceeded.....	232
F02C017D, Illegal relational operator.....	232
F02C017F, Belt type expected.....	232
F02C0182, Jump statement not permitted.....	232
F02C0183, Circle with one axis not possible.....	232
F02C0202, Programname contains invalid characters.....	232

Table of Contents

	Page
F02C0203, QLL-file not found.....	232
F02C0204, Error during compilation.....	233
F02C0205, SRAM semaphore defective.....	233
F02C033F, Illegal program name.....	233
F02C0340, Program name too long.....	233
F02C0342, Illegal file name extension.....	233
F02C0489, IOL-on: Time offset too long.....	233
F02C048A, IOL-off: Time offset too long.....	233
F02C048B, PPO: Time offset too long.....	233
F02C048C, IOL-on: Function in use.....	234
F02C048D, IOL-off: Function in use.....	234
F02C048E, PPO: Function in use.....	234
F02C0491, PPO: Velocity greater than max. velocity.....	234
F02C0895, Data transfer error.....	234
F02C0898, Data transfer error.....	234
F02C089C, Data transfer error.....	234
F02C089D, Data transfer error.....	234
F02C08D0, Data transfer error.....	234
F02C0E10, rFkt: invalid length.....	234
F02C0E11, rFkt: Client disconnected (1).....	235
F02C0E12, rFkt: malloc error.....	235
F02C0E13, rFkt: Client disconnected (2).....	235
F02C0E14, rFkt: wrong channel.....	235
F02C0E15, rFkt: READ error.....	235
F02C0E16, rFkt: WRITE error.....	235
F02C0E17, rFkt: CONNECT error.....	235
F02C0E44, Socket error PCL.....	235
F02C0E45, Unknown server PCL.....	235
F02C0E46, No connect PCL.....	235
F02C0E47, Socket error.....	236
F02C0E48, Bind error.....	236
F02C0E49, List error.....	236
F02C0E4A, Accept error.....	236
F02C0E52, Serial writing is not possible.....	236
F02C0ECE, Shutdown error.....	236
F02C0ECF, Shutdown error.....	236
F02C0F1E, End of file.....	236
F02C0F1F, File opened for write.....	236
F02C0F20, No compressing.....	236
F02C0F21, File does not exist.....	237
F02C0F22, Memory (user) overflow.....	237
F02C0F23, File too many opened.....	237
F02C0F24, File still opened.....	237
F02C0F25, File opened for write.....	237
F02C0F26, File already exists.....	237
F02C0F27, No reserved block empty.....	237

Table of Contents

	Page
F02C0F28, File not found.....	237
F02C0F3B, Not enough heap.....	237
F02C0F3F, Read error PKT file.....	238
F02C0F40 up to F02C0F57, Access denied	238
F02C908A, Number of axes too small for the current robot type.....	238
F02C9479, WC zero position is singular.....	238
F02C947A, Too close to stand.....	238
F02C9482, Invalid belt number.....	238
F0308001, Over-temperature.....	238
F0308002, Power failure.....	239
F0308003, PLS: Invalid configuration of cycle times.....	239
F0310004, Basic internal error in the oscilloscope.....	239
F0310007, Starting the oscilloscope is not possible.....	239
F0310008, Error during trigger-check.....	239
F0310009, Error during data recording.....	239
F03500FA, RCL Compiler: Time constant too great.....	240
F03500FB, RCL Compiler: Variable longer than 12 characters.....	240
F03500FD, RCL Compiler: Unexpected end of line.....	240
F03500FF, RCL Compiler: Syntax error, number expected.....	240
F0350101, RCL Compiler: Colon expected.....	240
F0350102, RCL Compiler: Left squared bracket expected.....	240
F0350103, RCL Compiler: Right squared bracket expected.....	240
F0350104, RCL Compiler: END expected.....	240
F0350105, RCL Compiler: EXACT or CIRCA expected.....	240
F0350106, RCL Compiler: INTEGER constant expected.....	240
F0350107, RCL Compiler: Equal sign expected.....	240
F0350108, RCL Compiler: Left bracket expected.....	240
F0350109, RCL Compiler: Right bracket expected.....	240
F035010A, RCL Compiler: Smaller or greater expected.....	241
F035010B, RCL Compiler: End of line or file or colon expected.....	241
F035010C, RCL Compiler: Multiplication expected.....	241
F035010D, RCL Compiler: TO or VIA expected.....	241
F035010E, RCL Compiler: Variable expected.....	241
F035010F, RCL Compiler: Keyword PROGRAM expected.....	241
F0350110, RCL Compiler: FILE expected.....	241
F0350111, RCL Compiler: SUBROUTINE expected.....	241
F0350112, RCL Compiler: REPEAT_END expected.....	241
F0350113, RCL Compiler: Type not defined.....	241
F0350114, RCL Compiler: Const., symbol or expres. as factor exp.....	241
F0350115, RCL Compiler: End of file expected.....	241
F0350116, RCL Compiler: Invalid symbol.....	242
F0350117, RCL Compiler: Instruction expected.....	242
F0350118, RCL Compiler: Output variable expected.....	242
F0350119, RCL Compiler: Output not permitted.....	242
F035011A, RCL Compiler: BINARY expected.....	242
F035011B, RCL Compiler: REAL expected.....	242

Table of Contents

	Page
F035011C, RCL Compiler: Input variable expected.....	242
F035011D, RCL Compiler: Input not permitted.....	242
F035011E, RCL Compiler: Program and file name do not fit.....	242
F035011F, RCL Compiler: Invalid number of elements.....	242
F0350120, RCL Compiler: Array expected.....	242
F0350121, RCL Compiler: Function name expected.....	242
F0350122, RCL Compiler: INTEGER expected.....	242
F0350123, RCL Compiler: INTEGER too large.....	243
F0350124, RCL Compiler: Read access not permitted.....	243
F0350125, RCL Compiler: Label already defined.....	243
F0350126, RCL Compiler: Label expected.....	243
F0350127, RCL Compiler: Label not defined.....	243
F0350128, RCL Compiler: JC-Point expected.....	243
F0350129, RCL Compiler: @ - character not permitted.....	243
F035012A, RCL Compiler: @ - character expected.....	243
F035012B, RCL Compiler: Symbol already exists.....	243
F035012C, RCL Compiler: Label for structure element expected.....	243
F035012D, RCL Compiler: Name not defined.....	243
F035012E, RCL Compiler: Point or point variable expected.....	243
F035012F, RCL Compiler: Pair of points expected.....	244
F0350130, RCL Compiler: Jump back only permitted in subroutine.....	244
F0350131, RCL Compiler: Write access not permitted.....	244
F0350132, RCL Compiler: Jump not permitted.....	244
F0350134, RCL Compiler: Type conflict.....	244
F0350135, RCL Compiler: Lower limit exceeds upper limit.....	244
F0350136, RCL Compiler: Type incorrect.....	244
F0350137, RCL Compiler: Invalid axis number.....	244
F0350138, RCL Compiler: Subroutine name expected.....	244
F0350139, RCL Compiler: Variable expected.....	244
F035013A, RCL Compiler: Record variable expected.....	244
F035013B, RCL Compiler: Point expected.....	244
F035013C, RCL Compiler: Invalid extension.....	244
F035013D, RCL Compiler: Too many arguments.....	245
F035013E, RCL Compiler: Too less arguments.....	245
F035013F, RCL Compiler: Not implemented.....	245
F0350140, RCL Compiler: Compiler error.....	245
F0350142, RCL Compiler: QLL file not present.....	245
F0350143, RCL Compiler: Error, file not found.....	245
F0350144, RCL Compiler: File only accepted in main program.....	245
F0350146, RCL Compiler: Error during compilation.....	245
F0350147, RCL Compiler: Out of memory.....	245
F0350148, RCL Compiler: IRD file error.....	245
F0350149, RCL Compiler: Symbol file error.....	245
F035014A, RCL Compiler: Point file error.....	245
F035014B, RCL Compiler: Error in error file.....	246
F035014D, RCL Compiler: Keyword DEF incorrect.....	246

Table of Contents

	Page
F035014E, RCL Compiler: Include file not present.....	246
F0350150, RCL Compiler: Axis name incorrect.....	246
F0350151, RCL Compiler: Index error.....	246
F0350152, RCL Compiler: invalid program parameter.....	246
F0350153, RCL Compiler: Keyword instead of label.....	246
F0350155, RCL Compiler: Comma expected.....	246
F0350156, RCL Compiler: SUB_END expected.....	246
F0350157, RCL Compiler: PROGRAM_END expected.....	246
F0350158, RCL Compiler: Too many axes.....	246
F035015A, RCL Compiler: Number exists twice.....	246
F035015B, RCL Compiler: Cannot add point on kinematics.....	246
F035015C, RCL Compiler: Kinematics name expected.....	247
F035015D, RCL Compiler: Cannot add belt on kinematics.....	247
F035015E, RCL Compiler: External program expected.....	247
F035015F, RCL Compiler: INPUT/OUTPUT only permitted in decl.....	247
F0350160, RCL Compiler: Address for INPUT/OUTPUT expected.....	247
F0350161, RCL Compiler: Out of array.....	247
F0350162, RCL Compiler: Wrong type in array.....	247
F0350163, RCL Compiler: Input/Output.....	247
F0350164, RCL Compiler: Invalid channel address.....	247
F0350165, RCL Compiler: Coordinate expected.....	247
F0350166, RCL Compiler: Invalid kinematics instruction.....	247
F0350167, RCL Compiler: BEGIN expected.....	247
F0350168, RCL Compiler: Keyword conflict.....	248
F035016F, RCL Compiler: PKT file read / write error.....	248
F0350179, RCL Compiler: Wrong compiler version.....	248
F035017C, RCL Compiler: Maximum table entry exceeded.....	248
F035017E, RCL Compiler: Maximum error count reached.....	248
F0350185, RCL Compiler: Double INCLUDE - statement.....	248
F0350186, RCL Compiler: EXTERN only permitted in main program.....	248
F0350188, RCL Compiler: Only one EXPORT program permitted.....	248
F0350189, RCL Compiler: Pointvariable not found.....	248
F035018A, RCL Compiler: Different CID.....	248
F035018C, RCL Compiler: No EXPORT variable found.....	248
F035018D, RCL Compiler: Different axis count of the kinematics.....	248
F035018E, RCL Compiler: Not defined kinematics.....	249
F03501AC, RCL Compiler: Identifier expected.....	249
F03501AD, RCL Compiler: Type expected.....	249
F03501AE, RCL Compiler: RECORD expected.....	249
F03501AF, RCL Compiler: RECORD_END expected.....	249
F03501B0, RCL Compiler: IF expected.....	249
F0350200, RCL Compiler: File name too long.....	249
F0350212, RCL Compiler: Type name expected.....	249
F0350213, RCL Compiler: Identifier already defined.....	249
F0350214, RCL Compiler: Keyword here not permitted.....	249
F0350216, RCL Compiler: Recursive data types not permitted.....	249

Table of Contents

	Page
F0350217, RCL Compiler: Write/read from this data type not possible.....	249
F0350218, RCL Compiler: Compare operator expected.....	249
F0350219, RCL Compiler: Illegal INPUT type.....	250
F035021A, RCL Compiler: Illegal OUTPUT type.....	250
F035021B, RCL Compiler: Illegal CASE konstant.....	250
F035021E, RCL Compiler: Illegal INPUT ARRAY.....	250
F035021F, RCL Compiler: Illegal OUTPUT ARRAY.....	250
F0350220, RCL Compiler: Wrong type during parameter transfer.....	250
F0350221, RCL Compiler: File only accepted in main program.....	250
F0350222, RCL Compiler: INPUT/OUTPUT only permitted in main program.....	250
F0350223, RCL Compiler: Data type FILE in RECORD not permitted.....	250
F0350224, RCL Compiler: Kinematics konflikt.....	250
F0350227, RCL Compiler: Wrong format for export file.....	250
F0350228, RCL Compiler: No values assumed.....	250
F035022B, RCL Compiler: Equal or greater than expected.....	251
F035022C, RCL Compiler: Constant expected.....	251
F035022D, RCL Compiler: IF_END expected.....	251
F035022E, RCL Compiler: Two points expected.....	251
F035022F, RCL Compiler: LABEL incompatible.....	251
F0350230, RCL Compiler: Wrong data type in CASE structure.....	251
F0350232, RCL Compiler: Multiple LABEL definition.....	251
F0350233, RCL Compiler: CASE table overflow.....	251
F0350234, RCL Compiler: Division by zero.....	251
F0350235, RCL Compiler: Positive number expected.....	251
F035023A, RCL Compiler: Translation aborted.....	251
F035023B, RCL Compiler: Error during memory approval.....	251
F035023C, RCL Compiler: End of PKT-file reached.....	251
F035023D, RCL Compiler: Error, cannot create point in PKT-File.....	252
F035023F, RCL Compiler: Keyword T expected.....	252
F0350242, RCL Compiler: Variable or expression expected.....	252
F0350243, RCL Compiler: Program name expected.....	252
F0350244, RCL Compiler: Program start expected.....	252
F0350245, RCL Compiler: Illegal program name.....	252
F0350247, RCL Compiler: Alignment unequal four.....	252
F0350249, RCL Compiler: Illegal kinematics name.....	252
F0350484, RCL Compiler: Illegal kinematics number.....	252
F0360000, MLPI: Success.....	252
F0360001, MLPI: Common error.....	253
F0360002, MLPI: Not supported.....	253
F0360003, MLPI: Invalid argument.....	253
F0360004, MLPI: Out of memory.....	253
F0360005, MLPI: Timeout.....	253
F0360006, MLPI: Server exception.....	253
F0360007, MLPI: Connection failed.....	254
F0360008, MLPI: Create error.....	254
F0360009, MLPI: System error.....	254

Table of Contents

	Page
F036000A, MLPI: Buffer too short.....	254
F036000B, MLPI: Invalid signature.....	254
F036000C, MLPI: Start error.....	254
F036000D, MLPI: Watchdog warning.....	255
F036000F, MLPI: Not implemented.....	255
F0360010, MLPI: Minimum limit exceeded.....	255
F0360011, MLPI: Maximum limit exceeded.....	255
F0360012, MLPI: Version conflict.....	255
F0360013, MLPI: Deprecated.....	255
F0360014, MLPI: Permission error.....	255
F0360015, MLPI: Type mismatch.....	256
F0360016, MLPI: Size mismatch.....	256
F0360017, MLPI: Invalid handle.....	256
F0360018, MLPI: No connection.....	256
F0360019, MLPI: ReadWrite protected.....	256
F036001A, MLPI: Invalid floating point number.....	256
F036001B, MLPI: Object not initialized.....	256
F036001C, MLPI: Data stream out of synchronization.....	257
F0370010, TaskViewer record already started.....	257
F0370011, TaskViewer record not started.....	257
F0370012, Create of TaskViewer file failed.....	257
F0370013, Start of TaskViewer record failed.....	257
F0370014, TaskViewer record failed.....	257
F0370015, Setting of TaskViewer buffer not possible.....	258
F03A2002, Inline bus errors.....	258
F039****, PLC error messages from kernel	258
F03A****, PLC error messages from company components.....	258
3.1.6 F1 Errors, Axis Group Error.....	258
F1 Errors, Error Reaction.....	258
F10B0001, External synchron clock is missing.....	258
F1299535, Beltarea within execution exceeded.....	258
F1299536, Beginlength within execution exceeded.....	259
F12C0041, Protocol length file I/O too long.....	259
F12C0042, Unknown function data I/O.....	259
F12C0062, Passing factor (R_PTP) out of range.....	259
F12C0063, PTP with ContSlope not allowed.....	260
F12C006C, Error during RoCo system startup no. 3.....	260
F12C0074, Positioning limits of an axis was exceeded.....	260
F12C007A, Tensor-Interpolation: Angles not in main area.....	260
F12C007B, Tensor-Interpolation: Angles not calculably.....	260
F12C007E, WC move not possible without reference points.....	260
F12C007F, No feed-allow-signal within belt synchronisation.....	260
F12C0083, Error during RoCo system startup no. 5.....	260
F12C0084, Error during RoCo system startup no. 7.....	260
F12C0085, Error during RoCo system startup no. 9.....	261
F12C0086, Error during RoCo system startup no. 11.....	261

Table of Contents

	Page
F12C0087, Error during RoCo system startup no. 13.....	261
F12C0088, Error during RoCo system startup no. 15.....	261
F12C0089, Axis list is not correct.....	261
F12C008A, Transformation parameter does not fit to robot type.....	261
F12C008B, Transformation error: Singular system of equation.....	261
F12C008C, MODE does not turn to -1.....	262
F12C0099, Beltsync: Endpoint not reachable.....	262
F12C009A, Beltsync: Limit of beltcounter exceeded.....	262
F12C009B, Transformation length is 0.....	263
F12C00A3, Interpolation type not specified.....	263
F12C00A6, Watchdog expired.....	263
F12C00AA, Beltsync: Kinematics in singular position.....	263
F12C00AB, Kinematics in singular position.....	263
F12C00AD, Travel range limit JC reached.....	263
F12C00AE, Beltsync: Travel block activated too late.....	263
F12C00AF, Resulting axis velocity limit exceeded.....	264
F12C00B0, Ambiguity with beltsynchronisation.....	264
F12C00B1, Interpolation in wrong direction.....	264
F12C00B2, AUTO/MANUAL change not allowed.....	264
F12C00B4, Beltsync: 1. BS-Travel block activated too late.....	264
F12C00B5, RoCo Watchdog 2 - Error.....	264
F12C00B6, Beltsync: Block end reached too late.....	264
F12C0100, RoCo watchdog error.....	265
F12C0316, File open for read.....	265
F12C0317, File open for write.....	265
F12C031A, Block not initialized.....	265
F12C031D, Block not connected.....	265
F12C0406, Invalid SPC_FCT.....	265
F12C0407, SPC_FCT 53 was called with wrong parameters.....	265
F12C0408, Error at the last beltsynchronous movement block.....	266
F12C0410, Acceleration not allowed.....	266
F12C041A, Process error.....	267
F12C041B, Process already exists.....	267
F12C041C, Invalid travel time.....	267
F12C041D, Velocity not allowed.....	267
F12C041E, Impermissible jerk.....	267
F12C041F, User memory overflow.....	268
F12C0420, WRITE_BEGIN expected.....	268
F12C0421, File repeated opened.....	268
F12C0422, File already opened.....	268
F12C0423, Invalid file name.....	268
F12C0424, End of file reached while READ.....	268
F12C0426, Missing DAT-File.....	268
F12C0427, Read access to a file which is opened for write.....	269
F12C0428, READ_BEGIN expected.....	269
F12C042A, Missing WCSYST/TOOLS.DAT.....	269

Table of Contents

	Page
F12C042B, WCSYST/TOOLS name missing.....	269
F12C042D, Wrong parameters for external subroutine.....	269
F12C042E, Wrong number of parameters for external subroutine.....	269
F12C042F, Wrong type of parameters for external subroutine.....	269
F12C0430, Wrong declaration of parameters for ext. subroutine.....	269
F12C0431, Program includes parameters.....	270
F12C0432, INTEGER overflow.....	270
F12C0433, Workspace violation.....	270
F12C0435, Illegal parameter for external subroutine.....	270
F12C0436, Format error in DAT-file.....	270
F12C0437, SUB-Process stops its own mainprocess.....	270
F12C0438, Division by zero in RCL program.....	270
F12C0439, Square root with negative argument in RCL program.....	270
F12C043A, PTP within belt synchronous movement.....	271
F12C043C, Point not reachable.....	271
F12C043D, Wrong PKT file.....	271
F12C043F, Invalid output.....	271
F12C0440, Invalid input.....	271
F12C0441, Reserved.....	271
F12C0442, Transformation of this point is not possible.....	271
F12C0444, File does not exist.....	271
F12C0445, Negative delaytime.....	271
F12C0447, Error in IRD program.....	271
F12C0448, IRD stack overflow.....	272
F12C0449, IRD stack underflow.....	272
F12C044A, Invalid number of axes.....	272
F12C044B, Array index out of range.....	272
F12C044C, Program name too long.....	272
F12C044D, IRD option not activ.....	272
F12C044E, Missing PKT file.....	272
F12C044F, Point is not defined.....	272
F12C0451, No points in PKT file.....	272
F12C0453, Braekpoint not allowed because of belt synchr.....	273
F12C0454, Reserved.....	273
F12C0455, Beltsynchronisation can not be activated.....	273
F12C0457, Invalid float value.....	273
F12C0458, File sequentialisation not possible.....	273
F12C045A, Wrong version of the RCL compiler.....	273
F12C045C, Starting point too near the intermediate point.....	273
F12C045D, Starting point too near the endpoint.....	273
F12C045E, Radius of a circle too small.....	273
F12C045F, Only positive velocity allowed.....	274
F12C0460, No belt option.....	274
F12C0462, Intermediate poin too near the endpoint.....	274
F12C0463, Start, intermediate and end point on a straight line.....	274
F12C0464, Start, intermediate and end point too close.....	274

Table of Contents

	Page
F12C0466, Invalid kinematics number.....	274
F12C0467, GLOBAL-File does not exist.....	274
F12C0468, GLOBAL COMMON ID.....	274
F12C0469, Two GLOBAL-Files.....	274
F12C046A, BNR file does not exist.....	275
F12C046C, Option GLOBAL-File is not active.....	275
F12C046D, MOVE FILE: Wrong version.....	275
F12C046E, MOVE FILE: Wrong number of axes.....	275
F12C046F, MOVE FILE: Reading pointer.....	275
F12C0470, MOVE FILE: Time base.....	275
F12C0471, MOVE FILE: IP-LR base.....	275
F12C0472, MOVE FILE: Format fault.....	275
F12C0473, MOVE FILE: MODULO_FLAG not occupied.....	275
F12C0474, Reserved.....	276
F12C0475, No positioning axes defined.....	276
F12C0476, Reserved.....	276
F12C0477, Invalid axes configuration.....	276
F12C0478, Raised/extended arm.....	276
F12C0479, WC zero position is singular.....	276
F12C047A, Too close to stand.....	276
F12C047C, Invalid TOOL value.....	276
F12C047D, Wrong belt direction programed.....	277
F12C047E, Invalid kind of belt/tolerance of belt.....	277
F12C047F, Belt distance is zero.....	277
F12C0480, Invalid point.....	277
F12C0481, Invalid measuring system.....	277
F12C0482, Invalid belt number.....	277
F12C0483, In WC not allowed.....	277
F12C0484, Invalid kinematics number.....	277
F12C0485, PPO/IOL: Invalid function number.....	278
F12C0486, SPC_FCT 1, Invalid kinematics number.....	278
F12C0487, PPO/IOL: Invalid coordinate.....	278
F12C0488, PPO: Invalid parameter value.....	278
F12C048F, PPO/IOL: Invalid function number.....	278
F12C0490, Function number.....	278
F12C0492, Invalid SPS process number.....	278
F12C0493, Invalid time value.....	278
F12C0494, Min. value greater than max. value.....	279
F12C0495, Error by exception process start.....	279
F12C0497, Workspace number.....	279
F12C0498, Transformation in PLC has not been registered.....	279
F12C0499, User defined transformation error in PLC.....	279
F12C049A, Internal error due to transformation in PLC.....	279
F12C0600, Invalid operation at PLC function call.....	279
F12C0601, Denormalized operand at PLC function call.....	280
F12C0602, Zero division at PLC function call.....	280

Table of Contents

	Page
F12C0603, Overflow at PLC function call.....	280
F12C0604, Underflow at PLC function call.....	280
F12C0605, Precision error at PLC function call.....	280
F12C0606, NAN at PLC function call.....	280
F12C0822, Axis not referenced while jogging.....	280
F12C0876, Transformation mathematical undefined.....	281
F12C0877, Hand axis traversing range exceeded.....	281
F12C0878, Orientation axis traversing range exceeded.....	281
F12C0879, Mathematical workspace exceeded.....	281
F12C087A, Singularity of kinematics.....	281
F12C087B, Mathematical workspace exceeded.....	281
F12C087C, Iteration divergent.....	281
F12C087D, COS singular.....	281
F12C0881, Illegal 'Drives ON'.....	281
F12C0883, Kinematics axis lost power.....	281
F12C0885, Workspace out of range.....	282
F12C08A7, Data transfer error.....	282
F12C08BA, Data transfer error.....	282
F12C08C7, Switch to manual operation not permitted.....	282
F12C0EB4, Memory dump error.....	282
F12C0EB5, Memory dump error.....	282
F12C0EB6, Memory dump error.....	282
F12C0EB7, Memory dump error.....	282
F12C0EB8, Memory dump error.....	282
F12C0EB9, Memory dump error.....	283
F12C0F58, Path not defined.....	283
F12C0F59, Position not on the path.....	283
F12C0F5A, Path distance to be shortened is too long.....	283
F12C0F70, Parameter length of the spline invalid.....	283
F12C0F71, Spline function invalid.....	283
F12C0F72, Lengths for spline definition invalid.....	283
F12C0F73, Spline is a straight line.....	283
F12C0F74, Spline is a line with reversal of direction.....	283
F1350C12, Negative time calculated in movement preparation.....	284
3.1.7 F2 errors, axis errors.....	284
F2 errors, error reaction.....	284
F200****, Drive and command error with error number F****	284
F20B0005, Drive error.....	284
F20B0172, sercos III: Error format S-0-0390 incompatible.....	284
F20BE001, M_Busy-Bit not set.....	285
F20BE002, SVC: Protocol error.....	285
F20BE003, SVC: Handshake Timeout.....	285
F20BE004, SVC: Busy Timeout.....	285
F20BE005, SVC: Internal error.....	285
F20BE006, SVC in use.....	286
F20BE007, SVC: Request canceled.....	286

Table of Contents

	Page
F20BE008, SVC internal request pending.....	286
F20BE009, SVC: Error message without SVC errorcode.....	286
F20D1015, Error while closing cyclic channel.....	286
F20D1025, Error while closing cyclic channel.....	287
F20D1029, Error opening cyclic channel.....	287
F20D102B, Error opening cyclic channel (READ-ACCESS).....	287
F20D102C, Error reading access (DirectReadReal).....	287
F20D102D, Error reading access (DirectReadWord).....	287
F20D102E, Error reading access (DirectReadDword).....	287
F20D1034, Error write access (DirectWriteWord).....	287
F20D1036, Axis has not been found (ML_AXISDATA).....	287
F20D1037, Invalid write/read access to ML_AXISDATA.....	288
F2110002, Axis is not homed.....	288
F2110003, Drive of axis does not exist.....	288
F2110004, Synchronization A to S/P-Parameter failed (A-0-0014).....	288
F2110005, Loss of encoder axis reference.....	289
F2110006, Invalid axis configuration.....	289
F2110007, Power lost on axis.....	289
F2110029, Positive travel limit exceeded.....	289
F2110030, Negative travel limit exceeded.....	290
F2110100, Control axis in error.....	290
F2112053, Target position out of travel range error.....	290
F2116029, Positive travel limit exceeded.....	291
F2116030, Negative travel limit exceeded.....	291
F2119001, RTOS error, illegal master axis.....	291
F2220231, Invalid master axis data.....	292
F2220356, Invalid filter time const., additive master position.....	292
F2220357, Invalid filter time const., angle offset begin of profile.....	292
F2220358, Invalid filter time const., additive slave position.....	292
F2220610, Invalid master axis.....	293
F2229200, General drive error.....	293
F2229203, Invalid command type.....	293
F2229204, Command not supported by axis.....	293
F2229205, Command rejected, no power.....	293
F2229206, Command rejected while 'Stopping'.....	294
F2229207, Command rejected while 'Homing'.....	294
F2229208, Invalid command number.....	294
F2229209, Command 'Homing' rejected.....	294
F2229210, Reset still 'ErrorStop'.....	294
F2229211, Command rejected while 'Discrete Motion'.....	295
F2229212, Command rejected while 'Continuous Motion'.....	295
F2229213, Command rejected while 'Synchronized Motion'.....	295
F2229214, Command rejected while 'ErrorStop'.....	295
F2229216, No power available.....	296
F2229217, Command rejected while 'StandStill' and 'PowerOn'.....	296
F2229218, Command rejected while 'StandStill'.....	296

Table of Contents

	Page
F2229221, Targetposition above maximum.....	296
F2229222, Targetposition below minimum.....	297
F2229223, Velocity below minimum.....	297
F2229224, Velocity above maximum.....	297
F2229225, Acceleration below minimum.....	297
F2229226, Acceleration above maximum.....	297
F2229227, Deceleration below minimum.....	298
F2229228, Deceleration above maximum.....	298
F2229229, Jerk below minimum.....	298
F2229230, Jerk above maximum.....	298
F2229231, Invalid direction.....	298
F2229232, Invalid master control number.....	299
F2229233, Invalid master axis number.....	299
F2229234, Invalid CamTable ID.....	299
F2229235, Error in MotionProfile.....	299
F2229263, RatioNumerator below minimum.....	301
F2229264, RatioNumerator above maximum.....	301
F2229265, RatioDenominator below minimum.....	301
F2229266, RatioDenominator above maximum.....	302
F2229267, MasterFineAdjust below minimum.....	302
F2229268, MasterFineAdjust above maximum.....	302
F2229269, Invalid SyncMode.....	302
F2229270, Invalid StartMode.....	302
F2229271, Cam distance below minimum value.....	303
F2229272, Cam distance above maximum value.....	303
F2229273, Command rejected while 'Parameter Mode'.....	303
F2229274, Axis not referenced.....	303
F2229275, Command aborted.....	303
F2229276, Control error.....	304
F2229277, Direct master axis change.....	304
F2229278, Disabled axis.....	304
F2229279, Command 'parking axis' active.....	304
F2229280, Command rejected while 'Coordinated Motion'.....	304
F2229281, Invalid float data.....	305
F2229282, MotionProfile, SetSelection below minimum value.....	305
F2229283, MotionProfile, SetSelection above maximum value.....	305
F2229284, Cam table is write-protected.....	305
F2229285, CAM table, usage counter out of range.....	305
F2229286, Choice relative positioning above max. value.....	305
F2229287, Can not assign axis to kinematics.....	306
F2229296, Absolute entry point in FlexProfile not found.....	306
F2229297, Absolute entry in FlexProfile not possible.....	306
F2229298, Master velocity of FlexProfile is negative.....	306
F2229300, Invalid command channel.....	306
F2229301, Command rejected while 'Controlled Motion'.....	307
F2229310, Error in calculation of FlexProfile step.....	307

Table of Contents

	Page
F2229311, FlexProfile: Invalid switching position.....	307
F2229312, FlexProfile: Invalid FlexProfile startmode.....	307
F2229313, FlexProfile: Invalid FlexProfile slave axis offset.....	307
F2229314, Sum of dist. not 0 or mod. value, cyclic exec. not pos.....	308
F2229315, Invalid FlexProfile: Execution not possible.....	308
F2229335, FlexProfile: Set is write-protected.....	308
F2229336, FlexProfile: Invalid step number.....	308
F2229337, FlexProfile: Set number out of range.....	308
F2229338, ChangeFlexProfile: Invalid nominal master velocity.....	308
F2229339, ChangeFlexProfile: invalid operation mode.....	308
F2229341, FlexEvent: Set is write-protected.....	309
F2229342, FlexEvent: Set number out of range.....	309
F2229347, FlexProfile: Invalid. Single execution not possible.....	309
F2229348, FlexProfile: Invalid. Cyclic execution not possible.....	309
F2229351, Synchronisation velocity below minimum.....	310
F2229352, Synchronisation velocity above maximum.....	310
F2229353, Synchronisation acceleration below minimum.....	310
F2229354, Synchronisation acceleration above maximum.....	310
F2229359, FlexProfile: Invalid master axis offset.....	311
F2229360, Command rejected while 'Controlled Motion'.....	311
F2229361, Command not supported by axis (Configuration).....	311
F2229362, Command not supported by axis (Functional Package).....	311
F2229363, MotionProfile invalid.....	312
F2229364, Axis not in standstill.....	312
F2299400, General kinematics error.....	312
F2299401, Invalid control number.....	312
F2299402, Invalid kinematics number.....	312
F2299403, Invalid command type.....	312
F2299404, Command not supported by kinematics.....	312
F2299405, Command rejected while 'StandStill Incomplete'.....	312
F2299406, Command rejected while 'Program Stopping'.....	312
F2299407, Command rejected while 'StandStill Complete'.....	313
F2299408, Invalid command number.....	313
F2299409, Command not supported in this state.....	313
F229940A, Command rejected while 'Group Moving'.....	313
F229940B, Command rejected while 'Configuration'.....	313
F229940C, Command rejected while 'Stopping'.....	313
F2299410, Reset still 'ErrorStop'.....	313
F2299411, Command rejected while 'Program Running'.....	313
F2299412, Error while selecting RCL program.....	314
F2299413, Command rejected while 'Parameter Mode'.....	314
F2299414, Command rejected while 'ErrorStop'.....	314
F2299415, Command aborted.....	314
F2299416, Switching to 'StandStill' not possible.....	314
F2299417, RCL process does not exist.....	314
F2299501, Two PLC-MotionCommands per motion cycle not allowed.....	314

Table of Contents

	Page
F2299502, Command rejected - buffer full.....	314
F2299503, Invalid motion command.....	314
F2299505, Synchronisation to more than one belt not possible.....	314
F2299506, Slope type is not supported.....	315
F2299507, Invalid set mode.....	315
F2299508, Invalid coordinate system.....	315
F2299509, Belt config not allowed temporary.....	315
F2299510, Belt not configured.....	315
F2299511, Belt synchronization error.....	315
F2299512, Invalid belt synchronisation mode.....	315
F2299513, Bad belt error reaction mode.....	315
F2299514, Belt begin length invalid.....	315
F2299515, Belt begin length greater total length.....	315
F2299516, Wrong PCS index.....	316
F2299517, Wrong CS selected.....	316
F2299518, The TCP is not within belt working area.....	316
F2299532, Values for relative desynchronisation invalid.....	316
F2299533, Command buffer full.....	316
F2299534, Transformation did not supported freedom degree.....	316
F2299537, Invalid modulovalue.....	316
F229953B, Linear belt not translatory.....	316
F229953C, Cylindric belt not rotatory.....	317
F229953D, Kinematic excessive position command difference.....	317
F229953E, Target point of movement outside ACS travel limits.....	317
F229953F, Target point of movement outside MCS travel limits.....	317
F2299540, Target point of movement in safe zone 0.....	317
F2299541, Target point of movement in safe zone 1.....	317
F2299542, Target point of movement in safe zone 2.....	317
F2299543, Target point of movement in safe zone 3.....	317
F2299544, Target point of movement in safe zone 4.....	318
F2299545, Target point of movement in safe zone 5.....	318
F2299546, Target point of movement in safe zone 6.....	318
F2299547, Target point of movement in safe zone 7.....	318
F2299548, Target point of movement in safe zone 8.....	318
F2299549, Target point of movement in safe zone 9.....	318
F229954A, Target point of movement in safe zone 10.....	318
F229954B, Target point of movement in safe zone 11.....	318
F229954C, Target point of movement in safe zone 12.....	318
F229954D, Target point of movement in safe zone 13.....	319
F229954E, Target point of movement in safe zone 14.....	319
F229954F, Target point of movement in safe zone 15.....	319
F2299550, Target point of movement in safe zone 16.....	319
F2299551, Target point of movement in safe zone 17.....	319
F2299552, Target point of movement in safe zone 18.....	319
F2299553, Target point of movement in safe zone 19.....	319
F2299554, Target point of movement in safe zone 20.....	319

Table of Contents

	Page
F2299555, Target point of movement in safe zone 21.....	319
F2299556, Target point of movement in safe zone 22.....	319
F2299557, Target point of movement in safe zone 23.....	320
F2299558, Target point of movement in safe zone 24.....	320
F2299559, Target point of movement in safe zone 25.....	320
F229955A, Target point of movement in safe zone 26.....	320
F229955B, Target point of movement in safe zone 27.....	320
F229955C, Target point of movement in safe zone 28.....	320
F229955D, Target point of movement in safe zone 29.....	320
F229955E, Target point of movement in safe zone 30.....	320
F229955F, Target point of movement in safe zone 31.....	320
F2299560, Path of movement through safe zone 0.....	320
F2299561, Path of movement through safe zone 1.....	321
F2299562, Path of movement through safe zone 2.....	321
F2299563, Path of movement through safe zone 3.....	321
F2299564, Path of movement through safe zone 4.....	321
F2299565, Path of movement through safe zone 5.....	321
F2299566, Path of movement through safe zone 6.....	321
F2299567, Path of movement through safe zone 7.....	321
F2299568, Path of movement through safe zone 8.....	321
F2299569, Path of movement through safe zone 9.....	321
F229956A, Path of movement through safe zone 10.....	321
F229956B, Path of movement through safe zone 11.....	321
F229956C, Path of movement through safe zone 12.....	321
F229956D, Path of movement through safe zone 13.....	322
F229956E, Path of movement through safe zone 14.....	322
F229956F, Path of movement through safe zone 15.....	322
F2299570, Path of movement through safe zone 16.....	322
F2299571, Path of movement through safe zone 17.....	322
F2299572, Path of movement through safe zone 18.....	322
F2299573, Path of movement through safe zone 19.....	322
F2299574, Path of movement through safe zone 20.....	322
F2299575, Path of movement through safe zone 21.....	322
F2299576, Path of movement through safe zone 22.....	322
F2299577, Path of movement through safe zone 23.....	322
F2299578, Path of movement through safe zone 24.....	322
F2299579, Path of movement through safe zone 25.....	322
F229957A, Path of movement through safe zone 26.....	323
F229957B, Path of movement through safe zone 27.....	323
F229957C, Path of movement through safe zone 28.....	323
F229957D, Path of movement through safe zone 29.....	323
F229957E, Path of movement through safe zone 20.....	323
F229957F, Path of movement through safe zone 31.....	323
F2299580, Invalid error reaction.....	323
F22B0003, Kinematics does not exist.....	323
F22B0010, Error while internal converting RoCo Parameter.....	323

Table of Contents

	Page
F22B0011, Error while int. conv. RoCo Parameter in conv. phase 0.....	324
F22B0012, Error while int. conv. RoCo Parameter in conv. phase 1.....	324
F22B0013, Error while int. conv. RoCo Parameter in conv. phase 2.....	324
F22B0014, Error while int. conv. RoCo Parameter in conv. phase 3.....	324
F22B0015, Error while int. conv. RoCo Parameter in conv. phase 4.....	324
F22B0016, Error while int. conv. RoCo Parameter in conv. phase 5.....	324
F22B0020, Transformation does not exist.....	324
F22B0021, Axis angles out of definition range.....	324
F22B0022, Point can not reached by transformation.....	325
F22B0023, In saved range of transformation.....	325
F22B0024, Axis has wrong scaling for transformation.....	325
F22B0025, Too less axes for Transformation.....	325
F22B0026, Safe zone did not exist.....	325
F22B0027, Type of safe zone did not exist.....	325
F22E0000, Drive error (generic axis).....	325
F2350066, Axis list in K-0-0008 not completed.....	325
F2350071, Gantry-Error: Maximum lag exceeded.....	325
3.1.8 F5 Errors, Control Errors.....	326
F5 Errors, Error Reaction.....	326
F50B0002, sercos communication interrupted.....	326
F50B0010, Hardware failure.....	326
F50B0011, sercos device not compatible.....	326
F50D2000, Forced stop activated.....	326
F5113002, Velocity too high for cycletime.....	326
F5180001, Invalid master axes combination.....	327
F5180005, Motion kernel exceeded control cycle time.....	327
F5180006, Calculation of actual values exceeded cycle time.....	327
F5300001, Over-temperature.....	328
F5300002, Power failure.....	328
F5300100, RTOS error on PLS FM.....	329
F536000E, MLPI: Watchdog error.....	329
3.1.9 F8 Errors, Fatal Control Error.....	329
F8 Errors, Error Reaction.....	329
F80B0004, Double AT missing.....	329
F80B0015, RTOS error (Real Time Operating System).....	330
F80B0016, AT-Data not valid.....	330
F80B0017, Consumer connection failure.....	330
F80B0018, Producer Connection failure.....	330
F80B0019, Consumer connection timeout.....	330
F80B0162, Internal control error.....	331
F80B0163, Internal control error.....	331
F8200023, Critical temperatur reached, processor will stop.....	331
3.1.10 F9 errors, fatal system error.....	332
F9 errors, error reaction.....	332
F9010001, Default object on wrong address.....	332
F9010002, Memory allocation error, no memory available.....	332

Table of Contents

	Page
F9010003, Invalid function pointer.....	332
F90B0012, sercos interface watch dog occurred.....	332
F90B0020 up to F90B0028, RTOS Error (Real Time Operating System)	332
F90B0029, DRI, upload of firmware into des CFL01.1-Q2-FPGA failed.....	333
F90B0030 up to F90B0124, RTOS Error (Real Time Operating System)	333
F90D1021, Error ReadParameter, no memory available.....	333
F90D1023, Error WriteParameter.....	333
F90D1024, Error WriteParameter, no memory available.....	333
F90D1032, No access to axes (1).....	333
F90D1033, No access to axes (2).....	333
F90D1038, Error getting MessageQueue.....	334
F90D1039, Thread could not be started.....	334
F90D103A, Left endless While-Loop.....	334
F90D103D, Error during initialization of PLC.....	334
F90D1204, Error, no memory available.....	334
F90D1209, Error, no memory available.....	334
F9180002, Maximum number of axes exceeded.....	334
F9180003, Axis registration invalid.....	334
F9180004, Invalid mode change requested.....	335
F9200016, PLC watchdog expired.....	335
F9200017, Hardware watchdog expired.....	335
F9200020, MK1 watchdog expired.....	335
F9200021, MK2 watchdog expired.....	335
F9200034, No free memory (RAM) available.....	335
F9200035, No free remanent memory (NVRAM) available.....	336
F9220001, Invalid error reaction.....	336
F9220002, Error in the axis state machine.....	336
F9240001, Exception, Divide Error.....	336
F9240002, Exception, Invalid Opcode.....	336
F9240003, Exception, Stack Fault.....	336
F9240004, Exception, General Protection Fault.....	337
F9240005, Exception, Page Fault.....	337
F9240006, Exception, Coprocessor Error.....	337
F9240007, Exception, Unknown Exception.....	337
F9240020, Timeout while sending the message queue.....	337
F9240021, Timeout while receiving the message queue.....	337
F9240022, No free buffer space to send a message.....	337
F9240023, No free buffer space to receive a message.....	338
F9240024, Error while sending the message queue.....	338
F9240025, Error while receiving the message queue.....	338
F9240026, Error response not possible.....	338
F9299519, JCS not set.....	338
F929951A, BCS not set.....	338
F929951B, WCS not set.....	338
F929951C, PCS not set.....	338
F929951D, Trafo manager not set.....	339

Table of Contents

	Page
F929951E, Preshape execute error.....	339
F929951F, Shape execute error.....	339
F9299520, Postshape execute error.....	339
F9299521, Move not allowed for this cmd.....	339
F9299522, No robot set.....	339
F9299523, Belt no time set.....	339
F9299524, Desync init failed.....	339
F9299525, Ipo cycle time zero.....	339
F9299526, Ipo distance below zero.....	339
F9299527, Ipo too much elements.....	340
F92C0003, Fatal transformation error.....	340
F92C0007, Inadmissible change of coordinate system.....	340
F92C0023, HEAP-Overflow.....	340
F92C0028, Invalid interpolation type.....	340
F92C0079, Invalid Robot Control configuration.....	340
F92C007D, Invalid init mode.....	340
F92C00CC, Error in task suspend.....	340
F92C00CD, Error in usertask suspend.....	340
F92C00D4, Error in PARALLEL_END.....	341
F92C00DD, Device-I/O: Exclusive access could not be secured.....	341
F92C00DE, Device-I/O: Error in exclusive access.....	341
F92C00E0, File chain not sequential.....	341
F92C00E1, Error in file management.....	341
F92C00E2, File management error in file-I/O.....	341
F92C00E3, File management error in organization block.....	341
F92C00E4, File management error in file chain.....	341
F92C00E7, Invalid write access (end of file).....	341
F92C00E8, Invalid write access (destination address too large).....	342
F92C00E9, End of file exceeded.....	342
F92C00EB, Invalid file read mode.....	342
F92C00EC, Invalid file open mode.....	342
F92C00ED, Allocation error.....	342
F92C00EE, Wrong file open mode for Allocation.....	342
F92C00F0, Wrong control mode for file list.....	342
F92C00F1, Wrong control mode for file close.....	342
F92C00F4, File chain not sequential.....	342
F92C0314, File management error in organization block.....	343
F92C0318, Wrong block status of file.....	343
F92C0319, File not sequential.....	343
F92C043E, Wrong absolute address in IRD-programm.....	343
F92C0456, Fatal error: In PKT file.....	343
F92C0ED8, Fatal file administration error: File not open.....	343
F92C0ED9, Fatal file administration error: File not open.....	343
F92C0EDA, Fatal file administration error: File not open.....	343
F92C0EDB, Fatal file administration error: File not open.....	344
F92C0EDC, Fatal file administration error: File not open.....	344

Table of Contents

	Page
F92C0EDD, Fatal file administration error: File not open.....	344
F92C0EDE, Fatal file administration error: File not open.....	344
F92C0EDF, Fatal file administration error: File not open.....	344
F92C0EE0, Fatal file administration error: File compressing.....	344
F92C0EE1, Fatal file administration error: Search file.....	344
F92C0EE2, Fatal file administration error: Wrong file attribute.....	344
F92C0EE3, Fatal file administration error: Illegal block.....	345
F92C0EE4, Fatal file administration error: File search.....	345
F92C0EE5, Fatal file administration error: File open.....	345
F92C0EE6, Fatal file administration error: File search.....	345
F92C0EE7, Fatal file administration error: File read.....	345
F92C0EE8, Fatal file administration error: File open.....	345
F92C0EE9, Fatal file administration error.....	345
F9301000, Error while loading the PLS-Firmware.....	345
F93C0001, Exception at parsing of XML configuration.....	346
3.2 sercos Errors of the XLC/MLC.....	346
3.2.1 General Information on sercos Errors.....	346
3.2.2 F0 Errors, Non-Fatal Errors.....	346
F02D0000, sercos: No error in the service channel.....	346
F02D0001, sercos: Service channel not open.....	346
F02D0003, Max. count of parallel parameter requests exceeded.....	346
F02D0007, Parameter access to remote control not allowed.....	346
F02D0008, DSH-Message Index out of Range.....	346
F02D0009, sercos: Invalid access to closing the service channel.....	346
F02D00A0, sercos: Parameter service channel is not open.....	347
F02D00B0, sercos: Parameter element does not exist.....	347
F02D00C0, sercos: Selected drive does not exist.....	347
F02D1001, sercos: No IDN.....	347
F02D1009, sercos: Invalid access to element 1.....	347
F02D2001, sercos: No name.....	348
F02D2002, sercos: Name transmission too short.....	348
F02D2003, sercos: Name transmission too long.....	348
F02D2004, sercos: Name cannot be changed (read only).....	348
F02D2005, sercos: Name is write-protected at this time.....	348
F02D3002, sercos: Attribute transmission too short.....	348
F02D3003, sercos: Attribute transmission too long.....	348
F02D3004, sercos: Attribute cannot be changed (read only).....	348
F02D3005, sercos: Attribute is write-protected at this time.....	348
F02D4001, sercos: No units.....	348
F02D4002, sercos: Unit transmission too short.....	349
F02D4003, sercos: Unit transmission too long.....	349
F02D4004, sercos: Unit cannot be changed (read only).....	349
F02D4005, sercos: Unit is write-protected at this time.....	349
F02D5001, sercos: No minimum input value.....	349
F02D5002, sercos: Min. input value transmission too short.....	349
F02D5003, sercos: Min. input value transmission too long.....	349

Table of Contents

	Page
F02D5004, sercos: Min. input value cannot be changed (read only).....	349
F02D5005, sercos: Min. input value is write-protected at this time.....	349
F02D6001, sercos: No maximum input value.....	349
F02D6002, sercos: Max. input value transmission too short.....	350
F02D6003, sercos: Max. input value transmission too long.....	350
F02D6004, sercos: Max. input value cannot be changed (read only).....	350
F02D6005, sercos: Max. input value is write-protected at this time.....	350
F02D7001, sercos: No operation data.....	350
F02D7002, sercos: Operation data transmission too short.....	350
F02D7003, sercos: Operation data transmission too long.....	350
F02D7004, sercos: Operation data cannot be changed (read only).....	350
F02D7005, sercos: Operation data is write-protected at this time.....	350
F02D7006, sercos: Operation data is smaller than the min input value.....	350
F02D7007, sercos: Operation data is greater than the max input value.....	351
F02D7008, sercos: Invalid operation data.....	351
F02D7009, sercos: Operation data write-protected by a password.....	351
F02D700A, sercos: Operation data is write-protected (cycl. conf).....	351
F02D700B, sercos: Invalid indirect addr., (data container, list).....	351
F02D700C, sercos: Operation data is write-protected (other settings).....	351
F02D700D, sercos: Invalid floating point number.....	351
F02D700E, sercos: Reserved.....	351
F02D700F, sercos: Operation data is write-protected at OM.....	351
F02D7010, sercos: Procedure command already active.....	351
F02D7011, sercos: Procedure command not interruptible.....	352
F02D7012, sercos: Procedure command at this time not executable.....	352
F02D7013, sercos: Procedure command not executable.....	352
F02D710C, sercos: Data exceed maximal range.....	352
F02D8001, sercos: Access temporary not possible.....	352
F02D8096, sercos: Device deactivated.....	352
F02D8097, sercos: Device does not exist.....	352
 4 Service and support.....	 353
 Index.....	 355