

8.2 Type code 2AD184

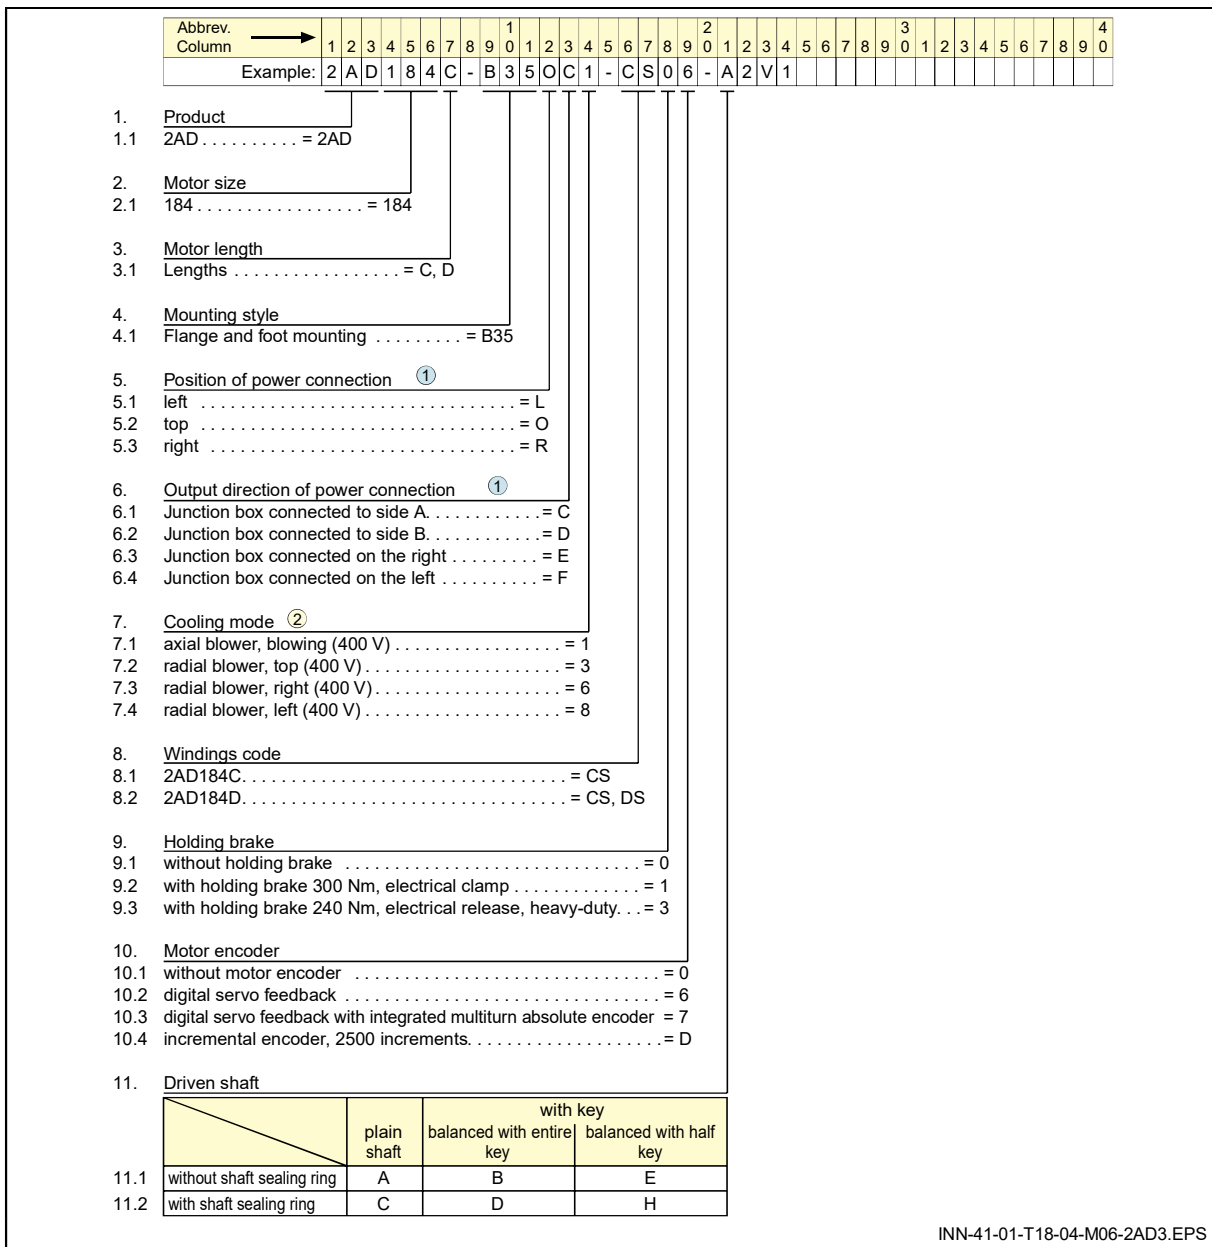


Fig. 8-2: 2AD184 Type code (1)

Abbrev. Column	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
Example:	2	A	D	1	8	4	C	-	B	3	5	0	C	1	-	C	S	0	6	-	A	2	V	1																	


12. Shaft end side B
 12.1 without shaft end side B = 2

13. Bearing
 13.1 Standard = N
 13.2 heavy-duty bearing = V

14. Vibration severity grade
 14.1 R = 1
 14.2 S = 2
 14.3 S1 = 3 ③

Note:
 ① Looking from front onto driven shaft (see picture 1)
 ② Cooling mode "radial blower": the position of the blower may not be that of the power connection
 ③ Vibration severity grade "3" is not available with bearings "V"

Illustration example: 2AD184

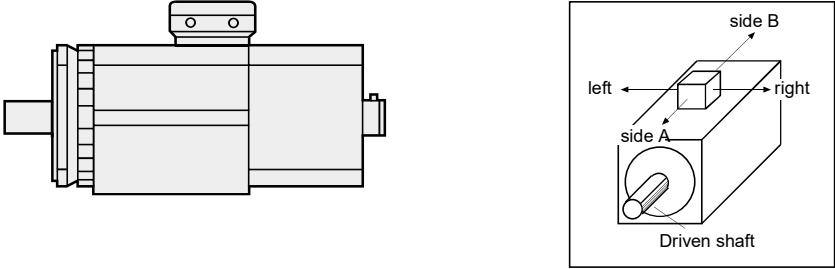

Picture

INN-41-01-T18-04-M06-2AD4.EPS

Fig. 8-3: 2AD184 Type code (2)

Note:

- Detailed explanations of individual options are contained in Chapter 4 "Definitions".
- Check that the individual options are available before ordering from your BOSCH REXROTH sales representative.