

9.2 Type code 2AD200

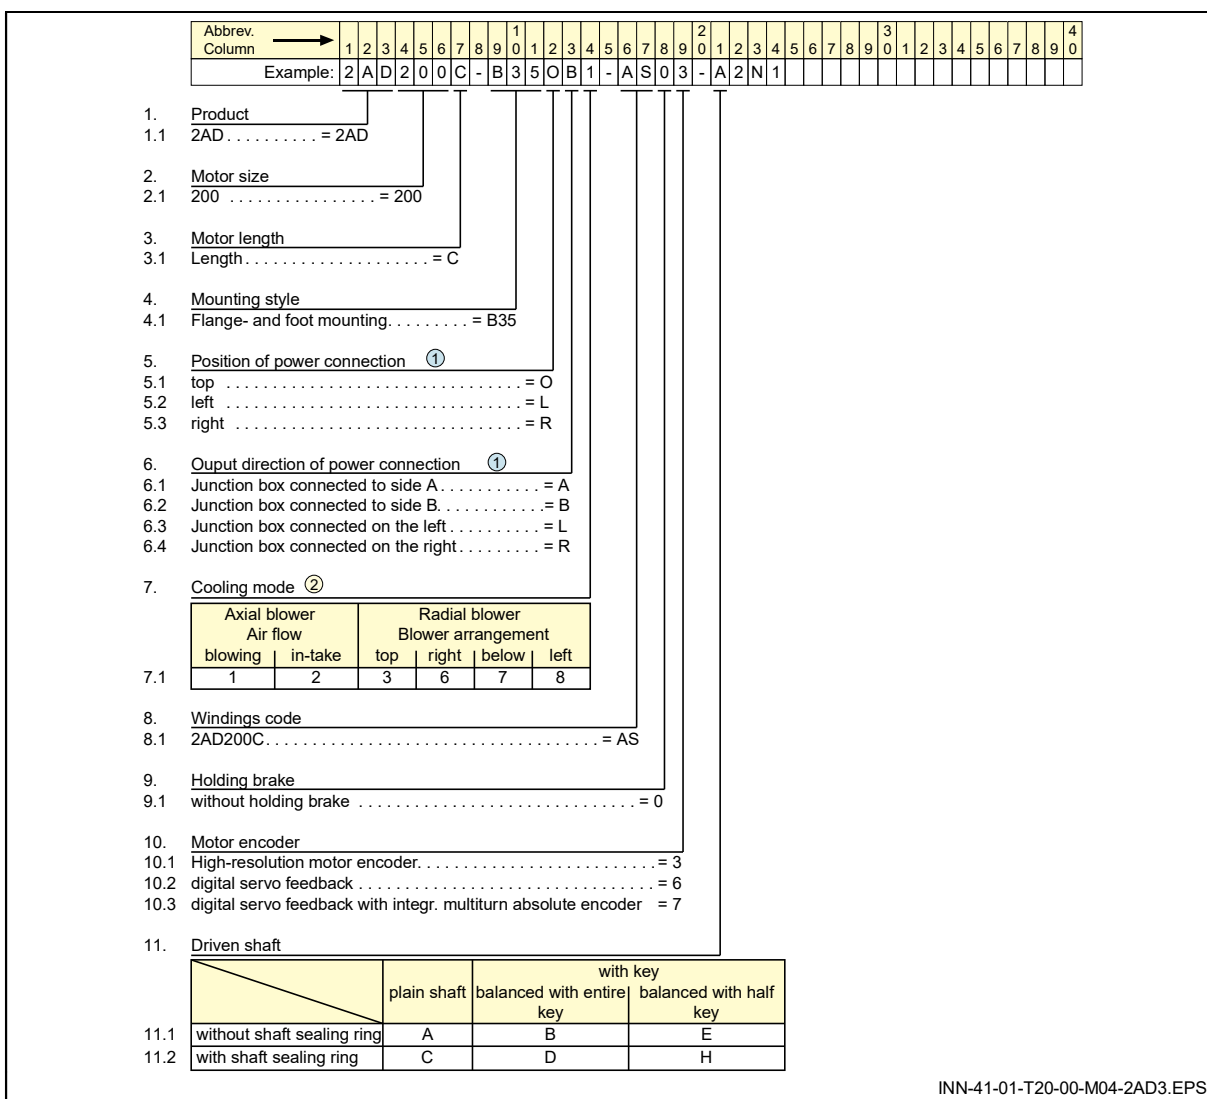 


Fig. 9-2: 2AD200 Type code (1)

Abbrev.	Column	1	2	3	4	5	6	7	8	9	1	2	3	4	5	6	7	8	9	2	0	1	2	3	4	5	6	7	8	9	3	0	1	2	3	4	5	6	7	8	9	4			
Example:		2	A	D	2	0	0	C	-	B	3	5	O	B	1	-	A	S	0	3	-	A	2	N	1																				

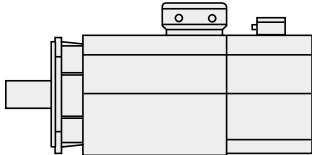 
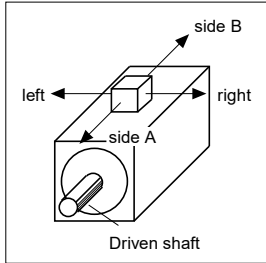 
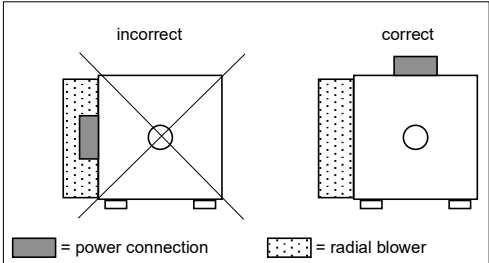 
12. Shaft end side B
12.1 without shaft end side B. = 2

13. Bearings
13.1 Standard = N
13.2 heavy-duty bearings = V

14. Vibration severity grade
14.1 R = 1
14.2 S = 2
14.3 S1 = 3 ③

Note:
 ① Looking from front onto driven shaft (see picture 1)
 ② with cooling mode "Radial blower": the blower position may not be the same as that of the power connection (see picture 2)
 ③ Vibration severity grade "3" is not available with bearings "V"

Illustration example: 2AD200

Picture 1

Picture 2

INN-41-01-T20-00-M04-2AD4.EPS

Fig. 9-3: 2AD200 Type code (2)

Note:

- Detailed explanations of individual options are contained in Chapter 4 "Definitions".
- Check that the individual options are available before ordering from your BOSCH REXROTH sales representative.