

6.2 Type Code ADF134

Abbrev. Column

→

1

2

3

4

5

6

7

8

9

0

1

2

3

4

5

6

7

8

9

0

1

2

3

4

5

6

7

8

9

0

1

2

3

4

5

6

7

8

9

0

Example:

A

D

F

1

3

4

C

-

B

0

5

T

C

3

-

B

S

0

0

-

C

2

V

1

Fig. 6-2: ADF134 Type Code (1)

Abbrev. Column	1	2	3	4	5	6	7	8	9	1	2	3	4	5	6	7	8	9	2	0	1	2	3	4	5	6	7	8	9	3	0	1	2	3	4	5	6	7	8	9	4	0	
Example:	A	D	F	1	3	4	C	-	B	0	5	T	C	3	-	B	S	0	0	-	C	2	V	1																			

12. Shaft end side B

12.1 without shaft end side B = 2

13. Bearings

13.1 high-speed bearing = H

13.2 Standard = N

13.3 heavy-duty bearing = V

14. Vibration severity grade

14.1 R = 1

14.2 S = 2

14.3 S1 = 3 ③

Note:

① Mounting style "B05" is only available with output direction of power connection "T"

② Looking from front onto driven shaft

③ Vibration severity grade "3" is not available with bearing "V"

Adf134Typecode2.FH7

Fig. 6-3: ADF134 Type Code (2)

Note:

- Detailed explanations of individual options are contained in the chapter "Application Instructions".
- Check that the individual options are available before ordering from your Rexroth Indramat sales representative.