

7.2 Type Code ADF164

[illegible]

Fig. 7-2: ADF164 Type Code (1)

Abbrev. Column																																											
	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0			
Example:	A	D	F	1	6	4	B	-	B	0	5	T	C	3	-	A	S	0	7	-	A	2	N	1																			

13. Bearings

13.1 Standard = N

13.2 heavy-duty bearing = V③

14. Vibration severity grade

14.1 R = 1

14.2 S = 2

14.3 S1 = 3③

Note:

① Looking from front onto driven shaft

② Mounting style "B05" is only available with power connection "T"

③ Bearings "V" with vibration severity grade "3" not available

ADF164Typecode2,FH7

Fig. 7-3: ADF164 Type Code (2)

Note:

- Detailed explanations of individual options are contained in the chapter "Application Instructions".
- Check that the individual options are available before ordering from your Rexroth Indramat sales representative.