

6.3 BASIC Control Sections

Type Codes BASIC and BASIC UNIVERSAL

Type Code BASIC CSB01.1N

[illegible]

Fig. 6-3: Type code control section BASIC (single-axis); (to be continued on next page)

Abbrev.	Column	1	2	3	4	5	6	7	8	9	1	2	3	4	5	6	7	8	9	2	0	1	2	3	4	5	6	7	8	9	3	0	1	2	3	4	5	6	7	8	9	4	0	
Example:		C	S	B	0	1	.	1	N	-	S	E	-	E	N	S	-	N	N	N	-	N	N	-	S	-	N	N	-	F	W													

10. **Other design**

10.1 none = NN

11. **Firmware**

11.1 Denotes that firmware must be ordered as separate subposition. = FW

Note:

- ① only available if configuration option "N"
- ② only available if configuration option "C"
- ③ not available if master communication "FC"
- ④ only available for master communication "FC"

Illustration example: CSB01.1

DT000010v01_en.FH1*

Fig. 6-4: Type code control section BASIC (single-axis); (continuation)

Type Code BASIC UNIVERSAL Single-Axis CSB01.1C

see type code BASIC CSB01.1N